



C2-2855

User Manual

V1.03

CONTENTS

Contents

1	DISCLAIMER.....	5
	Regulatory Agency Acceptance.....	5
	European 'CE' Mark Statement.....	5
	FCC Statement.....	5
	Manual Copyright Notice.....	6
2	SAFETY INSTRUCTIONS.....	7
3	UNPACKING AND INSTALLATION.....	17
3.1	Shipping Carton.....	17
3.2	Important Safety Instructions.....	17
3.3	Initial Operation Check Using Factory Default Settings.....	17
4	QUICK START.....	18
4.1	Overview.....	18
4.2	Box Contents.....	18
4.3	C2-2855 Connections.....	18
4.4	Menu Overview.....	19
4.5	Setting an Output Resolution.....	19
4.6	Switching.....	19
4.7	C2-2855 Architecture.....	19
4.8	Inputs/Outputs.....	20
4.8.1	Universal DVI.....	20
5	PANEL INTERFACE.....	21
5.1	Panel Overview.....	21
5.2	Using the C2-2855.....	21
5.3	OLED Panel Overview.....	22
5.4	Foreground/Background Indicators.....	22
6	MENU OVERVIEW.....	23
6.1	Layering Control.....	23
6.2	Swapping Layers.....	24
6.3	Genlock & Framelock & Hiding.....	24
6.4	Scaling Overview.....	25
6.5	Aspect Ratio Conversion.....	25
6.6	Importing Logos.....	26
6.7	Importing Still Image Store Items.....	26
7	BUTTON NAVIGATION.....	27
7.1.1	Powering Up.....	27
7.1.2	Button Colors.....	27
7.1.3	Menu Navigation.....	27
7.1.4	Source Selection & Loading Presets.....	27
7.1.5	Other Useful Selections.....	29
8	SHORTCUT & LIVE MENUS.....	30
8.1	Overview.....	30
8.2	Shortcuts & Live Menu Map.....	31
8.2.1	Shortcuts.....	31
8.2.2	Live Menu.....	32
8.2.3	Primary.....	32
8.3	Background.....	32
8.4	Audio.....	33
8.5	Layer Order.....	33

8.6	Keying	34
8.7	Freeze	34
8.8	Preset	34
8.9	Logo	34
8.10	Transition	34
9	POPULAR TASKS.....	35
9.1	Setting up Sources and Outputs.....	35
9.1.1	Source Setup	35
9.1.2	Output Set Up	35
9.2	Switching Sources	35
9.3	Customizing Transitions	36
9.4	Creating a picture in picture effect.....	36
9.4.1	Resizing the Primary Layer	36
9.4.2	Adding a Background	36
9.5	Adding a Color Field as a Background.....	37
9.6	Adding a Still Image as a Background.....	37
9.7	Adding a logo to a presentation	38
9.8	Creating a lower third.....	38
9.9	Using audio from alternative sources	39
10	SET UP MENU.....	40
10.1	Initial Set Up	40
10.2	Connections	40
10.2.1	HDMI	41
10.2.2	Universal DVI	42
10.2.3	3G/HD/SD-SDI	42
10.2.4	PC/HD	42
10.2.5	YC/CV.....	42
10.2.6	Audio Connections	43
10.2.7	Phoenix Audio	43
10.2.8	3.5mm Audio Input	43
10.3	Set Up Menu	44
10.3.1	Set Up Menu Map	44
10.3.2	System.....	44
10.3.3	Sources	45
10.3.4	Audio Source.....	45
10.3.5	Input Type	45
10.3.6	RGB Settings.....	46
10.3.7	YUV Settings	46
10.3.8	Aspect Ratio	46
10.3.9	Align.....	46
10.3.10	On Source Loss.....	46
10.3.11	De-Interlace	46
10.3.12	Diagonal Interpolate	47
10.3.13	Noise Reduction	47
10.3.14	Field Swap.....	47
10.3.15	Field Offset	47
10.3.16	Procamp	47
10.3.17	EDID	47
10.3.18	HDCP	48
10.4	Outputs	49
10.4.1	Connectors	49
10.4.2	Video	49
10.4.3	Audio	50
10.5	Preset	50
10.6	Layers	50
10.7	Back Color	50
10.8	Genlocking your unit.....	51
10.9	Layer Order.....	51

10.10	Keying.....	52
10.11	Presets.....	52
10.12	Transitions	52
11	TROUBLESHOOTING AND TECHNICAL SUPPORT	53
12	FREQUENTLY ASKED QUESTIONS.....	54
12.1	There is no picture on the Output.	54
12.2	There is excessive flicker on the Output.....	54
12.3	The Output image is distorted.	54
12.4	Some colors appear to be incorrect on the CV/YC output	54
12.5	How can I reduce color smearing on CV connections?.....	54
12.6	I can no longer adjust the Output image resolution.	54
12.7	The picture on the video display is black and white.	54
12.8	The picture on the video display is green.	54
12.9	The RGB input is selected but the image is rolling or pink.....	55
12.10	The video signal from my DVD player does not appear to work.....	55
12.11	Image is flashing, snow is present, or source image does not appear.....	55
13	RETURN PROCEDURE	56
13.1	Trouble Shooting	56
15.2	To return a unit for repair	56
14	WARRANTY POLICY	57
14.1	Limited Warranty.....	57
14.2	Limitations.....	57

1 Disclaimer

This product is intended for professional and/or home use. This product is not intended for use in a medical environment and does not have the required certifications for such use. Similarly, use aboard any aircraft or spacecraft while in flight or as an adjunct to any surface, airborne or marine navigation system or any offshore marine activity, including control of any watercraft, or any use similar to those specifically herein mentioned is prohibited. Use in the aforementioned circumstances would require additional testing and certification.

You have not become the owner of any software - you have merely purchased the right to use the software. You may make one copy of the software for your own use. Other copies will be deemed a breach of copyright.

No warranty is made either expressed or implied including but not limited to any implied warranties of merchantability or fitness for a particular purpose. In no event shall the supplier or manufacturer of this product be liable for errors found within, or be liable for any direct, indirect or consequential damages or loss in connection with the purchase or use of this hardware software or manual. The sole and exclusive liability to the supplier and manufacturer regardless of the form of action shall not exceed the replacement cost of the materials described herein.

By using this equipment you have indicated that you have agreed to the terms listed above. If you do not wish to agree or the above terms are contrary to your conditions of purchase you may return the equipment, unused, to your supplier. All trademarks and copyrights are acknowledged. E&OE.

Regulatory Agency Acceptance

European 'CE' Mark Statement

Emissions: BS EN 55103-1:2009+A1:2012 (Generic Emission Standard for all environments: E1-E5)

Immunity: BS EN 55103-2:2009 (Generic Immunity Standard for all environments: E1-E5)

FCC Statement

Class B Device: This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules. These limits are designed to provide a reasonable protection against harmful interference when the equipment is operated in all environments. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the Instruction Manual, may cause harmful interference to radio communications.

Caution: This equipment is intended for use in the manner prescribed in the Instruction Manual. Any user changes or modifications not expressly approved by tvONE Solutions could void the user's authority to operate the equipment. The Instruction Manual shows or describes the proper connection of this equipment for operation that insures FCC compliance.

tvONE



2791 Circleport Drive
Erlanger, KY 41018
USA

Phone: 859-282-7303
Fax: 859-282-8225
Email: tech.usa@tvone.com

Manual Copyright Notice

This Operation Manual is the intellectual property of tvONE, ©2014. No portion of this manual may be copied or reproduced in any manner or by any means, including, but not limited to electronic and electro-mechanical, without the express written permission of tvONE.

2 Safety Instructions

To insure the best from this product, please read this manual carefully. Keep it in a safe place for future reference.

To reduce the risk of electric shock, do not remove the cover from the unit. No user serviceable parts inside. Refer servicing to qualified personnel.

2.1 Power and connections

This unit is not disconnected from the AC power source as long as it is connected to the wall outlet. The off state for this unit is called standby mode. In standby mode the unit is designed to consume a reduced quantity of power compared to normal operating modes.

When not using the unit for a long period of time, insure that the AC power cord is disconnected from the wall outlet.

The AC wall outlet should be installed near to the unit and be easily accessible.

Do not plug in or attempt to operate an obviously damaged unit.

2.2 Water and moisture

To reduce the risk of fire and personal injury, operation of this device outdoors and/or exposure to rain, water or excessive moisture is expressly prohibited.

The apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.

2.3 General care

Do not force switches or external connections.

When moving the unit, disconnect the serial port connections first then the power cable and finally the interconnecting cables to other devices.

Do not attempt to clean the unit with chemical solvents or aerosol cleaners, as this may damage the unit. Use a clean dry cloth.

2.4 Location

Installation of this unit should be in a cool dry place, away from sources of excessive heat, vibration, dust, moisture and cold.



2.5 Ventilation

Slots and openings in the sides of the unit are provided for ventilation. To ensure reliable operation, avoid obstruction of these openings and ensure the unit is installed in a well-ventilated area.

2.6 Intellectual property

Some IC chips in this product include confidential and/or trade secret property. Therefore you may not copy, modify, adapt, translate, distribute, reverse engineer, reverse assemble or decompile the contents thereof.

2.0 IMPORTANT: CONSIGNES DE SECURITE

Afin de tirer le meilleur de ce produit, merci de lire attentivement ce manuel. Gardez-le dans un endroit sûr pour pouvoir le consulter à nouveau.

Afin de réduire le risque de choc électrique, ne retirez pas l'unité de sa protection.

Aucune pièce réparable par l'utilisateur à l'intérieur. Référez-vous à des personnes qualifiées.

2.1 Alimentation électrique et connexions

Cette unité n'est pas déconnectée de la source de courant électrique tant qu'elle est connectée à la prise murale. Le mode éteint de cette unité est appelé mode de veille. En mode de veille, cette unité est conçue pour consommer une quantité réduite de courant par rapport aux modes normaux d'utilisation.

Lorsque vous n'utilisez pas l'unité pendant une longue période, assurez-vous que le câble d'alimentation électrique est déconnecté de la prise murale.

La prise murale de courant doit être installée près de l'unité et aisément accessible.

Ne branchez pas et n'essayez pas d'utiliser une unité visiblement endommagée.

2.2 Eau et humidité

Pour réduire les risques d'incendie et de dommages corporels, l'utilisation de cet appareil à l'extérieur et/ou son exposition à la pluie, l'eau ou une humidité excessive est expressément interdite.

L'appareil ne doit pas être exposé aux gouttes ou aux éclaboussures et aucun objet contenant de l'eau, comme par exemple un vase, ne doit être posé sur l'appareil.

2.3 Entretien général

Ne forcez pas les boutons ou connexions externes.

Lorsque vous déplacez l'unité, déconnectez d'abord les connexions de ports en série puis le câble d'alimentation et enfin les câbles de connexion avec d'autres appareils. N'essayez pas de nettoyer l'unité avec des dissolvants chimiques ou des produits nettoyants en aérosol, car cela peut endommager l'unité. Utilisez un chiffon propre et sec.

2.4 Emplacement

L'installation de cette unité doit se faire dans un endroit frais et sec, éloigné de sources excessives de chaleur, de vibrations, de poussière, d'humidité et de froid.

2.5 Aération



Les rainures et les ouvertures sur les cotés de l'unité servent à l'aérer. Pour permettre une utilisation sûre, évitez d'obstruer ces ouvertures et assurez-vous que l'unité est installée dans un endroit bien aéré.

2.6 Propriété intellectuelle

Certaines puces IC dans ce produit contiennent des éléments propriétaires confidentiels et/ou des secrets commerciaux. Vous ne devez donc pas copier, modifier, adapter, traduire, distribuer, démonter, désassembler, ou décomposer leur contenu.

2.0 INSTRUCCIONES IMPORTANTES DE SEGURIDAD

Para sacar el mejor provecho de este producto, léase este manual con detenimiento. Guárdelo en un lugar seguro para poder hacerle referencia en el futuro.

Para reducir el riesgo de calambre, no quite la cubierta del aparato.

No hay piezas utilizables dentro. Remítase todo mantenimiento a personal cualificado.

2.1 Corriente y conexiones

Mientras esté conectada a una toma de electricidad, el aparato seguirá conectado a la fuente de corriente CA. A la posición de «off» de este aparato se le denomina posición de espera. En la posición de espera, el aparato está diseñado a consumir una cantidad reducida de electricidad en comparación con los modos de operación normales.

Asegúrese de desconectar el cable de corriente CA de la toma de la pared cuando no va a utilizar el aparato por un periodo largo de tiempo.

La toma CA de la pared ha de estar instalada cerca del aparato y debe ser fácilmente accesible.

No enchufe ni intente operar un aparato que esté evidentemente dañado.

2.2 Agua y humedad

Para reducir el riesgo de fuego o de daños personales, se prohíbe la utilización de este aparato en el exterior y/o su exposición a la lluvia, al agua o a atmósferas de excesiva humedad.

El aparato no debe situarse cerca de zonas en las que haya riesgo de goteo o salpicaduras. Tampoco deben colocarse objetos que contengan agua (jarrones, por ejemplo) en el mismo.

2.3 Cuidado general

No forzar interruptores o conexiones externas.

Al mover el aparato, desconecte las conexiones del puerto en serie primero, luego el cable de electricidad y finalmente los cables interconectados a otros aparatos.

No intente limpiar el aparato con disolventes químicos o productos de limpieza aerosol, ya que podrían dañar el aparato. Utiliza un paño limpio y seco.

2.4 Ubicación

Este aparato se debe instalar en un lugar seco y fresco, lejos de fuentes de calor excesivas, la vibración, el polvo, la humedad y el frío.

2.5 Ventilación

El aparato viene provisto de ranuras y agujeros en los lados para la ventilación.

Para asegurar una operación eficaz, se debe evitar la obstrucción de estos agujeros y también asegurar que el aparato se instale en una zona con adecuada ventilación.

2.6 Propiedad intelectual

Algunos chips con circuito integrado de este producto incluyen propiedad confidencial y/o propiedad de secreto comercial. Por lo tanto queda prohibido copiar, modificar, adaptar, traducir, distribuir, usar técnicas retroactivas, desmontar, o recopilar los contenidos del mismo.

2.0 WICHTIGE SICHERHEITSVORSCHRIFTEN

Lesen Sie diese Bedienungsanleitung bitte sorgfältig, um Ihr Produkt optimal nutzen zu können, und bewahren Sie sie zum späteren Nachschlagen an einem sicheren Ort auf.

Entfernen Sie bitte keinesfalls die Abdeckung, um der Gefahr eines Stromschlags vorzubeugen.

Im Inneren des Geräts befinden sich keine Teile, die vom Benutzer gewartet werden können. Lassen Sie Wartungsarbeiten nur von Fachpersonal durchführen.

2.1 Stromversorgung und anschlüsse

Solange das Gerät mit einer Steckdose verbunden ist, bleibt die Stromversorgung aufrecht. Der Ausschaltzustand des Geräts wird als Standbymodus bezeichnet. Im Standbymodus verbraucht das Gerät weniger Strom als in den üblichen Betriebsarten.

Wird das Gerät über einen längeren Zeitraum hinweg nicht verwendet, ziehen Sie bitte das Stromkabel aus der Steckdose.

Die Steckdose sollte sich in der Nähe des Geräts befinden und leicht zugänglich sein.

Verbinden Sie ein offensichtlich beschädigtes Gerät keinesfalls mit einer Steckdose und versuchen Sie auch nicht, es zu bedienen.

2.2 Wasser und feuchtigkeit

Um die Gefahr eines Brandes oder einer Körperverletzung zu verringern, ist es ausdrücklich verboten, dieses Gerät im Freien in Betrieb zu nehmen und/oder es Regen, Wasser oder hoher Feuchtigkeit auszusetzen.

Das Gerät darf keinen Tropfen oder Spritzern ausgesetzt werden und es dürfen keine mit Flüssigkeiten gefüllte Behälter, wie Vasen, auf das Gerät gestellt werden.

2.3 Allgemeine pflege

Wenden Sie bei der Handhabung von Schaltern und Anschlüssen keine Gewalt an.

Beim Umstellen des Geräts entfernen Sie zuerst die seriellen Anschlüsse, dann das Stromkabel und zum Schluss die Verbindungskabel zu anderen Geräten.

Versuchen Sie keinesfalls, das Gerät mit chemischen Lösungsmitteln oder Sprayreinigern zu reinigen, da dies das Gerät beschädigen könnte. Verwenden Sie ein sauberes, trockenes Tuch.

2.3 Aufstellung

Das Gerät sollte an einem kühlen, trockenen Ort aufgestellt werden, fern von übermäßiger Wärme, Vibrationen, Staub, Feuchtigkeit und Kälte.

2.5 Belüftung

Seitliche Schlitze und Öffnungen sorgen für die Belüftung des Geräts. Um die ordnungsgemäße Belüftung zu gewährleisten, dürfen diese Öffnungen nicht verdeckt werden. Sorgen Sie außerdem dafür, dass das Gerät an einem gut belüfteten Ort aufgestellt wird.

2.6 Gewerbliches Eigentum

Einige integrierte Schaltkreise in diesem Produkt enthalten vertrauliche

Informationen und/oder Betriebsgeheimnisse. Sie dürfen daher diese Inhalte nicht kopieren, modifizieren, adaptieren, übersetzen, verteilen, rückentwickeln, rückassemblieren oder dekompileieren.

2.0 BELANGRIJKE VEILIGHEIDSINSTRUCTIES

Lees deze handleiding zorgvuldig door om het beste uit uw product te halen. Bewaar het op een veilige plek voor raadpleging in de toekomst.

Haal nooit het omhulsel van de eenheid af, dit om de kans op een elektrische schok te verminderen. Maak het apparaat nooit open: er bevinden zich geen door de gebruiker in te stellen onderdelen in het apparaat. Laat service en onderhoud over aan een gekwalificeerde technicus.

2.1 Elektriciteit en aansluiting

Deze eenheid is niet van de wisselstroom voedingsbron gescheiden wanneer de stekker nog in het stopcontact zit. Wanneer de eenheid uitstaat, staat deze nog in de stand-by modus. In de stand-by modus vergt de eenheid minder stroom dan in de normale "aan" modus.

Wanneer u de eenheid voor langere tijd niet gebruikt, zorg er dan voor dat de stekker van het wisselstroomsnoer uit het stopcontact is getrokken.

Het wisselstroom stopcontact moet dichtbij de eenheid geïnstalleerd worden en makkelijk toegankelijk zijn.

Als de eenheid duidelijk beschadigd is moet u deze nooit op het lichtnet aansluiten of bedienen.

2.2 Water en vocht

Om het risico op brand en persoonlijk letsel te beperken is het gebruik van dit apparaat buiten en/of blootstelling aan regen, water of overdadige hoeveelheden vocht uitdrukkelijk verboden.

Het apparaat mag niet worden blootgesteld aan druppels of bespatting en er mogen geen objecten die gevuld zijn met vloeistoffen, zoals vazen, op het apparaat geplaatst worden.

2.3 Algemeen onderhoud

Forceer schakelaars of externe aansluitingen nooit.

Bij verplaatsing van de eenheid, de seriële poortaansluitingen eerst loskoppelen, dan de voedingskabel en als laatste de snoeren naar andere apparaten.

Probeer de eenheid nooit met chemische oplosmiddelen of schoonmaakmiddelen in een spuitbus schoon te maken, omdat dit de eenheid kan beschadigen. Gebruik een schone droge doek.

2.4 Plaatsing

Deze eenheid moet geïnstalleerd worden op een koele droge plaats, uit de buurt van bronnen van extreme hitte, vibraties, stof, vocht en kou.

2.5 Ventilatie

De sleuven en openingen aan de zijkant van de eenheid zijn voor ventilatie. Zorg er voor dat de eenheid op een goed geventileerde plek geïnstalleerd wordt zodat deze betrouwbaar werkt.

2.6 Intellectueel eigendom

Sommige IC chips in dit product bevatten vertrouwelijke informatie en/of fabrieksgeheimen. U mag daarom de inhoud hiervan niet kopiëren, wijzigen, aanpassen, vertalen, verspreiden, nabouwen, of decompileren

3 UNPACKING AND INSTALLATION

3.1 Shipping Carton

Your unit will arrive boxed with internal foam inserts for maximum protection during shipping. You are encouraged to retain the box and all packing material so the unit can be returned in the unlikely event that repairs should ever become necessary.

3.2 Important Safety Instructions

The AC power cable furnished with the unit should conform to the type in use in your country. Please compare the plug on your cable with the power socket where the unit will be installed.

If you did not receive the correct cable, **DO NOT** attempt to modify it. Instead, immediately contact your dealer or contact TV One at the sales office nearest to your geographic location and request the proper cable.

Installation should be made such that the system vents are not blocked by other pieces of equipment.

3.3 Initial Operation Check Using Factory Default Settings

This product can be operated via multiple methods, but for the purposes of initially acquainting you with the operation of the unit, this manual will address the operation using the front panel.

If you have problems using the unit as described below, see the 'Firmware Update' description.

4 Quick Start

4.1 Overview

Thank you for choosing tvONE.

The C2-2855 is a Six Input Universal Scaler/Switcher with an advanced user interface together with support for a Still Image Store and a Logo Layer.



The C2-2855 has six video inputs, 5 video outputs, together with audio in and out via Phoenix connectors and a 3.5mm Line Input.


4.2 Box Contents

1 x C2-2855 Universal Scaler PLUS
1 x 12V DC 3.3 amp Power Supply Unit and IEC Cable
1 x USB Pen Drive (Contains the user manual and software)
4 x Rubber Feet
1 x Safety Registration Sheet
1 x Product Registration Card

Please upgrade your C2-2855 with the latest software which can be downloaded from www.tvone.com/support.

4.3 C2-2855 Connections

To prepare your unit for first use, plug in the locking Power Supply and connect your inputs, outputs and (optional) control PC.

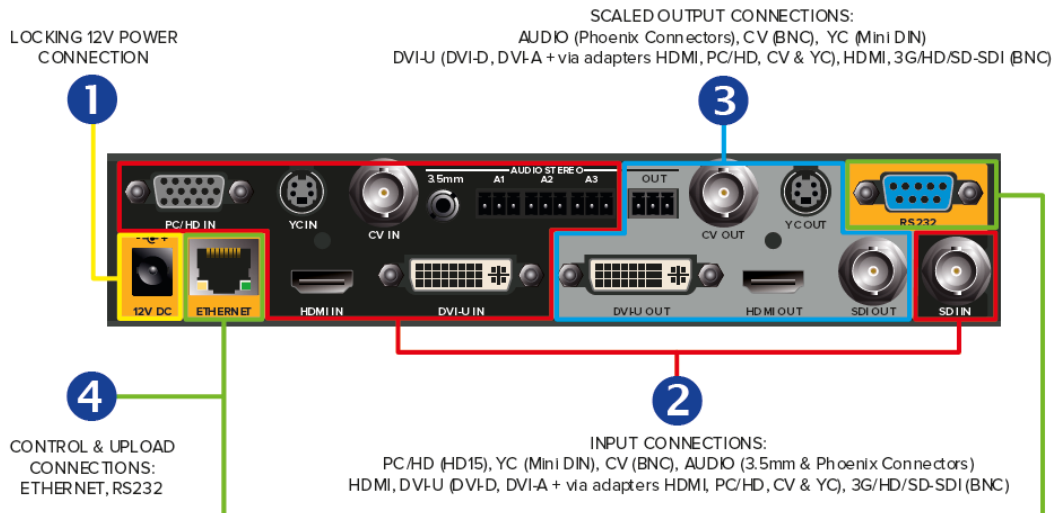

4.4 Menu Overview

The C2-2855 has three sets of menus:-

Live	Provides end user functionality	Presets, Source Switching
Shortcuts	Provides quick access to user settings	Picture In Picture (PIP) control, Keying, Freeze, Logo Selection, Source Selection, Audio Selection
Set Up	Used to configure the system settings	Inputs, Outputs, Layers, Presets and Transitions.

4.5 Setting an Output Resolution

It is possible to select between 71 Output Resolutions – to access the output resolution of your choice select it from the **Set Up/Output/Video/Resolution** menu.

4.6 Switching

In normal use the C2-2855 is controlled using Presets and Source Switching:-



Presets – Pressing the Preset front panel put the C2-2855 into Preset Mode. Then press the relevant buttons marked “1-6” to switch between the Presets.




Sources – Press the back arrow in any menu will take you to the top level menu on the OLED display. Then navigate to the **Live** menu then press the relevant buttons marked “1-6” to switch between the sources.



4.7 C2-2855 Architecture

The C2-2855 uses CORIO™ 2.5 technology at its core for control of Inputs, Outputs, Scaling, Layering, Audio Management, Still Image Store and Logo Layering.

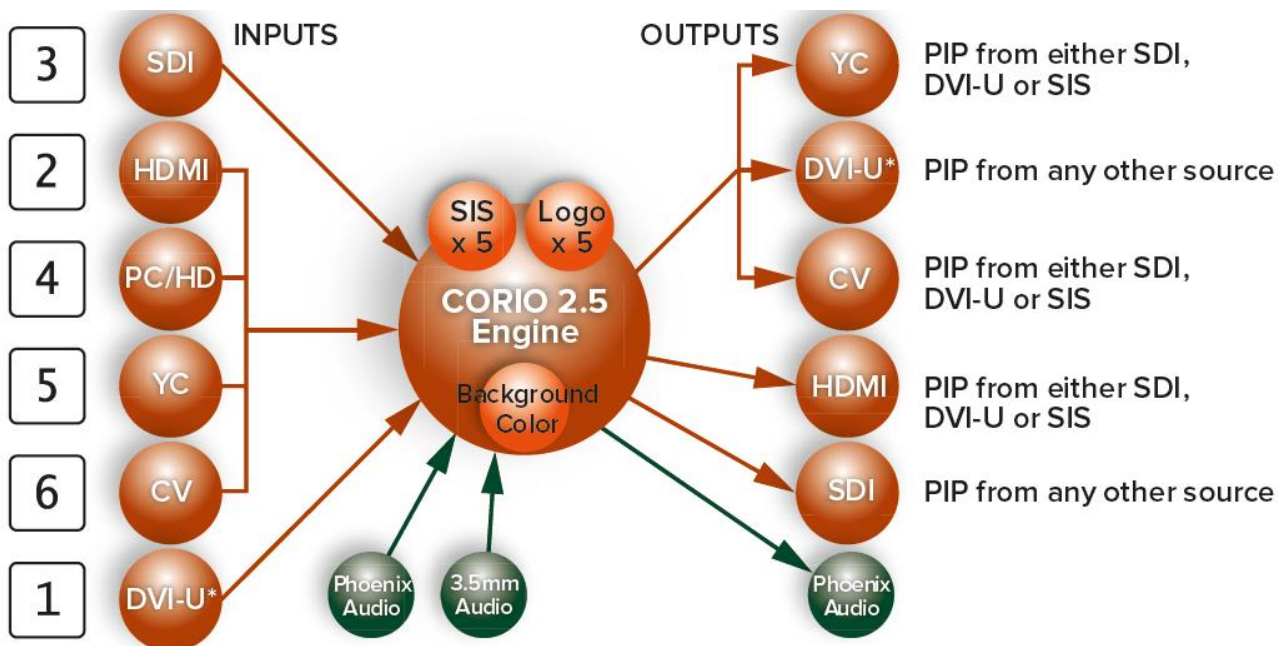

The six video inputs are spread across three gateways into the scaler together with three output gateways to manage the five video outputs. Using the Universal DVI (DVI-U) Input and Output additional connectivity is possible directly for DVI-D, DVI-A and via Dongle for HDMI, PC/HD, CV & YC connection.

Audio Input is possible via Phoenix Connectors (3 x stereo) and also via a 3.5mm Line Input (1 x Stereo). Audio Output is via Phoenix Connectors (1 x Stereo) or on any format supporting embedded audio (HDMI, DVI-D + SDI).

Within the CORO 2.5 Scaler it is possible to add Still Image Store and Logo Layers together with defining a Background Color.

4.8 Inputs/Outputs

	Input	Output	Remarks
HDMI	Yes	Yes	
Universal DVI	Yes	Yes	Natively for DVI-D, DVI-A & via Dongle for HDMI, PC/HD, CV & YC*
3G/HD/SD-SDI	Yes	Yes	BNC connector for Broadcast SDI
PC/HD	Yes	No	Connection using HD15 connectors
YC	Yes	Yes	Supports RGB, YUV & YPbPr
CV	Yes	Yes	
Phoenix Audio	Yes	Yes	3 Stereo inputs & 1 stereo output (centre pin is Ground)
3.5mm Audio	Yes	No	Stereo line in

* Supports RGB, YUV & YPbPr

4.8.1 Universal DVI

Universal DVI (DVI-U) is a tvONE led standard that uses a series of DVI adaptors to connect to a wide range of digital and analog signals even those with embedded audio. This gives great flexibility for end users and gives you instant access to additional inputs and outputs:

Digital: HDMI, DVI-D, DVI-A

Analogue: RGBHV, RGBs, YUV, YPbPr, CV and Y/C



HDMI



Composite Video



PC/HD (RGBHV, RGBs, YUV)



S-Video



Y/C




YPbPr

5 Panel Interface

5.1 Panel Overview


The front panel uses a powerful combination of coordinated menus and colored backlit buttons to immediately indicate the unit state.

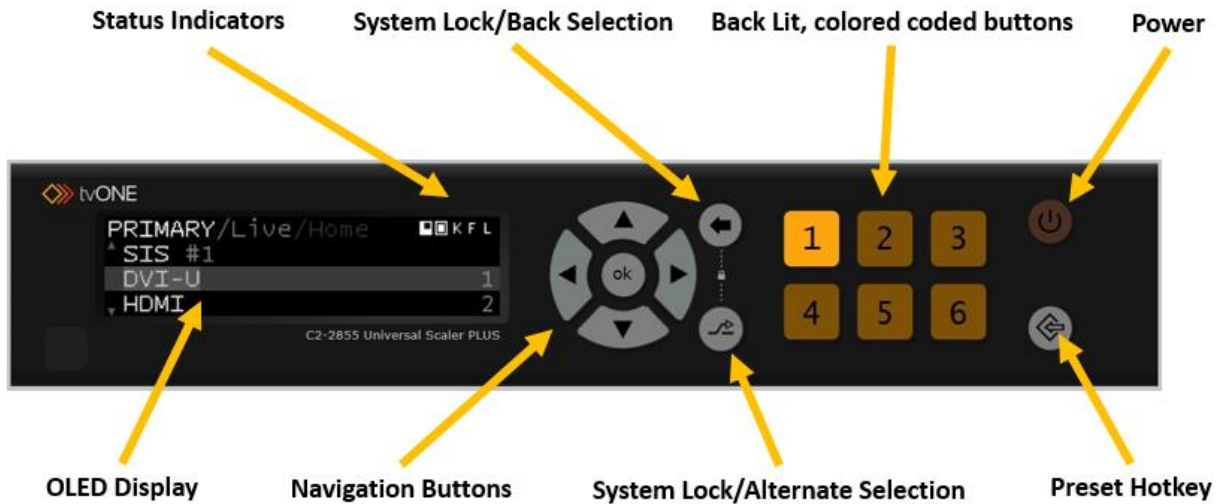

All modes can be accessed using the context sensitive, front panel buttons. The buttons can be used for multiple functions and light up in different colors to indicate the current unit state.

5.2 Using the C2-2855

The C2-2855 is designed to be commissioned using Set Up and then used in Live mode.

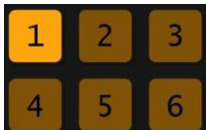

In Live mode the numbered buttons are used to select the various sources.



Alternatively if the Preset button is toggled on the same buttons can be used to recall Presets.



By holding down the Alternate Selection button for four seconds you can quickly access a Shortcuts menu where the most frequently used menu items can be easily accessed either through the menu or by selecting the numeric keypad.

The six options are:

1:	Views	Select the Primary and Background sources, Fullscreen/Picture in Picture Settings, Genlock, Framelock, Zoom, Size, Opacity, Crop, Border & Opacity.
2:	Keying	Enables keying as per the Live menu keying settings.
3:	Freeze	Freezes the Foreground Video.
4:	Logos	Enabling Logo layering, Logo Positioning, Opacity, Logo Border.
5:	Source	Used to change the Foreground and Background Sources.
6:	Audio	Selects the audio input to be embedded on the video output.

5.3 OLED Panel Overview

The OLED displayed menu displays a host of useful information on its four line display.



The OLED display shows where you are within the menu structure and the current set up of the unit.



 
The current menu position is shown as a dynamic menu tree with the selected menu shown on the left.



The status indicators shows the current set up of the unit including layering control, **Keying**, **Freeze** and **Logo** selection.



When navigating through menus, menus are displayed on black, light grey or dark grey:






Light Grey Current Selection
Dark Grey Current menu navigation position
Black Not selected





5.4 Foreground/Background Indicators

Within the OLED display there are a number of useful indicators that show the current set up of the Primary and Background layers.



The current state of the settings on the Primary and Secondary layers are indicated in the display:

- Primary Video Layer**
-  Full Screen
 -  Picture-in-Picture
 -  Hidden

- Background Video Layer**
-  Full Screen & Genlocked
 -  Hidden & Genlocked
 -  Hidden & Frame Locked
 -  Hidden

6 Menu Overview

The system has been designed with a **Set Up**, **Live** and **Shortcut** menus.

The **Set Up** menu is typically used by the unit Installer to configure the system settings, while the **Shortcuts** and **Live** menus provide End User functionality:-

Menu	Functions
Set Up	System Settings, Inputs, Outputs, Layers, Presets and Transitions
Live	Preset Recall, Source Selection, Picture-in-Picture (PIP) Control, Swapping Layers, Audio Routing, Logo Selection, Image Freezing and Fade to Black.
Shortcuts	Quick access to Views, Keying on/off, Freeze on/off, Logos, video Source Selection and Audio sources

More information on the menus can be found in later chapters of this manual.

6.1 Layering Control



The C2-2855 can control layering of Logo's, Primary & Background video and a Color Field. This adds great flexibility to simple control of layering and external referencing.

The Primary Layer can have Scaling, keying and Aspect Ratio Correction (ARC) applied.

Using the available layers it is possible to use Layer Swapping and Scaling to make changes using a variety of sources:

Layer	Sources	Layer	Scaling	Visibility	Remarks
Logo	Imported Logo	Always in front of other layers	None available	Either On or Off	Logo imported using supplied Control Software. It can be Keyed, Opacity changed and positioned.
Primary	All Inputs & Still Image Store	Can be swapped with Background	Available	Can be Hidden or Visible	Still images imported using supplied Control Software. Can only be displayed in Primary Layer.
Background	All Inputs	Can be swapped with Foreground	Only Aspect Ratio Conversion & Keying	Can be Hidden or Visible	
Color Field	User defined RGB Color	Always behind other layers	None	Always present but is not seen if other layers are selected full frame	

6.2 Swapping Layers

For simple layer priority control between two active layers there is a Swap command – this allows P/B (Primary over Background) and B/F (Background over Primary).



Primary/Background

Swap is most commonly used when you want to key over a Still Image (SIS) as a SIS can only be applied to the Foreground layer.

In this example we have a weather map still (SIS) and a video input of a presenter.



Background/Primary

Simply set the Layer priority to B/F (Background over Primary) and then go to Keying (also in the Live menu) and apply your key.

6.3 Genlock & Framelock & Hiding



It is possible to view or lock sources. The current set up of the unit is displayed in the OLED display.

If a Foreground only is set up then full controlling of scaling and output resolutions is possible. When a Foreground and Background are used the output must be locked to the Background Input.

There are several different scenarios:

	Possible Set Ups
Foreground	Full Screen Picture-In-Picture or Hidden
Background	Full Screen and Genlocked*, Hidden and Framelocked*, Hidden & Frame Locked or Hidden.

***Genlock** = Output is set to Background size and frame rate.

***Framelock** = Output size can be set by scaler but frame rate is taken from the Background input.

6.4 Scaling Overview

The CORIO™2.5 Scaler is a flexible tool and offers many different settings:

Crop	Cropping cuts into the edge of the scaled layer.
Place	Controls the Position and Size of the Scaled Image.
Image Flip	Allows the output image to be flipped Vertically, Horizontally or both – most commonly when a video projector is ceiling mounted, or for special effects.
Border	A colored border can be added to the outside of a scaled layer.
Keying	Keying is possible through a specified color or a Luma Key through black or white. Defaults are also made available for common colors (green, blue, etc).
Fade to Black	This allows the output of the C2-2855 to be faded to black.
Image Smoothing	Reduces the jagged-edges sometimes seen within an output image by softening it. It typically improves the quality of a scaled image greatly. There are four possible settings for this adjustment: “Off”, “Med.”, “High”, and “Auto”. The “Auto” setting is generally thought to be most desirable and will vary the smoothing process according to the amount of zoom taking place.
Flicker Reduction	Used if you have selected a low resolution interlaced output such as PAL or NTSC. If you are using CV or YC outputs, this adjustment may be of interest, particularly when you have line drawings or similar fine detail. You can choose from four possible Flicker Reduction settings. You should use as little Flicker Reduction as possible because the Vertical detail will be softened at the highest setting.
Temporal Interpolation	When using Frame Rate conversion additional frames will be added by repeating neighbouring frames. For example if the input is 50Hz and the output is 60Hz then without using Temporal Interpolation every 5 th frame is simply repeated (thus adding 10 frames per second). To give a smoother result Temporal Interpolation can be used which merges the neighbouring frames instead.

6.5 Aspect Ratio Conversion

It is possible to adjust the Aspect Ratio Conversion of the Sources and Outputs:

Fill	The image fills the output resolution even if this means the Aspect Ratio is incorrect.
H-Fit	The image fills the output resolution Height even if this means the Aspect Ratio is incorrect.
V-Fit	The image fills the output Height resolution even if this means the Aspect Ratio is incorrect.
1:1	The input is matched pixel for pixel to the output even if this means the Aspect Ratio is incorrect.

6.6 Importing Logos

Logos can be imported using the supplied PC Control Software where it can be resized and keyed as required. Within the C2-2855 unit menu the logo layer can be shown/hidden, repositioned and opacity applied.

6.7 Importing Still Image Store Items

Still Image Store Items can be imported using the supplied PC Control Software where it can be resized as required. Within the C2-2855 unit menu the Still Image Store layer can be shown/hidden, scaled, keyed and opacity applied.

7 Button Navigation

7.1.1 Powering Up



The on/off button is used to take the unit in and out of standby mode. Hold the button down for 2 Seconds to power up and 3 seconds to power down.

The On/Off button displays in three states:

On/Off	Other Buttons	Unit State
Red	No Backlighting	Power supply connected with unit in standby mode
White	All display in White	On/Off button has been selected and the unit is initialising.
No Backlighting	Backlit	Unit operational

7.1.2 Button Colors

The panel buttons display in various colors and in lit/unlit modes to indicate current system status or available menu options to allow quick selections:

Red	Presets Selection, Unit in Standby, and Valid Audio Sources
Orange	Source Selection
White	Available menu selections
Unlit	Unavailable menu
Purple	Foreground/Background Audio Selection
Blue	Shortcuts and Audio Mute

7.1.3 Menu Navigation



These navigation buttons are used to move to a chosen menu and select it. Valid navigation selections are highlighted using backlighting.

Holding the “OK” button down will save all System Settings which will be used the next time that the unit is power cycled.



The Back button allow you to quickly navigate back to to the Home menu step by step, or by holding down to go back to the Home position.



Where alternate values greater than “1-6” are available selecting this button allows access to value from 7-12. Holding the button for three seconds will access the Shortcuts menu.

7.1.4 Source Selection & Loading Presets



These buttons are used for Source Selection, quick selection of menu items and values together with loading Presets.



The Preset button is a hot key that is used in conjunction with the “1-6” buttons for recall of Presets.

Presets – Pressing the Preset front panel put the C2-2855 into Preset Mode. Then press the relevant buttons marked “1-6” to switch between the Presets.



Sources – Press the back arrow in any menu will take you to the top level menu on the OLED display. Then navigate to the **Live** menu then press the relevant buttons marked “1-6” to switch between the sources.



7.1.4.1 Controlling Presets

Presets

Capturing

Press Preset then Press and hold a “1-6” button



Recall

Press Preset then Push a “1-6” button briefly



Delete

Press Preset then Press and hold the Preset button and a “1-6” button



Load the Default Preset

Press and Hold the Preset Button



Access Presets 7-12

Press Preset then Toggle Alternate button and a “1-6” button



7.1.4.2 Controlling Sources

Sources

Switch Source

Push a “1-6” button briefly














Access Settings

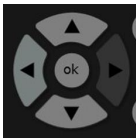Right button

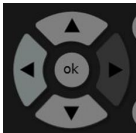

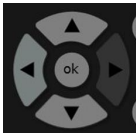7.1.5 Other Useful Selections








Navigation	Back navigation	Press Back Button			
	Go to Top Level Menu	Press & Hold Back Button			
Saving	Save Settings	Press & Hold the OK Button for 3 seconds			
Panel Lock	Panel Lock/Unlock	Press Alt and then Back until you here a beep and the display will read Panel Locked.			
					
Reset	Factory Reset	Press OK, Back & Standby for 3 seconds and you will here a beep.			

8 Shortcut & Live Menus

8.1 Overview


Once the C2-2855 has been configured most daily operations will be completed using Shortcuts menu and the Live menu. It is also possible to access the various related elements of the Set Up menu from the Live menu through numerous “Settings” sub menus if required.

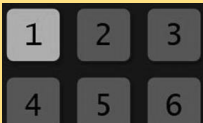In essence the unit will be used in one of four ways:-

Presets			<p>12 Presets can be stored and instantly recalled. To navigate to the Presets menu, toggle the Preset key and then select the required preset buttons using the “1-6” number keypad.</p>
Source Change			<p>To change a source, make sure you are in the Live menu, then select primary or background to change the source by selection of 1-6 on the number keypad.</p> <p>For ease of use, 1 = DVI, 2=HDMI, 3=SDI, 4=PC/HD, 4= YC and 5=CV.</p>
Shortcuts Menu			<p>To select the Shortcuts menu, hold down the Alternate Selection button for 4 seconds or navigate to the home menu and navigate down to the Shortcuts menu. Then use the “1-6” number keypad to select the chosen setting.</p> <p>For reference, 1 = Views, 2= Keying, 3 = Freeze, 4 = Logos, 5 = Sources and 6 = Audio.</p>
Live Menu			<p>The Live menu can be accessed from the home OLED Screen. To navigate to the home screen from any menu location, hold the Back key for 4 seconds and then navigate to your chosen menu item.</p>

8.2 Shortcuts & Live Menu Map

Key aspects of the Live menu can be also be accessed through a Shortcuts menu – the Shortcut items are shown in red overlaid on the on the Live menu map:-

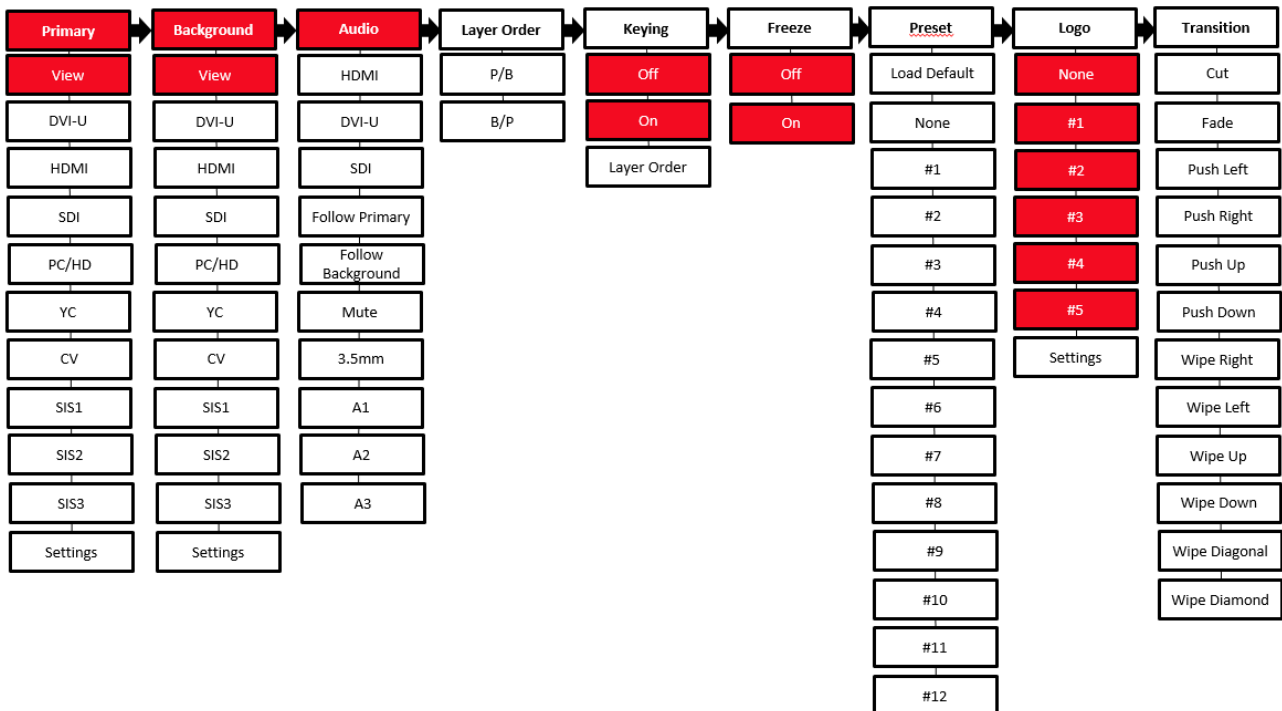

8.2.1 Shortcuts

The Shortcut menus offer a simple and quick method to access the most used settings for normal use of the C2-2855. The Shortcut menu is accessed from the top menu by scrolling down to Shortcuts then hitting ok, or can be accessed at any time by holding down the Alt key.

Make a selection on the number keypad corresponding to the desired selection on the menu.

1	Views	Gives you access to the Primary and Background menus to allow change of source, Picture In Picture and Referencing.
2	Keying	Toggles Keying on and off. Key settings are available from the Live menu.
3	Freeze	Freezes the Primary layer.
4	Logos	Gives access to the stored logos.
5	Sources	Gives you access to the Primary and Background menus to allow change of source, Picture In Picture and Referencing.
6	Audio	Allows the choice of audio input which is output from the C2-2855.

8.2.2 Live Menu

The Live menu is focussed on the key tasks that will be used during normal operations following the initial system configuration and can be accessed by holding down the back button and navigating to the Live menu:-

Primary	Source, View (Full Screen, PIP or Hidden)
Background	Source, View (Full Screen Hidden, or None)
Audio	Follow Primary, Follow Background, A1, A2, A3, 3.55 or mute
Layer Order	Primary/Background or Background Primary
Freeze	Freeze Primary Layer
Fade to Black	Fade all outputs to Black
Preset	Preset Recall, Save, Delete or Default
Logo	Logo selection
Transition	Transition Selection

8.2.3 Primary

The Primary menu allows the selection of Sources, Source Settings, and Picture-in Picture (PIP) modes together with scaler control for Cropping, Placement, Borders, and Keying etc.

View	The input can be set Full Screen, PIP or Hidden.
Source Selection	After entering the Live menu you can quickly switch to a source by either navigating down to the desired source and selecting “OK” or by pushing one of the “1-6” numerical selection buttons.
Source Settings	Source set up settings can be applied. For more information refer to the Set Up Chapter of this manual.

8.3 Background

View	<p>The input can be set as Full Screen, Hidden (Genlock), Hidden (Framelock) or None (Scaler).</p> <p>Genlock locks the output to the resolution and frame rate of the Background Input whilst Framelock utilizes the user set resolution but locks the output to the same frame rate as the input.</p> <p>If None is selected it is possible to use the full range of scaler settings and output resolutions/frame rates.</p>
View Settings	It is possible to select the Background Source , view the set resolution and set the Opacity of the Background.
Source Selection	You can quickly switch to a Source by either navigating down to the desired source and selecting “OK” or by pushing one of the “1-6” numerical selection buttons.
Source Settings	Allows quick access to the Set Up menu – for full details see the Set Up menu section.

8.4 Audio

The C2-2855 has a powerful audio toolset for the embedded of various audio signals onto the output.

Audio Output Selection	Audio can embedded to the output from the following inputs: HDMI, DVI-U (DVI & HDMI), SDI, 3.5mm audio and Phoenix Audio (A1, A2 & A3).
Audio Follow	The audio output can be set to follow either the Primary or Background layer.
Mute	If no audio is required to be output, the unit can be set to Mute.

8.5 Layer Order

It is possible to change the priority of the Primary and Background layers.

P/B	In this mode the Primary is displayed over the Background layer and Scaling, Keying can be applied to the Primary.
B/P	The Background is applied over the Foreground and keying can be applied to the Background layer.



Primary/Background

The layer order is most commonly used when you want to key over a Still Image (SIS) as a SIS can only applied to the Foreground layer.

In this example we have a weather map still (SIS) and a video input of a presenter.



Background/Primary

Simply set the Layer priority to B/F (Background over Primary) and then go to Keying (also in the Live menu) and apply your key.

8.6 Keying

The Keyer can be used for Broadcast and Digital Signage Applications and can be enabled and disabled.



For Broadcast applications it is possible to key through any background – eg Blue Screen, Green Screen, etc with full control over RGB values.



For Digital Signage applications it is possible to key over a lower third by applying a Luma Key through black or white.

For information on setting up Key values, refer to the Set Up menu chapter of this manual.

8.7 Freeze

Freeze will Freeze frame the video displayed on the Primary layer only.

8.8 Preset

Menu access to the stored Presets and to a default Preset which defaults all Scaler settings.

8.9 Logo

Choose from one of five stored logos.

8.10 Transition

It is possible to select from a variety of transition types (**Cut**, **Fade**, **Push** and **Wipe**) and **Settings** including **Duration**.

9 Popular Tasks

9.1 Setting up Sources and Outputs

9.1.1 Source Setup

To set up a new Source enter the **System** menu and select **Sources**. In the **Sources** menu you can select between **Inputs**, **SIS** (Still Image Store) or **Logos** – select **Inputs**.

Next select the Input you require – for this example we will select **HDMI**. The key menu items you will need to select to configure your Source are:

HDCP	The default mode for HDCP is Off – select On for HDCP sources,
Aspect Ratio	Select the correct Aspect Ratio from Fill (stretches image to fill the screen), Aspect (maintains the source aspect ratio), H-fit (fits the image horizontally), V-fit (fits the image Vertically) or 1:1 (resizes the image to pixel matching between the source and output).

9.1.2 Output Set Up

To set up an output enter the **System** menu and select **Sources** and select the Connector – for this example we select HDMI and the key menu items you need to select is:

HDCP	The default mode for HDCP is Off – select On for HDCP sources,
-------------	---

Now return to the **Outputs** menu and select the **Video** sub menu. Key menus are:

Resolution	Select a chosen resolution from a large number of preset values.
Enable Layers	Displays the Background Color only.

9.2 Switching Sources



To switch sources go to the **Live** menu and select **Primary** – the source buttons will now light up in orange. Now select the first source in the menu list and the source buttons will now be active to allow seamless switching.

9.3 Customizing Transitions

In the Live menu scroll down to the **Transition** menu. It is possible to select from a variety of transition types (**Cut, Fade, Push and Wipe**) and **Settings** including **Duration**.



Select Type and then can select transition type by hitting the OK button or the corresponding number button. Once you select the transition, pressing the right arrow key will take you to the duration menu. Hit OK then use the up and down arrows to raise or lower the duration time.

Cut	Instant take between sources.
Fade	Duration can be set from .0 Sec to 999.9 Seconds
Push	Duration can be set from to 999.9 Seconds
Wipe	Duration can be set from .0 Sec to 999.9 Seconds together with wipe size.

9.4 Creating a picture in picture effect

9.4.1 Resizing the Primary Layer

To create a picture-in-picture (PIP) first enter the **Live** menu and select **Primary, View** and then **PIP** - this will resize the Primary layer. Now scroll down to and select **Settings** where you can access the following tools:


Primary	Select the source for the Primary layer.
Resolution	The current resolution and frame rate is displayed.
Zoom	The current zoom setting within the PIP – if this is increased the source size will increase within the PIP view. If the image is zoomed it is possible to select Pan H and V (Horizontal and Vertical Pan).
Size	The size of the PIP.
Crop	Source Crop
Opacity	Source Opacity
Flip Image	Flip Source left and right, up and down.
Freeze	Source Freeze
Border Active	Add a Border to the PIP. If selected border Size, Offset, Opacity and Color can be controlled.
Fade To Black	Fade the PIP to black.
Enhancements	Image Smoothing, Flicker Reduction, Temporal Interpolation, etc

9.4.2 Adding a Background

Now go to the **Live/Background/View** menu and select **Full Screen**. In this menu we can also use the Background source to reference the C2-2855:-

Full Screen	This mode shows the Background input in a full screen view and is used in the PIP mode and will automatically Genlock the Background input source to the output.
Hidden (Genlock)	The Background will not be shown but its resolution and frame rate will be used as the Reference for the unit and the output will be locked to these values.
Hidden (Framelock)	The Background will not be shown but its frame rate will be used as the Genlock for the unit and will be used together with the user selected Resolution
None (Scaler)	No Background is shown and the values are not used for locking.

9.5 Adding a Color Field as a Background

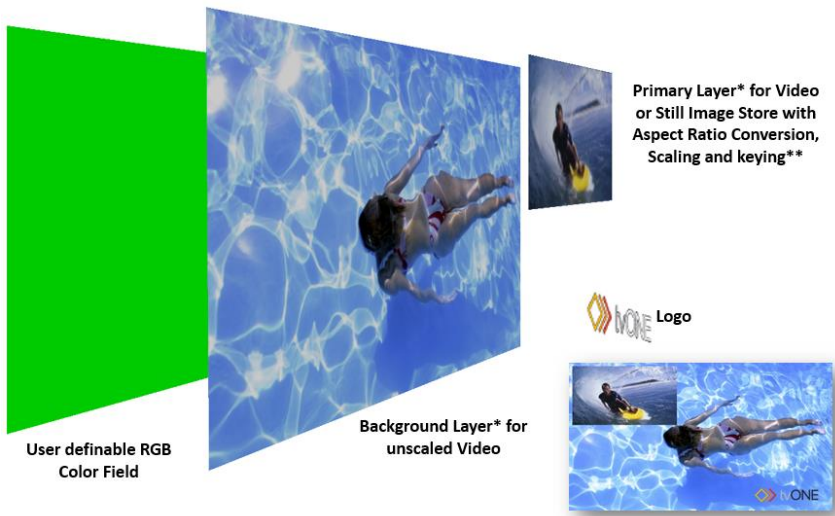

A Back Color is always present behind the video layers and by default is set to Black but can be adjusted to any RGB Value.

To change the Back Color navigate to **Set Up/Layers/Back Color**. The default RGB value is 16/16/16 which represents black.

9.6 Adding a Still Image as a Background

Using the PC Control Software a Still Image (SIS) can be optimized and uploaded to the C2-2855. It can be used on the Foreground layer as a Source or as a picture in picture (PIP) and alternatively the Layer/Swap menu can be used to push it to the rear video layer and a Key Applied over the front layer.



Primary/Background

In this example we have a weather map still (SIS) and a video input of a presenter.



Background/Primary

Set the Layer priority to B/F (Background over Primary) and then go to Keying (also in the Live menu) and apply your key.

1. **Select a SIS image** – Go to the **Live/Primary** and scroll down to the **SIS** layers and select one using the OK key.
2. **Select your Video Source** – Go to **Live/Background** and select a source before navigating to Live/Background/View selecting Full Screen.
3. **Swap the Layer Order** – Go to **Live/Layer Order** and set to **B/P** – you will now see your SIS move behind your video source.
4. **Enable Keying** – Navigate to **Live/Keying** and turn the Keyer **On** before adjusting the Key in **Live/Keying/Settings** using the YUV **Range** settings and **Softness**.

9.7 Adding a logo to a presentation



After loading and optimising a logo to the C2-2855 using the Control Software it can be selected through the **Live** menu by selecting your required **Logo** number and editing its **Place** (position and size), **Opacity** and **Border**.

To load a Logo navigate to the **Shortcuts** menu and select button **4** then scroll down to select the Logo you require.

9.8 Creating a lower third



To create a lower third using the **Keying** function, firstly navigate to the **Live/Primary/Keying** menu and select On. By default the C2-2855 will Lumakey through the black areas of the image. To configure the key first go to the **Live/Primary** menu and select your PC Input on the Primary layer and turn on the Keyer. Select **Settings** where you can edit the **Range** for Y, U and V and the key values plus Invert the values. Now enable the Background video by navigating to the **Live/Background/View** menu and select **Full Screen**.

To create a lower third using the **Keying** function, firstly navigate to the **Live/Primary/Keying** menu and select On. By default the C2-2855 will Lumakey through the black areas of the image. To configure the key first go to the **Live/Primary** menu and select your PC Input on the Primary layer and turn on the Keyer. Select **Settings** where you can edit the **Range** for Y, U and V and the key values plus Invert the values. Now enable the Background video by navigating to the **Live/Background/View** menu and select **Full Screen**.

9.9 Using audio from alternative sources

It is possible to choose audio from various sources. To select the audio being used go to the Live/Primary menu and scroll down to Audio – several options are available:-

Follow Primary	Audio from the Primary layer is heard.
Follow Background	Audio from the Background layer is heard.
Mute	No audio is heard.
Alternative Inputs	Physical inputs area available from 3.5mm and Phoenix connectors (A1, A2 and A3). All are line level and offer a stereo pair each.

10 Set Up Menu

This section explores the variety of Inputs and Outputs that the C2-2855 is able to accept.

The Set Up menu includes:-

System	Control, Display, Navigation, Status, Autoset sense
Sources	Inputs, Still Image Store (SIS), Logo Set Up
Outputs	Connectors, Video, Audio
Preset	Load Default
Layers	Logo Selection, Primary Source, Background Source, Background Color, Layer Order
Transition	Type, Size, Duration


10.1 Initial Set Up

Connect the supplied Power Supply Unit and Input/Outputs. If you want to control your C2-2855 remotely you can use either the Ethernet or RS232 connections.

10.2 Connections

The unit connections are color coded for ease of navigation:-

Black	Inputs
Grey	Outputs
Yellow	Power & Control

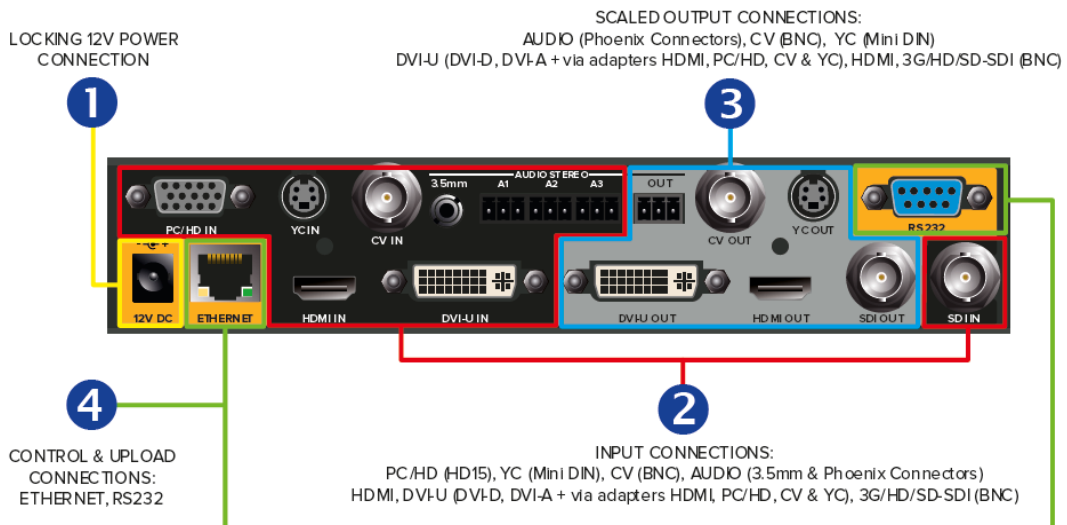

A wide range of Inputs and Outputs are available for AV, Video and Audio connectivity:-

	Input	Output	Remarks
HDMI	Yes	Yes	
DVI-U	Yes	Yes	For DVI-D, DVI-A, HDMI, PC/HD, CV & YC.
3G/HD/SD-SDI	Yes	Yes	Connection for SDI. HD-SDI & 3G/HD/SD-SDI
PC/HD	Yes	No	Connection using HD15 connectors
YC	Yes	Yes	

CV	Yes	Yes	
Phoenix Audio	Yes	Yes	3 Stereo inputs & 1 stereo output (Ground on centre)
3.5mm Audio	Yes	No	Stereo line in

10.2.1 HDMI

The C2-2855 has full support for the High-Definition Multimedia Interface (HDMI) to V1.4 on both dedicated Inputs/Outputs and also using the Universal DVI Inputs/Outputs and an option dongle connector. The maximum resolution/frame rate supported is 1920 x1080/60p.

10.2.1.1 HDCP Management

The unit complies with High-Bandwidth Digital Content Protection (HDCP) requirements to prevent illegal copying of digital audio and video content. HDCP data can be passed through the unit using the HDCP menu.

10.2.1.2 EDID Management


The C2-2855 supports full use of Extended Display Identification Data (EDID) which is a data structure used by digital displays to describe its capabilities to the video source. The unit can pass through EDID information or read and store an EDID for use when the Display is not directly connected.

The C2-2855 supports full use of Extended Display Identification Data (EDID) which is a data structure used by digital displays to describe its capabilities to the video source. The unit can pass through EDID information or read and store an EDID for use when the Display is not directly connected.

Changes apply after a re-boot of the C2-2855.

There are several options available:-

Monitor DVI-U	Takes EDID information from the monitor connected to the DVI-U output.
Monitor HDMI	Takes EDID information from the monitor connected to the HDMI output.
Default DVI-U	The Default DVI-U EDID indicates to the source that the C2-2855's native resolution is 1920x1200 60Hz and not a HDMI sink. If a user wants to use HDMI via the DVI-U connector then they must change the EDID setting to HDMI.
Default HDMI	The Default HDMI EDID indicates to the source that the unit is a HDMI sink and supports 1920x1080p 60Hz as our native resolution, and also support audio.
#1, #2, #3, #4	Loads a user configurable EDID.

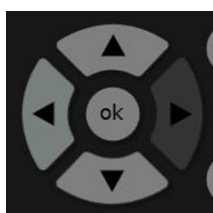

To save a user configurable EDID, connect an EDID compatible display to the DVI-U or HDMI output, navigate to the Source/EDID menu and scroll down to the number (#1, #2, #3 or #4) and hold down the "OK" button for four seconds until a beep is heard.

It is only possible to delete a user configurable EDID by re-flashing the unit with the same, or newer firmware.

10.2.2 Universal DVI

Universal DVI (DVI-U) is available for Input and Output directly for DVI-I and DVI-A and using adapters for HDMI, PC/HD, CV & YC. This system can add great flexibility for installers or for use at events and DVI-U adapters can add Input/Output flexibility in system designs.

10.2.3 3G/HD/SD-SDI

The 3G/HD/SDI-SDI inputs and outputs can accept:-

	Data Rate	Resolutions	Audio	Input Distance
SDI	270Mbit/s	NTSC or PAL	1 Stereo Pair	100 Metres
HD-SDI	1.485Gbit/s	720p, 1080i	1 Stereo Pair	166 Metres
3G/HD/SD-SDI	3Gbit/s	1080p	1 Stereo Pair	300 Metres

10.2.4 PC/HD

The PC/HD Input uses a standard HD15 connector and can support resolutions up to UXGA (1600 x1200) and 1920 x 1080. The PC/HD input can use Analog RGBHV, RGsB (sync on green), RGBS (separate sync at TTL levels) and YUV/YPbPr (including tri-level) including tri-level sync using the tIYUV Genlock source type setting.

10.2.5 YC/CV

Composite Video (CV) and S-Video (YC) inputs can accept either standard NTSC or PAL inputs – for example, from a video camera, VCR, DVD player, gaming device, etc. PAL and NTSC detection is automatic.

CV and YC outputs always function simultaneously and can be set to either standard NTSC or PAL.

The YC connection is a standard 4 Pin Mini Din connector – if connection via dual Y & C BNC connection or a second YC input/output is required, this is available through the Universal DVI connector.

CV is connected via a standard BNC connection. If a second CV input is required, it is available using the Universal DVI input.

10.2.6 Audio Connections


3.5mm Input 3 X Stereo In 1 x Stereo Out



The C2-2855 has four Stereo Line Inputs (1 x 3.5mm and 3 x Phoenix) and a Stereo Phoenix Output.

10.2.7 Phoenix Audio

+ Ground -

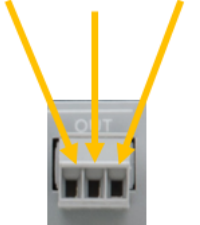

It is possible to select Input audio on 3 stereo pairs and Output a stereo pair via Phoenix audio connectors. All inputs/outputs are auto gain to line level and each connector has a Ground connector in the center of each stereo pair.

10.2.8 3.5mm Audio Input




The 3.5mm Input is balanced to Line level and can be used for inputting audio from PC's or any device which can be connected in the manner. If audio from a microphone is used it will need to be boosted to line level first using an external pre-amp device.

10.3 Set Up Menu

To enter the Set Up menu, navigate to the **Set Up** menu.

10.3.1 Set Up Menu Map

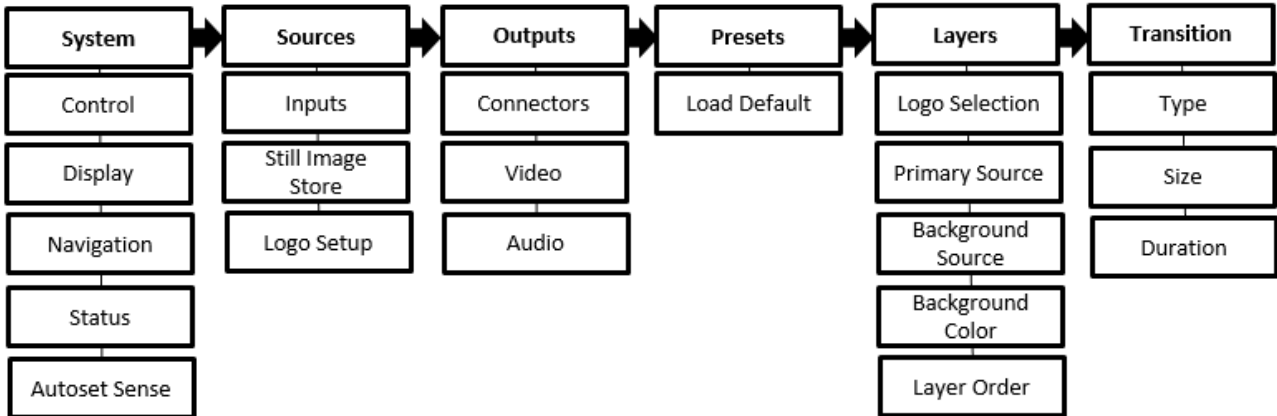

These navigation buttons are used to move to a chosen menu and select it. Valid navigation selections are highlighted using backlighting.

Holding the “OK” button down will save all System Settings which will be used the next time that the unit is power cycled,

10.3.2 System

Control	Auto	
	Ethernet	This provides TCP/IP communications to and from the unit using a custom protocol. It is possible to amend several settings include Mask, Address, Gateway, Mode and Port
	Serial Port	Your unit can be remotely controlled via its RS-232 serial port,
Status		Displays current Firmware Version, Hardware Version, the number Resolutions available, Power Cycles, Firmware Updates and Hours In Use. The number of Still Image Stores (SIS), Logos and Presets are also displayed. The “In” menu is also available for system debugging and shows the current input into the scaler (line frequency and total lines).
Calibrate Sense		For Calibrate to work properly, it needs a sufficiently bright full-screen image to examine. The sense level lets you change the brightness threshold for detection of the screen edge between Low, Medium, High and V.high. Medium is the default level, which is recommended for normal use (Windows-type images, etc.)

10.3.3 Sources

Inputs	Selects and configures the system inputs including DVI-U, HDMI, SDI, PC/HD, YC and CV.
SIS	Using the PC Control Software it is possible to upload images from all common formats (JPEG, GIFF, PNG, etc) in a .PCX format to the Still Image Store (SIS) and the system can store 5 still images of 263K each.
Logos	Using the PC Control Software it is possible to upload images as Logos. The maximum size per logo is 32,768 Pixels (eg 128 x 256 Pixels) and the system can store 5 logos.

The system Inputs can be configured by selecting the input required in the Sources menu. Please note that all menus are not applicable to all inputs – this table indicates which menus are applicable to which input types:-

Input	Audio Source	Input Type	RGB Settings	YUV Settings	Aspect Ratio	Align	On Source Loss	De-Interlace	Diagonal Interpolate	Noise Reduction	Field Swap	Field Offset	Procamp	Sharpness	EDID	HDCP
DVI-U																
HDMI																
SDI																
PC/HD																
YC																
CV																

10.3.4 Audio Source

It is possible to select either the audio from the source selected, another video source, from the 3.5mm and Phoenix audio inputs or to mute using the **Live/Audio** menu.

HDMI	Selects audio from the HDMI input.
DVI-U	Selects audio from the DVI-U – for DVI and HDMI inputs only.
SDI	Selects audio from the SDI input
Follow Primary	The audio from the Primary layer source is used.
Follow Background	The audio from the Background layer source is used.
Mute	No audio is outputted from the system.
3.5mm	Audio is taken from the 3.5mm stereo line level input.
A1, A2 or A3	Audio is taken from one of the the Phoenix stereo line level inputs.

10.3.5 Input Type

When using DVI-U inputs it is possible so either automatically sense the input type or to manually set the input type from:

Auto	System automatically senses the input type and sets it from the available input types.
D-RGB	DVU-D and DVI-I Sources
D-YUV	Digital Component Sources
A-RGB	VGA Sources
A-YUV	Analog Component Sources
CV	Composite Video sources
YC	Y/C or S-Video sources

10.3.6 RGB Settings

Calibrate	This automatically finds the active area for RGB sources.
Input Pixel Phase	Ensures the analog sampling is taken from the middle of each pixel to avoid poor or smudged results.
RGB Level	Allows the contrast of the RGB levels to be adjusted.

10.3.7 YUV Settings

Calibrate	This automatically finds the active area for YUV sources.
Input Pixel Phase	Ensures the analog sampling is taken from the middle of each pixel to avoid poor or smudged results.
YUV Level	Allows the contrast of the YUV levels to be adjusted.
YUV Black Level	Allows the YUV Black Levels to be adjusted. YUV levels can be adjusted from 0 (default) to 7.5 IRE.

10.3.8 Aspect Ratio

Fill	The image fills the output resolution even if this means the Aspect Ratio is incorrect.
H-Fit	The image fills the output resolution Height even if this means the Aspect Ratio is incorrect.
V-Fit	The image fills the output Height resolution even if this means the Aspect Ratio is incorrect.
1:1	The input is matched pixel for pixel to the output even if this means the Aspect Ratio is incorrect.

10.3.9 Align

Analog signals can sometimes be off by a few pixels. If Calibrate cannot find the edges correctly they can be adjust manually using Align.

10.3.10 On Source Loss

When a source becomes unavailable this menu allows you set what is displayed instead including a Blue Color Field, Black Color Field or Remove which disables the input from displaying. The default value is blue.

10.3.11 De-Interlace

Interlaced video material is made up from two Fields per Frame. Normally the frame order is Field One followed by Field Two. However, some inputs can have different field handling, for example during frame rate conversion and the tools in this menu can help correct the field handling:-

Auto	Automatically selects Film 3:2 or Medium Range Motion Compensation (M. Comp Med.) depending on whether Film Mode is detected or not.
Weave	The two interlaced fields are simply combined/weaved together. This will often show artefacts on moving images, but can be used when the input is known to be still.
Film 3:2	When working with 24p sources this menu can be used to correct the field handling when outputting in other frame rates. Enables 3:2 pull down conversion of the incoming NTSC Video. (This option should not be used if the source is not NTSC video).
M. Comp. Low M. Comp. High	Enables Pixel Adaptive Motion Compensation. Three levels are available with 'Low' providing the least compensation for Motion and

	'High' providing the most compensation.
Frame/Bob	The two fields are shown consecutively.

10.3.12 Diagonal Interpolate

Diagonal Interpolation increases the resolution of an image generates additional pixels in the image using interpolation when de-interlacing occurs by reducing 'jagged' artefacts on moving images. However is not suitable for noisy sources where the noise could be misinterpreted as a diagonal or sloping element of the picture. The default is Off.

10.3.13 Noise Reduction

For interlaced sources Noise Reduction averages the video signal over a number of fields, merging fields where there is no movement. If motion blurring is seen, it is recommended to turn this setting off. The default position is On.

10.3.14 Field Swap

Interlaced video material is made up from two Fields per Frame. Normally the frame order is Field One followed by Field Two. Occasionally the fields will be reversed to Field Two/Field One and Field Swap which will display as unsmooth movement – Field Swap can correct this by reversing the field order. The default position is off.

10.3.15 Field Offset

Field Offset is used to fix interlaced source issues and can be adjusted from -4 to +3 fields.

10.3.16 Procamp

This setting is only for analog inputs:-

Brightness	Adjust the Brightness and Contrast of the image to your requirement.
Contrast	Adjust the Brightness and Contrast of the image to your requirement.
Saturation	Saturation is the amount of color present in the image.
Hue	Hue is the color "tint" parameter and the adjustment range is +90 degrees through to -90 degrees with 0 being the default.

10.3.17 EDID

The C2-2855 supports full use of Extended Display Identification Data (EDID) which is a data structure used by digital displays to describe its capabilities to the video source. The unit can pass through EDID information or read and store an EDID for use when the Display is not directly connected.

Changes apply after a re-boot of the C2-2855.

There are several options available:-

Monitor DVI-U	Takes EDID information from the monitor connected to the DVI-U output.
Monitor HDMI	Takes EDID information from the monitor connected to the HDMI output.
Default DVI-U	The Default DVI-U EDID indicates to the source that the C2-2855's native resolution is 1920x1200 60Hz and not a HDMI sink. If a user wants to use HDMI via the DVI-U connector then they must change the EDID setting to HDMI.
Default HDMI	The Default HDMI EDID indicates to the source a source that the unit is a HDMI sink and supports 1920x1080p 60Hz as our native resolution, and also support audio.
#1, #2, #3, #4	Loads a user configurable EDID.



To save a user configurable EDID, connect the EDID capable display. to the DVI-U or HDMI output, navigate to the Source/EDID menu and scroll down to the number (#1, #2. #3 or #4) and hold down the “OK” button for four seconds until a beep is heard.

To delete a user EDID re-flash the unit with the same or new firmware.

10.3.18 HDCP

The unit complies with High-Bandwidth Digital Content Protection (HDCP) requirements to prevent illegal copying of digital audio and video content. HDCP data can be passed through the unit using the HDCP menu with Setup/Sources/Inputs/HDMI or DVI-U.

HDCP only applies to DVI-U digital signals and HDMI. It is not possible to receive an HDCP protected input and transmit it on a non-HDCP compliant output.

10.4 Outputs

The Output menu is used to configure the DVI-U, HDMI, YC and CV outputs.

Connectors	DVI-U/YC/CV	Signal Type, Digital Settings, YC/CV Settings
	HDMI	Signal Type, HDCP, EDID Capture To
Video	Resolution, Layers On, H/V Shift	
Audio	Follow Primary, Follow Background, Mute	

10.4.1 Connectors

The following sections will define the configuration of outputs connected to the C2-2855. Also need to define how you get to these sub-menus.

10.4.1.1 Signal Type

This menu is used to select the signal type you are using:

RGBHV	RGBHV is part of the RGB setting and is used when separate Horizontal and Vertical is needed and a 5 BNC breakout cable will be used
RGsB	RGsB is where sync resided on B versus the normal RGB signal where sync is on green.
TIYUV	Tri-Level YUV' and is the method of sending a sync within an analog high-definition YUV signal. Non-HD signals use normal (bi-level) sync.

10.4.1.2 Digital Settings

For digital formats, a number of configurations are available:-

HDCP	On DVI and HDMI signals to enable the connection to pass HDCP key information, this setting is set to "On". However if you do not wish to pass HDCP encrypted material, this should be set to "off".
EDID Capture To	To capture EDID information for digital displays it is possible to create four user defined EDID's. Connect the chosen display and navigate to the memory (eg #1) and hold the "OK" button until the EDID is saved.
Allow HDMI Output	This setting allows the main HDMI Output to be turned "on" or "off" when using the DVI-U connection.

10.4.1.3 YC/CV Settings

YC and CV handling is limited to Standard Definitions. In this menu it is possible to select NTSC (NTSC-MPAL-BDGI or PAL (PAL-M/PAL-N).

10.4.2 Video

The system has very flexible output control including a wide range of Resolutions, layer output control and fine tuning of image positioning:-

Resolution	A resolution picker allows easy selection from 71 resolutions from NTSC (487i 59.94Hz) to 1920x1200 60 Hz Rb
Enable Layers	This menu allows you to enable or disable both video layers and the Logo layer displaying the Background Color only.
H/V	Allows fine repositioning of the Background video layer when displayed.

10.4.3 Audio

In the audio menu it is possible to embed a variety of audio sources on the output – HDMI, DVI-U (DVI or HDMI), SDI, 3.5mm connector or Phoenix connectors (A1, A2 or A3). Alternatively it is possible to follow the audio from the source currently displayed as the Foreground or Background or to completely mute the output.


10.5 Preset

In the Preset menu it is possible to load a default setting. This setting effectively puts all of the Presets to their factory default.

10.6 Layers

Logo	Selects which logo is shown on the output from the fibe available.
Primary	Selects the view (Full Screen, PIP or hidden), source (DVI-U, HDMI, SDI, PC/HD, YC, CV, SIS), Resolution indicator, Zoom, Size, Crop, Opacity, Freeze, Border Active, Fade to Black, Enhancements.
Background	Selects View (Full Screen, Hidden Genlock, Hidden Framelock, None Scaler), source (DVI-U, HDMI, SDI, PC/HD, YC, CV), Resolution, Opacity.
Back Color	This control configures a color field using RGB values which is always behind the Foreground/Background but only seen if they are not full screen.
Layer Order	Layer order is used to control the layer priority of the Primary and Background layers. This is used primarily to key a Chroma key foreground over a still image (SIS) as a SIS can only be placed on the Foreground.
Keying	It is possible to Luma and Chroma key through either the Foreground or Background (in Background/Primary Layer Swap mode) for Broadcast and Digital Signage applications.

10.7 Back Color

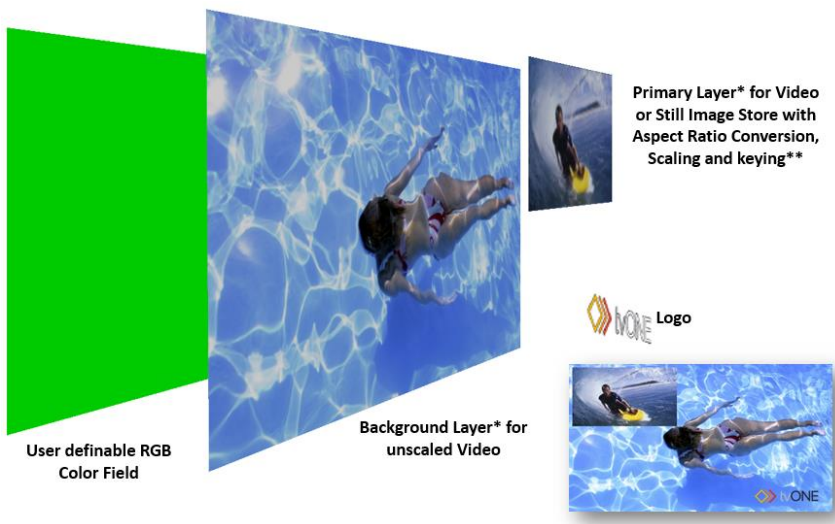

A Back Color is always present behind the video layers and by default is set to Black but can be adjusted to any RGB Value.

The Background Color will be visible when:-

1. Enable Layers is selected as "Off"
2. Primary Layer when PIP, Key or Aspect Ratio applied.

3. With Primary and Background active when PIP, Key or Aspect Ratio is applied to Foreground and Aspect Ratio Conversion on the Background.
4. When Background only is shown with Keying or Aspect Ratio Conversion.

10.8 Genlocking your unit

We can set the Background to four different settings to accurately control the behaviour of the unit for Genlocking. In this menu we can also use the Background source to Genlock the C2-2855:-

Full Screen	This mode shows the Background input in a full screen view and is used in the PIP mode and will automatically Genlock the Background input source to the output.
Hidden (Genlock)	The Background will not be shown but its resolution and frame rate will be used as the Genlock for the unit and the output will be locked to these values.
Hidden (Framelock)	The Background will not be shown but its frame rate will be used as the Genlock for the unit and will be used together with the user selected Resolution
None (Scaler)	No Background is shown and the values are not used for Genlock.

10.9 Layer Order

For simple layer priority control between two active layers there is a Swap command – this allows P/B (Primary over Background) and B/F (Background over Primary).



Primary/Background

It is possible to set the order layer to either Primary/Background or Background/Primary.



This has many useful purposes but is primarily used to place a Still Image (SIS) on the Foreground layer and swap it to the background to allow another image to be keyed over it.

Background/Primary

10.10 Keying

Keying can be used to key out a presenter on a colored (blue, green, etc) or to key text onto image as a Lower Third or for a Digital Signage application.

By default the C2-2855 is set to Luma Key through black although it is possible to set up a custom key value using YUV values and softness.

It is also to invert the key where the color information is reversed to allow using the existing key information and place a different video source other than the key source to fill the key for an effect.

10.11 Presets

This menu enables a default Preset to be loaded with default scaler settings. This is used to quickly reset and scaler configurations. When in the Preset menu, you can Save, Recall and Delete Presets:-

Load	Press and release a "1-6" numeric button - the menu will display "Preset Loaded" and you will hear the mid toned buzzer beep
Save	Press and hold a 1-6" numeric button for two seconds until you hear the high toned buzzer beep – the menu will display "Preset Saved".
Delete	Press and hold a 1-6" numeric button for five seconds you will firstly hear a mid-toned buzzer beep, then a mid-toned buzzer beep – the menu will display "Preset Deleted".

When loading Presets it is possible to select any of the Load Default, None or any of the 12 Presets:-

Load Default	Clears all Presets to the factory default.
None	
Presets #1-#12*	Loads Presets

*to select Presets #7-#12 use the Alternate key.

10.12 Transitions

It is possible to select from a variety of transition types (Cut, Fade, Push and Wipe) and Settings including Duration.

Cut	Instant take between two sources.
Fade	Duration can be set from .0 Sec to 999.9 Seconds.
Push	Duration can be set from .0 Sec to 999.9 Seconds.
Wipe	Duration can be set from .0 Sec to 999.9 Seconds together with wipe size.

11 TROUBLESHOOTING AND TECHNICAL SUPPORT

If problems are experienced, please read through the symptom topics below in order to resolve the problem. After doing so, if you still need to, contact Technical Support at <http://www.tvone.com/support>. Please have the following details of the problem handy:

Overview	Whether the problem happens only at specific times or has only just started occurring (and what other things have changed at the same time).
Firmware	Firmware revision numbers - found in the first item of the System menu:
I/O	If the problem relates to a specific source or resolution.

12 Frequently Asked Questions

12.1 There is no picture on the Output.

If no LEDs are on, then ensure that the AC power adaptor is connected properly and the power switch is on at the AC outlet. If the Standby/ON LED on the unit is off but another blue LED is active then check that the monitor output from the computer is connected at both the computer and the unit. Check that the output connector you are using from the unit is also connected at the unit and the display equipment. Check that the display video equipment is set to the correct line input and format/standard as appropriate. Check that the device connected to the output is on and can support the resolution set in the Adjust output menu, ensuring that the Sync type e.g. RGBHV, is also set correctly.

12.2 There is excessive flicker on the Output.

Try using a different Flicker reduction mode. Turning the contrast down and the brightness up on the output device can have a large effect on flicker. Or try adjusting the brightness and contrast of the source input by selecting the Input adjust menu.

12.3 The Output image is distorted.

This may occur where some of the areas of the image are very dark and others are very bright. The solution is to adjust the contrast and brightness settings on your Output device to rectify the problem.

12.4 Some colors appear to be incorrect on the CV/YC output

First try altering the color, contrast and brightness settings on your TV or video display. These are usually set up for a very different reason than viewing computer graphics and may need changing to suit. If you cannot achieve exactly what you desire then alter the inputs levels in Adjust sources until the correct colors are restored.

12.5 How can I reduce color smearing on CV connections?

Smearing usually occurs on Composite Video connections and is generally unavoidable - unless you can switch to using S-Video or RGB / YUV connections. It occurs because the brightness and color information is transmitted as one combined (composite) signal and the two parts have to be 'bandwidth-limited' to avoid them interfering with each other – which then reduces the quality.

12.6 I can no longer adjust the Output image resolution.

When the unit is in Genlock mode, the output resolution is fixed to be the same as the Lock source input resolution. If the unit is in Framelock mode then then, although the resolution is unchanged, the output will be locked to the Framelocked Input. During this time the Output image menu item is not displayed.

12.7 The picture on the video display is black and white.

Ensure that all the cables are correctly connected. If you are using a PAL TV to display the output then the unit may be providing resolution set to NTSC mode, or vice versa.

12.8 The picture on the video display is green.

The Output type is probably incorrectly set to YUV mode, whereas you are connecting to an RGB monitor – see Outputs menu.

12.9 The RGB input is selected but the image is rolling or pink.

Check the Adjust sources menu and confirm that the input type and sync method is set correctly. (Having YUV input selected, instead of RGBHV often causes this problem).

12.10 The video signal from my DVD player does not appear to work.

Some DVD players have a switch at the back that selects between 'Component' and 'S-Video' output, because most will not let you output both at the same time. Make sure it is in the right position for the output you want.

12.11 Image is flashing, snow is present, or source image does not appear.

You may be experiencing a HDCP compatibility problem. If one of the sources you are using is HDCP encrypted, and your unit is not set to output HDCP, then your unit will not allow the source image to pass through the unit (it may flash on and off). The solution (if your unit supports HDCP) is to ensure it is enabled in both Outputs and in the Sources menu for that source signal. If your unit does not support HDCP, or your output device does not support HDCP (e.g. an analog monitor), then there is no way to display a HDCP encrypted source signal.

13 RETURN PROCEDURE

Before returning your unit for repair, there are several checks you can make yourself to make sure the problem is actually caused by a failure.

13.1 Trouble Shooting

Many 'faults' are due to incorrect set-up or use so a simple checklist is provided below to help you identify potential problems.

Set the unit up	Use your equipment as described in this manual and run through the checklist. This will hopefully determine whether or not the unit is actually faulty and prevent units from being returned unnecessarily.
Check the FAQ's	Check the Troubleshooting tips of this manual and check out the various FAQ(Frequently Asked Questions) listings on the support website, http://www.tvone.com/support , which shows the latest Hints, Tips and Solutions.
Check the Set up	Don't presume it is the unit that is causing the problem. Check that the equipment being used with it is fully working and setup correctly – bypass the unit if possible by connecting the video source directly to the video display.
Check the AC power	Is it present and is the unit turned on? Check that all cables are properly plugged in and are not damaged and then make certain that all equipment connected to the unit is working properly.
Is the unit frozen?	Perhaps you have a "frozen" unit and you cannot change an input nor exit from the current task. In that case, a simple 'Factory Reset' of the product may sort the problem out. See earlier section on Front panel buttons to do this. Note that all user-settings will be lost following an engineering reset. It is also worth ensuring that the latest firmware is installed in the unit – although, again, user settings are lost during a firmware update.

15.2 To return a unit for repair

First contact TV One using the <http://www.tvone.com/support> website. Support personnel will determine whether a return to the factory is the appropriate solution. If that's the case, a Return Authorization Number will be issued. You should provide the following information for each unit:

Product Type	tvONE C2-2855
Firmware Version	Can be found in the Set Up/Status
Serial Number	To be found on the underside of the unit
Full details of the fault	If you can provide a simple system drawing together with sources and output resolutions and frame rates that will help tvONE to replicate your fault.
Invoice Number	If available

Units should be returned via insured carrier or registered mail (thus allowing a trace to be made if the Processor is lost in transit), with shipping costs and insurance arranged at your own risk and expense. Goods in transit are the responsibility of the sender and the supplier will not be responsible for transit losses.

Please clearly state the return number on the outside packaging and on any accompanying documentation. This will greatly speed up processing. DO NOT return a unit for warranty repair without first obtaining a Return Authorization Number. No action will be taken on a unit returned in warranty for repair without a Return Authorization Number

14 WARRANTY POLICY

14.1 Limited Warranty

With the exceptions noted in the next paragraph, tvONE warrants the original purchaser that the equipment it manufactures or sells will be free from defects in materials and workmanship for a period of five years from the date of purchase. Should this product, in TV One's opinion, prove defective within this warranty period, TV One, at its option, will repair or replace this product without charge. Any defective parts replaced become the property of TV One. This warranty does not apply to those products which have been damaged due to accident, unauthorized alterations, improper repair, modifications, inadequate maintenance and care, or use in any manner for which the product was not originally intended. Items integrated into TV One products that are made by other manufacturers, notably computer hard drives and display panels, are limited to the term of the warranty offered by the respective manufacturers. Such specific warranties are available upon request to tvONE. If repairs are necessary under this warranty policy, the original purchaser must obtain a Return Authorization Number from tvONE and return the product to a location designated by tvONE, freight prepaid. After repairs are complete, the product will be returned, freight prepaid.

14.2 Limitations

All products sold are "as is" and the above Limited Warranty is in lieu of all other warranties for this product, expressed or implied, and is strictly limited to five years from the date of purchase. tvONE assumes no liability to distributors, resellers or end-users or any third parties for any loss of use, revenue or profit. tvONE makes no other representation of warranty as to fitness for the purpose or merchantability or otherwise in respect of any of the products sold. The liability of tvONE with respect to any defective products will be limited to the repair or replacement of such products. In no event shall TV One be responsible or liable for any damage arising from the use of such defective products whether such damages be direct, indirect, consequential or otherwise, and whether such damages are incurred by the reseller, end-user or any third party.