KRAMER





PA-120Z / PA-240Z Quick Start Guide


This guide helps you install and use your **PA-120Z / PA-240Z** for the first time.


Go to <u>www.kramerav.com/downloads/PA-240Z</u> to download the latest user manual and check if firmware upgrades are available.

Step 1: Check what's in the box

PA-120Z / PA-240Z 120W / 240W Power Amplifier 4 Rubber feet

Step 2: Get to know your PA-120Z / PA-240Z

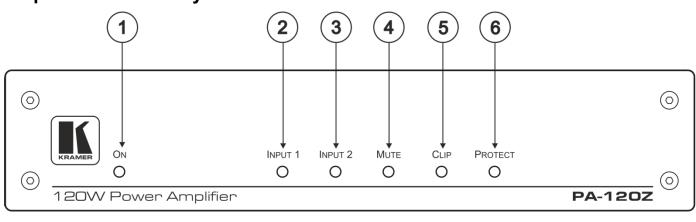

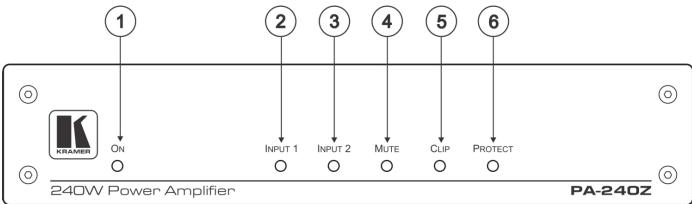

#	Feature	Function	
1	ON LED	Lights green when powered on, orange when in standby.	
2	INPUT 1 LED	Lights green when a signal is present on input 1.	
3	INPUT 2 LED	Lights green when a signal is present on input 2.	
4	MUTE	Lights red when the output is muted, off when unmuted.	
5	CLIP LED	Lights red when the signal is clipped on the output and creating distortion.	
		(When clipping is detected, lower the volume until the LED turns off.)	
6	PROTECT LED	Lights red in case of over current / short / over heat.	
		The device powers down until operation conditions are corrected and then powers up again.	






PA-120Z / PA-240Z Quick Start (P/N: 2900-300802QS REV 3)

208

Rev.

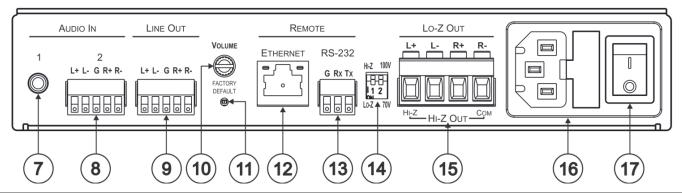

#	Feature		Function	
7	AUDIO IN Connectors	Unbalanced Stereo Audio 3.5mm mini jack	Connect to an unbalanced stereo audio source.	
8		balanced Stereo Audio 5-pin Terminal Block Connector	Connect to a line-level, balanced, stereo audio source.	
9	LINE OUT Balanced Stereo Audio 5-pin Terminal Block Connector		Connect to a balanced, stereo audio acceptor (for example, amplified speakers).	
10	VOLUME Attenuator		Master volume for speaker output – rotate to set the maximum amplifier volume.	
11	FACTORY DEFAULT Button		Press to return to the factory default settings, including all the configurations and network settings.	
12	ETHERNET RJ-45 Connector		Connect to an ETHERNET LAN.	
13	RS-232 (G, Tx, Rx) Port		Connect to an RS-232 connector on A/V equipment or a PC or other Serial Controller.	
14	Hi-Z/Lo-Z and 100V/70V DIP-Switches		Set to Hi-Z for high impedance and Lo-Z for low impedance. In Hi-Z, set to 70V or 100V.	
15	Lo-Z/Hi-Z Out Terminal Block Connectors		Z/Hi-Z Out Terminal Block Connectors Lo-Z – connect stereo output to Lo-Z speakers: L+ and L- to the left speaker; R+R- to the right speaker. Hi-Z (70V or 100V) – connect Hi-Z and COM to mono Hi-Z speakers. Speaker can output either the left side of the audio input or reduce the stereo input mono signal (via webpages).	
16	Power Conne	ctor with Fuse	AC connector, enabling power supply to the unit.	
17	Mains Power Switch		Switch for turning the device on or off.	


Step 3: Install the PA-120Z / PA-240Z

Install **PA-120Z / PA-240Z** using one of the following methods:


- Mount the unit in a rack using an optional **RK-1** rack adapter.
- Attach the rubber feet and place the unit on a flat surface.


Step 4: Connect the inputs and outputs

Always switch OFF the power on each device before connecting it to your **PA-120Z / PA-240Z**. For best results, we recommend that you always use Kramer high-performance cables to connect AV equipment to the **PA-120Z / PA-240Z**.

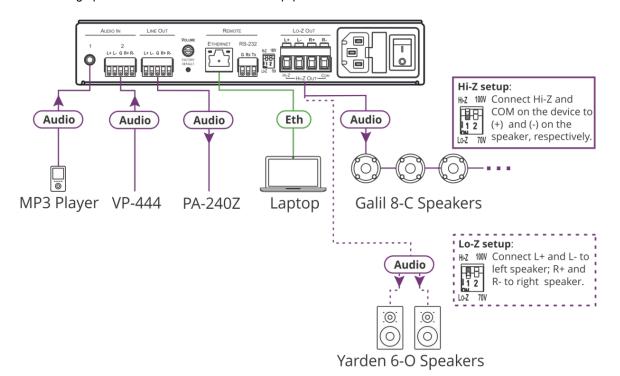

RJ-45 Pinout:

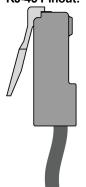

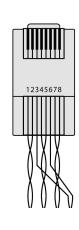


PIN E	PIN EIA /TIA 568B		
PIN	Wire Color		
1	Orange / White		
2	Orange		
3	Green / White		
4	Blue		
5	Blue / White		
6	Green		
7	Brown / White		
8	Brown		

Connect the audio line out:

To a balanced stereo audio acceptor:


LINE OUT

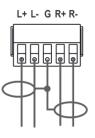

To a balanced stereo audio source:


To an unbalanced stereo audio acceptor:

LINE OUT

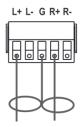


To an unbalanced stereo audio source:

Audio In

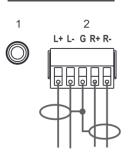

AUDIO IN

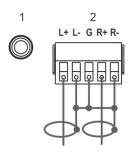

Step 5: Connect the power

Connect the power cord to PA-120Z / PA-240Z and plug it into the mains electricity.

Safety Instructions




Caution: There are no operator serviceable parts inside the unit. **Warning:** Use only the power cord that is supplied with the unit.

Warning: Do not open the unit. High voltages can cause electrical shock! Servicing by qualified personnel only.

Warning: Disconnect the power and unplug the unit from the wall before installing.

See www.KramerAV.com for updated safety information.

Step 6: Control PA-120Z / PA-240Z via the embedded web pages

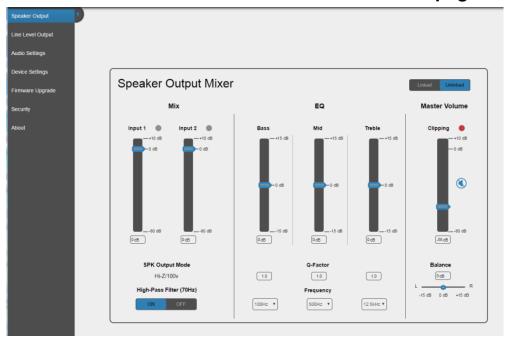

RS-232						
Protocol 3000						
Baud Rate:	115,20	00 Stop Bits:	1			
Data Bits:	8	Parity:	None			
Change the volume of input 2 to -10 DB			#X-AUD-LVL 1,2,-10			
TCP/IP Parar	neters					
IP Address:		192.168.1.39	Maximum UDP Connections:	Unlimited	UDP Port #:	50000
Subnet mask: 255.255.000.000		Maximum TCP Connections:	Unlimited	TCP Port #:	5000	
Default gateway: 192.168.0.1		Default Username / Password:	Admin / Admin			
Full Factory	Reset					
Protocol 3000	DO Excluding ETH: use "#FACTORY" command and use "#RESET" to restore the factory default values.					

Technical Specifications

	PA-120Z	PA-240Z			
Input:	1 unbalanced stereo on a 3.5mm connector				
	1 balanced stereo +4dBu/10kΩ on a 5-pin terminal block				
Output:	1 balanced stereo line level on a 5-pin terminal block				
	1 stereo or 1 mono speaker output on a 4-pin large terminal block				
Input Sensitivity:	Full power @ 0.3V (-10dBV)				
Output Power:	2 x 60W @ 4Ω or 8Ω	2 x 120W @ 4Ω or 8Ω			
	1 x 120W @ 70V or 100V	1 x 240W @ 70V or 100V			
Amplifier Type:	Class D	Class D			
Maximum Voltage Gain:	26dB SE / 32dB BTL				
Dynamic Range	119dB				
Frequency Response	20Hz to 20kHz @ +/-1dB				
S/N Ratio:	80dB -10dBV, 20 Hz - 20 kHz				
Controls:	Screw trimmer amplifier attenuator, IP and RS-232				
Audio THD + Noise:	THD+N (1kHz @ 1W) 0.003 %				
Audio 2nd Harmonic:	0.08% @ 75W RMS @ 4Ω 6.67kHz				
Power Source:	Universal mains operational voltage	Universal mains operational voltage			
	85VAC – 265VAC	85VAC - 265VAC (full power at 120V - 230V)			
Total System Efficiency	89.2%	89.5%			
Dimensions:	ensions: 21.2cm x 22.8cm x 4.3cm (8.35" x 8.98" x 1.69") W, D, H				
Weight:	1.0kg (2.2lbs) approx.				
Included Accessories:	Power cord	Power cord			
Options:	RK-1 rack adapter				
Specifications are subject to ch	ange without notice at www.kramerav.com				

 ϵ

