

## **Soundtube Activator Buttons Activator buttons for use with the Smart Amp**

The 701-AB Activator buttons are normally-open or normally-closed circuit activator buttons made from durable ABS plastic. They are video-arcade tough, and mount into any 3/4" thick substrate. Installation is simple, and only requires drilling a 1 1/8" diameter hole. 16 or 18 gauge speaker wire is needed to connect buttons to sound source. The 701-AB Activator Buttons are available in red (item AB-701-R), white (item AB-701-W), or black (item AB-701-B). The 701-AB Activator buttons are normally-open or normally-closed circuit activator buttons made from durable ABS plastic. They are video-arcade tough, and mount into any 3/4" thick substrate. Installation is simple, and only requires drilling a 1 1/8" diameter hole. 16 or 18 gauge speaker wire is needed to connect buttons to sound source. The 701-AB Activator Buttons are available in red (item AB-701-R), white (item AB-701-W), or black (item AB-701-B).