



MPX 50 User Manual

Contents

Front and Rear panel	- 3 -
Remote Control.....	- 4 -

1

MPX50 HD Media Player Instructions

Safety guide:

- . No user serviceable parts inside, do not open case.

Front and Rear panel

The front panel provides the IR receiver and LED indicator. USB port and SD card slot are on the right. Five buttons from up to down are: on/off, next, down, return, and OK. When power on, LED light becomes red.

From left to right: 5.2V DC, AV output, VGA output, OPTICAL and HDMI output.

Please connect the TV with TV cable. For a better effect, please use HDMI cable to connect. Also the device supports VGA output.



IR Receiver
LED Indicator

Power On/Off
Menu Navigation

USB Slot
SD Slot



Power Input
Analog stereo audio, composite video output
VGA output
Optical audio output (future ready)
HDMI output

Remote Control



POWER: on/off key. Toggle between standby and on

MUTE: Toggle audio mute

Info: Provides detailed information about current playback file. Toggle to clear.

PREV,NEXT: Starts previous or next file.

REV,FWD: backward or forward at 1.5x, 2x, 4x, 8x, 16x, 32x

Return: Stops current file and displays OSD with current file folder.

Setup: Displays Settings OSD. Language, Screen Saver, Video output mode, Audio output mode, Auto Play, Auto Detect HDMI, Restore Auto Default Setting.

OK: Play or confirm key.

Ratio: Select screen ratios: Full Screen, Original File Size, 4:3, 16:9, Fit View

OSD: display control menu when playing movies, music, or picture.

Audio: Select Mono L, Mono R, or Stereo output

VOL- and <VOL+: Adjust the output volume.

SUB-T: Toggle subtitle On/Off

Zoom: Zoom in the picture or video.

Rotate: Rotate the pictures

GO-TO: Set up the start point time for playing video.

Repeat: Repeat settings: Repeat Once, Repeat One, Repeat All, Repeat Random

Movie, Music, File, Photo: Shortcut to relative folder.

CVBS: Select AV output. Note: This will disable the other video outputs.


YUV: Note: This device does not support YUV

VGA: Select VGA output. Note: This will disable the other video outputs.

HDMI: Selects HDMI output. Note: This will disable the other video outputs.

Setup

Setup allows you to determine the default startup file type under Auto Play, e.g. videos, pictures, music.

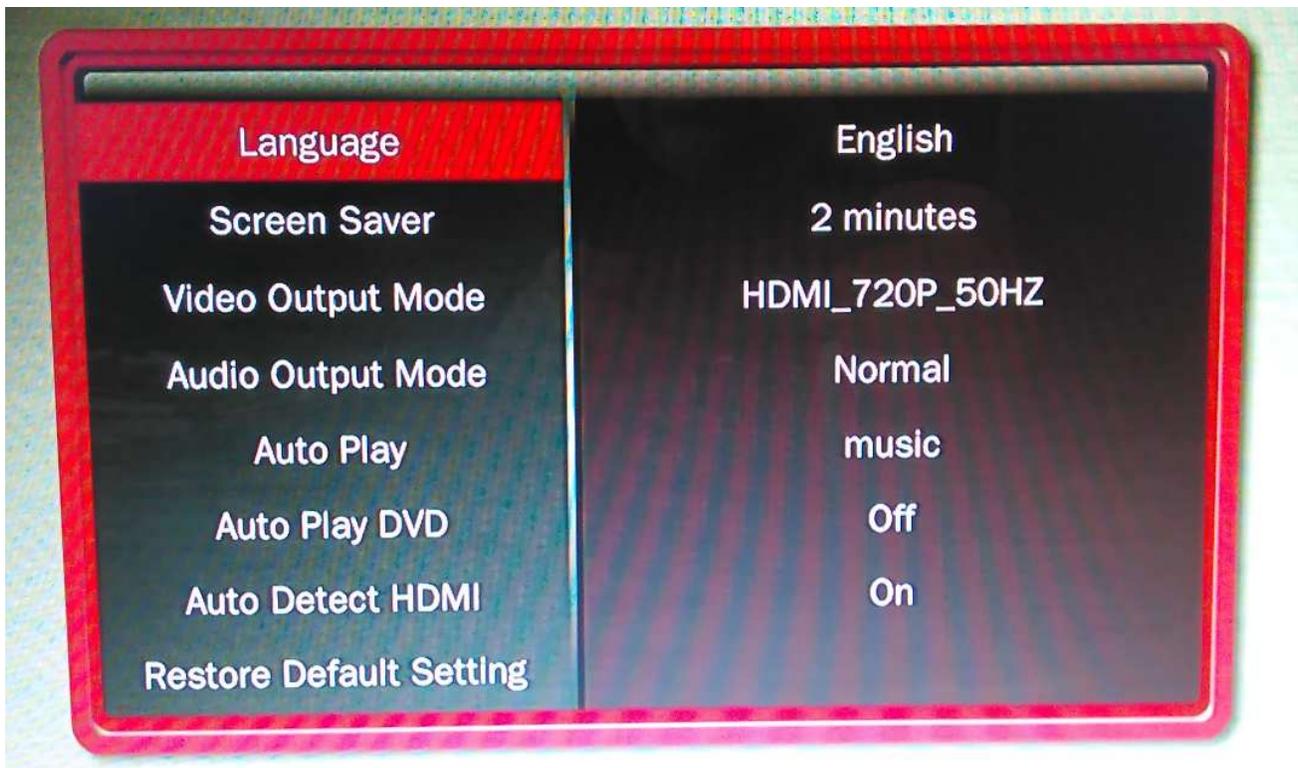

Video

As described in the Setup section, it is possible to have the MPX50 automatically start playing videos at the point you insert an SD or USB drive containing videos.

Photos / Pictures

As described in the Setup section, it is possible to have the MPX50 automatically start playing a picture slide show at the point you insert an SD or USB drive containing pictures.


Music

Click Music icon and press <Ok> to enter or press Music button on remote. Music can be chosen from USB or SD card:



Enter into USB Device or smart card, all files and music can be seen. Choose one music and press <OK> to play.

When playing, press <OSD> button on remote and a control bar will be shown as below:
EQ mode, Lyric focus color, lyric unfocus color, and lyric play mode can be chosen.

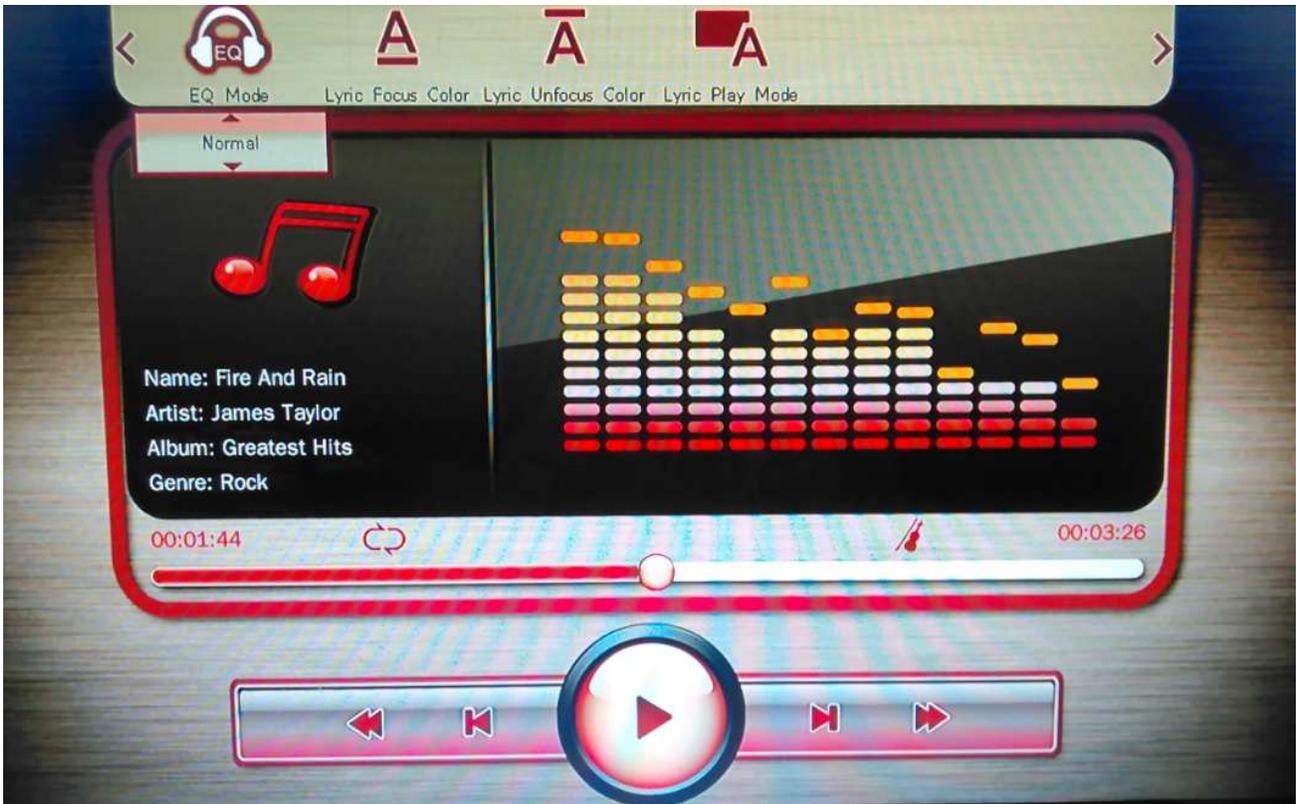

NOTE:

1. After press< OSD> button without any other operations, the control bar will disappear only <Return> button has pressed. It will not affect the continuous play. 9 of 14

2. The device supports lyric display if music file has accompanying lyric file..

For example:

Song name: Hero.mp3

Lyric name: Hero.lyc

Or no lyric will be shown only wave stripe

3. The device supports background music function. Press music icon and choose one song to play, then press< Photo>on remote to choose any photo to watch. At the moment playing music while watching photos. Press<Stop> button to stop background music.

Background music is loop playback. Music and photos can be stored in the same disc or not.

4. FILE

Click File icon and press<Ok>to enter or press File button on remote. Files can be chosen from USB or SD card:

Enter into USB Device or smart card, all files can be seen. Choose any file and press <OK> to play.

A file with “! ”in front means the player does not support this format.

setting

Click setting icon and press<Ok>to enter or press <Setup>button on remote.

Language

The player supports Simplified Chinese, traditional Chinese, English, Russian, Portuguese, Spanish, Korean, Japanese etc

Screen saver

Set time for when screen saver appears. The screen saver is for when player is not playing video or pictures, audio, or during audio playback. You can turn off the screen saver as well.

Video Output Mode

Set video output format

PAL

NTSC

HDMI

VGA

Audio output mode

Set Audio Output to SPDIF LPCM, or RAWDATA

Autoplay

Off

Movies

Music

Photos

Auto play DVD

NA

Restore default setting

Restore all parameters to the factory state.

RTCTIMER Setup

The device can set the system time in order to auto play/off.

AUTO POWER SETUP PAGE

Set the time to auto on/off and 4 groups of time can be set. Workday can be chosen from every day, except weekend, and except Sunday. The time format is 24 hours. 13 of 14

Specifications

1. Supports plug-in large capacity SATA or IDE hard disk or USB disk, plug and play.
2. Supports SD card.

Video Output

- NTSC
- PAL
- VGA 720P
- HDMI720P
- 1080P high definition video output.

Video File Formats

- RMVB/RM (RV8/9)
- h.263
- h.264 (MOV/MP4/M4V)
- MPEG-1/2(VOB)
- MPEG-4(XVID/DIVX)
- WMV7/VC-1
- MKV
- AVI
- TS/TP
- VOB
- PMP
- FLV 1920*1080P

Audio Formats

- MP3
- WMA
- AFE
- FLAC
- OGG
- APE
- AAC
- AC3 and DTS

Photo/Pictures

- JPEG
- GIF
- BMP
- PNG

Language Support

- Simplified/ Traditional Chinese
- Japanese

- Korean
- Russian
- Spanish
- English

Subtitle

- multi-track and multi-subtitle video file.
- Switching soundtrack and subtitle at will.

External 5.2V/1.5A DC powers supply.