



H2X/H2XC Matrix Switcher API

MX-1010-HDBT-H2X | MX-1616-HDBT-H2X | MX-1010-H2XC | MX-1616-H2XC

Application Programming Interface

Document Revision:	V2.0
Document Date:	June 20 th 2018
Supported Firmware:	v1.0.0 or higher

Contents

1. Overview.....	3
1.1 Before You Begin	3
2. Wiring and Communication Configuration.....	4
2.1 RS-232 Connections.....	4
2.2 Serial and IP Settings	4
3. Command Elements.....	5
4. Matrix Function Commands.....	6
4.1 Audio/Video Output Control.....	6
Video Switching	6
Audio Switching	6
Audio Output Volume Control.....	6
Audio Delay Configuration	7
Audio Output EQ	7
Scene Save and Recall	7
4.2 Display Power Control	8
5. Matrix Configuration.....	9
5.1 Input/Output Specific Functions	9
HDCP Configuration.....	9
EDID Configuration.....	9
EDID Parameter Table	10
5.2 Global Matrix Functions	11
IR Call Back Enable/Disable.....	11
Long Reach Cable Mode	11
IR System Codes	11
Matrix Switching Mode.....	11
AVR Priority Mode (Theater Zone Locking).....	12
Source Zone Lockout.....	12
Source Zone Lockout Parameter Table.....	13
6. Controlling Remote Devices over HDBaseT.....	14
6.1 Routing Command Syntax.....	14
6.2 Card Slot Values	14
6.3 Baud Rate Values	15
6.1 Command Length HEX.....	16
7. Diagnostic Troubleshooting.....	17
Cable Connections and Link Quality.....	17
Matrix Card and Internal Component Status	17
Rebooting and Restoring Defaults.....	18
8. Contacting Technical Support.....	19
9. Revision History	19
Publication Disclaimer.....	20

1. Overview

The following document contains the Application Program Interface (API) commands to control an H2X matrix via serial and IP commands. Read this document in its entirety before starting any communication with the product.

1.1 Before You Begin

Verify that the following items are on hand and that all documentation is reviewed before continuing.


- An H2X or H2XC Matrix ☐
MX-1010-HDBT-H2X | MX-1616-HDBT-H2X | MX-1010-H2XC | MX-1616-H2XC
- Control System and Control System Documentation ☐
- PC or Mac for Configuring Product and Telnet Communications..... ☐
- Network Connection with Network Passwords..... ☐
- Visit the Product Page on WyreStorm.com to download firmware and additional product information ☐

2. Wiring and Communication Configuration

WyreStorm recommends that all wiring for the installation is run and terminated prior to making connections to the switcher. Read through this section in its entirety before running or terminating the wires to ensure proper operation and to avoid damaging equipment.

2.1 RS-232 Connections

The following wiring diagrams show the pinouts for the switcher. While not shown, connect the TX (transmit) to RX (receive) pins at the control system or PC side of the cable. Most control systems and computers are configured for Digital Terminal Equipment (DTE) where pin 2 is RX and pin 3 is TX. This can vary from device to device, refer to the documentation for the connected device for pin functionality to ensure that the correct connections can be made.

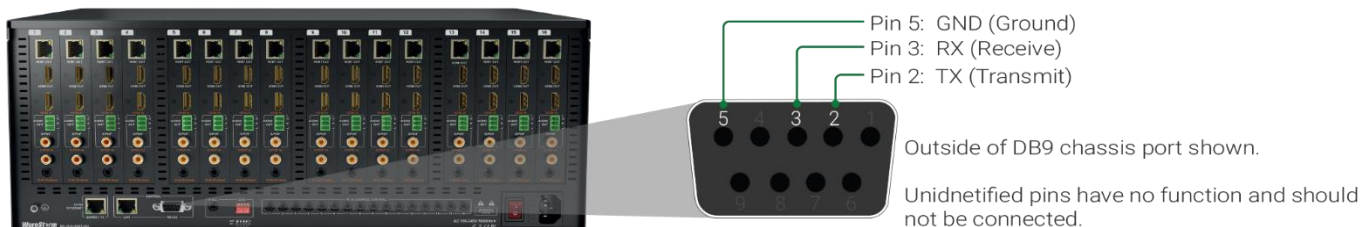

2.2 Serial and IP Settings

Baud rate:	57600
Data Bits:	8bits
Parity:	None
Stop Bits:	1bit
Flow Control:	None
Default IP Address:	192.168.11.143
Default IP Port:	23

3. Command Elements

- Command Type: ASCII
- Key Words are Case Sensitive
- prm = optional parameters
- in = Video Input (HDMI/HDBaseT)
- out = Video Output (HDMI/HDBaseT)
- aout = Audio Output
- Command termination requires <CR><LF>

Example: SET AUTOCEC_D **out prm** <CR><LF>

4. Matrix Function Commands

4.1 Audio/Video Output Control

Video Switching

Action	Command	Parameters
Switch Video Input to Output	Command: SET SW in out <CR><LF> Return: SW in# out# <CR><LF> Example: Send Input 2 to Output 6 SET SW in2 out6 <CR><LF> Returns: SW in2 out6 <CR><LF>	in = {in1~in16} out = {out1~out16, all}
Query Video Input Mapping	Command: GET MP out <CR><LF> Return: MP in# out# <CR><LF> Example: Input 2 sent to Output 6 MP in2 <CR><LF> Returns: MP in2 out6 <CR><LF>	in = {in1~in16} out = {out1~out16, all}

Audio Switching

Action	Command	Parameters
Switch Audio Input to Output	Command: SET AUDIOSW in out <CR><LF> Return: AUDIOSW in# out# <CR><LF> Example: Send S/PDIF Audio 2 to Audio Out 6 SET AUDIOSW spdif2 audioout6 <CR><LF> Returns: AUDIOSW spdif2 audioout6 <CR><LF>	in = {hdmi1~hdmi16, spdif1~spdif16, arc1~arc16} out = {audioout1~audioout16, all}
Query Audio Input Mapping	Command: GET AUDIOMP out <CR><LF> Return: AUDIOMP in out <CR><LF> Example: S/PDIF Audio 2 sent to Audio Out 6 AUDIOMP spdif2 audioout6 <CR><LF> Returns: AUDIOSW spdif2 audioout6 <CR><LF>	in = {hdmi1~hdmi16, spdif1~spdif16, arc1~arc16} out = {audioout1~audioout16, all}

Audio Output Volume Control

Action	Command	Parameters
Adjust Volume	Command: SET VOLGAIN_DATA aout prm <CR><LF> Return: VOLGAIN_DATA aout prm <CR><LF> Example: Set volume of audio out 10 to -5 SET VOLGAIN_DATA audioout10 -5 <CR><LF> Returns: VOLGAIN_DATA audioout10 -5 <CR><LF>	aout = {audioout1~audioout16, all} prm = {-10~10} // -10 = -10dB, 10 = 10dB, default value is 0 dB.
Query Current Volume Level	Command: GET VOLGAIN_DATA aout <CR><LF> Return: VOLGAIN_DATA aout prm <CR><LF> Example: Volume of audio out10 set to -5 VOLGAIN_DATA audioout10 <CR><LF> Returns: VOLGAIN_DATA audioout10 -5 <CR><LF>	aout = {audioout1~audioout16, all} prm = {-10~10} // -10 = -10dB, 10 = 10dB, default value is 0 dB.
Mute Audio	Command: SET MUTE aout prm <CR><LF> Return: MUTE aout prm <CR><LF> Example: Mute audio out 10 SET MUTE audioout10 on <CR><LF> Returns: MUTE audioout10 on <CR><LF>	aout = {spdifout1~spdifout16, audioout1~audioout16, all} prm = {on, off} // on means mute; off means unmute.
Query Current Audio Mute State	Command: GET MUTE aout <CR><LF> Return: MUTE AOUT prm <CR><LF> Example: Audio out 10 is muted MUTE audioout10 <CR><LF> Returns: MUTE audioout10 on <CR><LF>	aout = {spdifout1~spdifout16, audioout1~audioout16, all} prm = {on, off} // on means mute; off means unmute.

Audio Delay Configuration

Action	Command	Parameters
Set Audio Output Delay Time	Command: SET AUDIO_D aout prm <CR><LF> Return: AUDIO_D aout prm <CR><LF> Example: Set Audio Out 10 to 50ms AUDIO_D audioout10 50 <CR><LF> Returns: AUDIO_D audioout10 50	aout = {audioout1~audioout16, all} prm = {0~500} // prm numbers are in milliseconds (ms) with default wait time of 2 minutes, entering a 0 will set no delay.
Query Audio Output Delay Time	Command: GET AUDIO_D aout <CR><LF> Return: AUDIO_D aout prm <CR><LF> Example: Query delay on Audio Out 10 GET AUDIO_D audioout10 <CR><LF> Returns: AUDIO_D audioout10 50	aout = {audioout1~audioout16, all} prm = {0~500} // prm numbers are in milliseconds (ms) with default wait time of 2 minutes, entering a 0 will set no delay.

Audio Output EQ

Action	Command	Parameters
Enable EQ	Command: SET EQ_FN aout prm <CR><LF> Return: EQ_FN aout prm <CR><LF> Example: Enable EQ on Audio Out 10 SET EQ_FN audioout10 on <CR><LF> Returns: EQ_FN audioout10 on <CR><LF>	aout = {audioout1~audioout16, all} prm = {on, off}; // on means enable, off means bypassed.
Query EQ Function Status (On/Off)	Command: GET EQ_FN aout <CR><LF> Return: EQ_FN aout <CR><LF> Example: EQ on Audio Out 10 is enabled GET EQ_FN audioout10 <CR><LF> Returns: EQ_FN audioout10 on <CR><LF>	aout = {audioout1, audioout2,...audioout16, all} prm = {on, off} // on means enabled, off means bypassed.
Set Audio Out EQ Level	Command: SET AUDIO_EQ out freq gain <CR><LF> Return: AUDIO_EQ out freq gain <CR><LF> Example: EQ frequency 500 on Audio Out 10 to 5db SET AUDIO_EQ audioout10 500 5 <CR><LF> Returns: AUDIO_EQ audioout10 500 5 <CR><LF>	aout = {audioout1~audioout16, all} freq = {31, 62, 125, 250, 500, 2000, 4000, 8000, 16000} // frequencies are in Hz, 62=62Hz, 8000=8kHz gain={-10~10} // gain is in db, -10=-10db, 10=10db
Query Audio Out EQ Level	Command: GET AUDIO_EQ out freq <CR><LF> Return: AUDIO_EQ out freq gain <CR><LF> Example: Query EQ frequency and gain of Audio Out 10 GET AUDIO_EQ audioout10 <CR><LF> Returns: AUDIO_EQ audioout10 500 5 <CR><LF>	aout = {audioout1~audioout16, all} freq = {31, 62, 125, 250, 500, 2000, 4000, 8000, 16000} // frequencies are in Hz, 62=62Hz, 8000=8kHz gain={-10~10} // gain is in db, -10=-10db, 10=10db

Scene Save and Recall

Action	Command	Parameters
Save Scene	Command: SAVE PRESET prm <CR><LF> Return: PRESET prm <CR><LF> Example: Save current audio and video settings to scene 5 SAVE PRESET 5 <CR><LF> Returns: PRESET 5 <CR><LF>	prm = {1~20}
Recall Scene	Command: RESTORE PRESET prm <CR><LF> Return: PRESET prm <CR><LF> Example: Recall audio and video settings stored in scene 5. RESTORE PRESET 5 <CR><LF> Returns: PRESET 5 <CR><LF>	prm = {1~20}

4.2 Display Power Control

Action	API Command Reference	Parameters
Power Display On/off	Command: SET CEC_PWR out prm <CR><LF> Return: CEC_PWR out prm <CR><LF> Example: Power on display on HDBT Out 10 SET CEC_PWR hdbtout10 on <CR><LF> Returns: CEC_PWR hdbt10 on <CR><LF>	prm = {on, off} out = {hdmiout1~hdmiout16, hdbtout1~hdbtout16, all} // all includes hdmiout1~hdmiout16 and hdbtout1~hdbtout16
Query CEC Power Status	Command: GET CEC_PWR out <CR><LF> Return: CEC_PWR out prm <CR><LF> Example: Display on HDBT Out 10 is On CEC_PWR hdbtout10 <CR><LF> Returns: CEC_PWR hdbt10 on <CR><LF>	prm = {on, off} out = {hdmiout1~hdmiout16, hdbtout1~hdbtout16, all} // all includes hdmiout1~hdmiout16 and hdbtout1~hdbtout16
Set CEC Power Delay Time	Command: SET AUTOCEC_D out prm <CR><LF> Return: AUTOCEC_D out prm <CR><LF> Example: Set delay time of HDBT 5 to 1 minute SET AUTOCEC_D hdbt5 1 <CR><LF> Returns: AUTOCEC_D hdbt5 1	prm = {0~30} // prm numbers are in minutes with default wait time of 2 minutes, entering a 0 will power off the display immediately if there is no active signal.
Query CEC Power Delay Time	Command: GET AUTOCEC_D out prm <CR><LF> Return: AUTOCEC_D out prm <CR><LF> Example: Delay time of display on HDBT 5 set to 1 minute GET AUTOCEC_D hdbt5 <CR><LF> Returns: AUTOCEC_D hdbt5 1	prm = {0~30} // prm numbers are in minutes with default wait time of 2 minutes, 0 will power off the display immediately if there is no active signal.

 
5. Matrix Configuration

5.1 Input/Output Specific Functions

HDCP Configuration

Action	Command	Parameters
Set Input HDCP On/Off	Command: SET HDCP_S in prm <CR><LF> Return: HDCP_S in prm <CR><LF> Example: Turn On HDCP for input 5 SET HDCP_S 5 on <CR><LF> Returns: HDCP_S 5 on <CR><LF>	in = {in1~in16, all} prm = {on, off}
Query Input HDCP Status	Command: GET HDCP_S in <CR><LF> Return: HDCP_S in prm <CR><LF> Example: Query HDCP status for input 5 GET HDCP_S 5 <CR><LF> Returns: HDCP_S 5 on <CR><LF>	in = {in1~in16, all} prm = {on, off}

EDID Configuration

Action	Command	Parameters
Note: The following settings require that the rear panel dipswitches are set to Front Panel, Web UI or API EDID Control {0000}. 		
Query EDID Dip Switch Status	Command: GET EDID_DIP<CR><LF> Return: EDID_DIP prm <CR><LF> Example: Query HDCP dip switch status GET EDID_DIP<CR><LF> Returns: EDID_DIP 10 <CR><LF>	prm = {0~15}
Set Input EDID	Command: SET EDID in prm <CR><LF> Return: EDID in prm <CR><LF> Example: Set input 5 to 4K@30 5.1ch HDR SET EDID in5 23 <CR><LF> Returns: EDID in5 23 <CR><LF>	in = {in1~in16, all} prm = {See EDID Parameter Table .}
Query All Inputs EDID status	Command: GET EDID all <CR><LF> Return: EDID in prm <CR> EDID in prm <CR> ~ EDID in prm <CR><LF> Example: Query HDCP status for all inputs GET EDID all <CR><LF> Returns: EDID in1 22 <CR> EDID in2 16 <CR> ~ EDID in16 23 <CR><LF>	in = {in1~in16, all} prm = {See EDID Parameter Table .}

EDID Parameter Table

Function	Code
Copy form output #	00~15
Fix 1080P 2ch	16
Fix 1080P 5.1	17
Fix 1080P 7.1	18
Fix 4K@30 2ch 8bit	19
Fix 4K@30 5.1	20
Fix 4K@30 7.1	21
Fix 4K@30 2ch HDR	22
Fix 4K@30 5.1ch HDR	23
Fix 4K@30 7.1ch HDR	24
Fix 4K@60 2ch	25
Fix 4K@60 5.1	26
Fix 4K@60 7.1	27
Fix 1920x1200 2ch	28
Fix 1920x1200 with no audio	29
Smart EDID	30

5.2 Global Matrix Functions

IR Call Back Enable/Disable

Action	Command	Parameters
Set IR Call Back Control	Command: SET IRBACK_FN prm <CR><LF> Return: IRBACK_FN prm <CR><LF> Example: Turn On IR Call Back SET IRBACK_FN on <CR><LF> Returns: IRBACK_FN on <CR><LF>	prm = {on, off}
Query IR Call Back Status	Command: GET IRBACK_FN <CR><LF> Return: IRBACK_FN prm <CR><LF> Example: IR Call Back is On GET IRBACK_FN <CR><LF> Returns: IRBACK_FN on <CR><LF>	prm = {on, off}

Long Reach Cable Mode

Action	Command	Parameters
Used to extend the reach of HDBT when problems occur on longer cable runs.		
Set Long Reach mode on/off	Command: SET LR_FN prm1 prm2 <CR><LF> Return: LR_FN prm1 prm2 <CR><LF> Example: Turn on Long Reach Mode SET LR_FN hdbtall on <CR><LF> Returns: LR_FN hdbtall on <CR><LF>	prm1 = {hdbtall} prm2 = {on, off}
Query Long Reach mode status	Command: GET LR_FN prm1 <CR><LF> Return: LR_FN prm1 prm2 <CR><LF> Example: Long Reach Mode is On GET LR_FN hdbtall <CR><LF> Returns: LR_FN hdbtall on <CR><LF>	prm1 = {hdbtall} prm2 = {on, off}

IR System Codes

Action	Command	Parameters
Allows for the use of 4E codes in addition to the standard 00 codes. This should only be used when IR from 3 rd party devices interferes with the operation of the matrix.		
Set IR System Codes	Command: SET IR_SYSCODE prm1 <CR><LF> Return: IR_SYSCODE prm1 <CR><LF> Example: Set IR Systems codes to 4E. SET IR_SYSCODE 4E <CR><LF> Returns: IR_SYSCODE 4E <CR><LF>	prm1 = {00, 4E, all} //all allows the matrix to respond to 00 and 4E code sets. Note that the remote included with the matrix will need to be set to send 4E commands when 4E is selected.
Query IR System Codes	Command: GET IR_SYSCODE <CR><LF> Return: IR_SYSCODE prm1 <CR><LF> Example: IR System Codes set to 4E GET IR_SYSCODE <CR><LF> Returns: IR_SYSCODE 4E <CR><LF>	prm1 = {00, 4E, all} //all allows the matrix to respond to 00 and 4E code sets. Note that the remote included with the matrix will need to be set to send 4E commands when 4E is selected.

Matrix Switching Mode

Action	Command	Parameters
Allows for adjust of the switching time between input selection and when the image appears on the display. This should only be used if there is an issue with the operation of matrix switching.		
Set Matrix Switching Mode	Command: SET SW_M prm <CR><LF> Return: SW_M prm <CR><LF> Example: Set switching mode to normal. SET SW_M normal <CR><LF> Returns: SW_M normal <CR><LF>	prm = {normal, quick}

Action	Command	Parameters
Query Matrix Switching Mode	Command: GET SW_M <CR><LF> Return: SW_M prm <CR><LF> Example: Switching Mode set to normal. GET SW_M <CR><LF> Returns: SW_M normal <CR><LF>	prm = {normal, quick}

AVR Priority Mode (Theater Zone Locking)

Action	Command	Parameters
Allows for setting AVR Priority mode remotely when an AVR is connected to the matrix in a particular zone.		
Set AVR Priority Mode for an output.	Command: SET ZONE_LOCK out prm <CR><LF> Return: ZONE_LOCK out prm <CR><LF> Example: Turn on AVR priority mode for output 10. SET ZONE_LOCK hdbt10 on <CR><LF> Returns: ZONE_LOCK hdbt10 on <CR><LF>	Prm1 = {hdmiout1~hdmiout16, hdbtout1~hdbtout16, all} Prm2 = {on, off}
Query AVR Priority Mode status for an output.	Command: GET ZONE_LOCK out <CR><LF> Return: ZONE_LOCK out prm <CR><LF> Example: AVR priority mode for output 10 is On. SET ZONE_LOCK hdbt10 <CR><LF> Returns: ZONE_LOCK hdbt10 on <CR><LF>	Prm1 = {hdmiout1~hdmiout16, hdbtout1~hdbtout16, all} Prm2 = {on, off}

Source Zone Lockout

Action	Command	Parameters
Allows for selecting a source to be accessible within a particular zone.		
Note: The parameters listed will set a single, odd numbered, even numbered, or all sources to be available in a particular zone. To create strings for custom configurations, use the H2X Source Lockout Command Calculator .		
Select Sources a Zone Can Access	Command: SET ZONE_R out prm <CR><LF> Return: ZONE_R out prm <CR><LF> Example: Select odd number sources for out 10. SET ZONE_R out10 AAAA <CR><LF> Returns: ZONE_R out10 AAAA <CR><LF>	Out = {out1~16, all} Prm = {See Source Zone Lockout Parameter Table }
Query Sources a Zone Can access	Command: GET ZONE_R out <CR><LF> Return: ZONE_R out prm <CR><LF> Example: .Query sources available to zone 10. GET ZONE_R out10 <CR><LF> Returns: ZONE_R out10 0100 <CR><LF>	Out = {out1~16, all} Prm = {See Source Zone Lockout Parameter Table }

Source Zone Lockout Parameter Table

Source	Parameter
In1	0001
In2	0002
In3	0004
In4	0008
In5	0010
In6	0020
In7	0040
In8	0080
In9	0100
In10	0200
In11	0400
In12	0800
In13	1000
In14	2000
In15	4000
in16	8000
In1~In5	001F
In6~In10	03E0
In1~in8	00FF
In9~in16	FF00
Odd Numbered 10x10	0155
Odd Numbered 16x16	AAAA
Even Numbered 10x10	02AA
Even Numbered 16x16	5555
All 10x10	03FF
All 16x16	FFFF

6. Controlling Remote Devices over HDBaseT

The H2X matrices have the ability to route commands to control devices in remote zones via HDBaseT. These commands require a syntax in order to first tell the matrix that it is talking to a remote device and what the devices baud rate is.

6.1 Routing Command Syntax

Commands for control remote devices must be sent in the following syntax.

[Header] [Card #] [Baud Rate] [Length of Command] [Device Command]

Header=05 55 55 57

Card # = Card slot # on matrix. Note that HDBaseT output cards have different values than HDBaseT cards for the Card #. See

Header	05 55 55 57
Card	HDBaseT Output in slot 2
Baud Rate	Device Baud Rate is 9600
Length of Command	05 (5 bytes)
Device Command	62 67 20 0D 0A
Full Command	05 55 55 57 02 06 05 62 67 20 0D 0A

Card Slot Values for list of values.

Baud Rate = Baud Rate of the connected device to be controlled.

Length of Command = Length in bytes of the connected device command.

Device Command = Command to be sent in HEX to control the device. ASCII commands must be converted to HEX.

Example Command – HDBaseT Out Card

Header	05 55 55 57
Card	HDBaseT Output in slot 2
Baud Rate	Device Baud Rate is 9600
Length of Command	05 (5 bytes)
Device Command	62 67 20 0D 0A
Full Command	05 55 55 57 02 06 05 62 67 20 0D 0A

6.2 Card Slot Values

Card #	Value
Output to Zone	
1	01
2	02
3	03
4	04
5	05
6	06
7	07
8	08
9	09
10	0a
11	0b
12	0c
13	0d
14	0e
15	0f
16	10

Card #	Value
Input from Zone (HDBT In Card TX-H2X-HDBT)	
1	11
2	12
3	13
4	14
5	15
6	16
7	17
8	18
9	19
10	1a
11	1b
12	1c
13	1d
14	1e
15	1f
16	20

6.3 Baud Rate Values

The baud rate for the device must be sent as a HEX value in order for the command to be sent.

Baud Rate	Value
110	00
300	01
600	02
1200	03
2400	04
4800	05
9600	06
14400	07
19200	08
38400	09
56000	0A
57600	0B
115200	0C

6.1 Command Length HEX

Length (# of Bytes)	HEX Value
1	01
2	02
3	03
4	04
5	05
6	06
7	07
8	08
9	09
10	0A
11	0B
12	0C
13	0D
14	0E
15	0F
16	10
17	11
18	12
19	13
20	14

Length (# of Bytes)	HEX Value
21	15
22	16
23	17
24	18
25	19
26	1A
27	1B
28	1C
29	1D
30	1E
31	1F
32	20
33	21
34	22
35	23
36	24
37	25
38	26
39	27
40	28

7. Diagnostic Troubleshooting

Cable Connections and Link Quality

Action	Command	Parameters
Query Input Cable Connection Status	Command: GET CABLEC_IN prm1 <CR><LF> Return: CABLEC_IN prm1 prm2 <CR><LF> Example: Cable for input 1 is connected. GET CABLEC_IN in1 <CR><LF> Returns: CABLEC_IN in1 good <CR><LF>	Prm1 = {in1~in16, all} Prm2 = {connected, not connected}
Query Output Cable Connection Status	Command: GET CABLEC_OUT prm1 <CR><LF> Return: CABLEC_OUT prm1 prm2 <CR><LF> Example: HDBaseT cable for output 10 is connected. GET CABLEC_OUT hdbtout10 <CR><LF> Returns: CABLEC_OUT in10 connected <CR><LF>	Prm1 = {hdbmiout1~hdbmiout16, hdbtout1~hdbtout16, all} Prm2 = {connected, not connected}
Query HDBaseT Input Link Quality	Command: GET HDBTL_IN prm1 <CR><LF> Return: HDBTL_IN prm1 prm2 <CR><LF> Example: HDBaseT link quality is 80% for input 10. GET HDBTL_IN hdbtin10 <CR><LF> Returns: HDBTL_IN hdbtin10 8 <CR><LF>	Prm1 = { hdbtin1~hdbtin16, all} Prm2 = {1~10, no link}
Query HDBaseT Output Link Quality	Command: GET HDBTL_OUT prm1 <CR><LF> Return: HDBTL_OUT prm1 prm2 <CR><LF> Example: HDBaseT link quality is 80% for output 10. GET HDBTL_OUT hdbtout10 <CR><LF> Returns: HDBTL_OUT hdbtout10 8 <CR><LF>	Prm1 = { hdbtout1~hdbtout16, all} Prm2 = {1~10, no link}

Matrix Card and Internal Component Status

Action	Command	Parameters
Query Card Connection Status	Command: GET CARD_C prm1 <CR><LF> Return: CARD_C prm1 prm2 <CR><LF> Example: Card in slot 10 connected. GET CARD_C 10 <CR><LF> Returns: CARD_C slot10 connected <CR><LF>	Prm1 = {Slot1~slot16, all} Prm2 = {connected, not connected}
Query Card Type	Command: GET CARD_T prm1 <CR><LF> Return: CARD_T prm1 prm2 <CR><LF> Example: Card in slot 10 is HDBaseT. GET CARD_T 10 <CR><LF> Returns: CARD_T slot10 hdbt <CR><LF>	Prm1 = {Slot1~slot16, all} Prm2 = {hdmi,hdbt}
Query Card Communication Status With Motherboard	Command: GET CARD_COM prm1 <CR><LF> Return: CARD_COM prm1 prm2 <CR><LF> Example: Card in slot 10 is communicating with the motherboard. GET CARD_COM 10 <CR><LF> Returns: CARD_COM slot10 good <CR><LF>	Prm1 = {slot1~slot16, all} Prm2 = {good, none}
Query Board/Card Status	Command: GET CARD_S prm1 <CR><LF> Return: CARD_S prm1 prm2 <CR><LF> Example: Card in slot 10 is functioning properly. GET CARD_S 10 <CR><LF> Returns: CARD_S slot10 good <CR><LF>	Prm1 = {mainboard, card1~card16, all} Prm2 = {good, none}

Action	Command	Parameters
Query Fan Status	Command: GET FANS prm1 <CR><LF> Return: FANS prm1 prm2 <CR><LF>	
	Example: HDBaseT link quality is 80% for output 10. GET FANS hdbtout10 <CR><LF> Returns: FANS hdbtout10 8 <CR><LF>	Prm1 = { fan1~fan4, all} Prm2 = {working, unworking}

Rebooting and Restoring Defaults

Action	Command	Parameters
Reboot the Matrix	Command: REBOOT prm<CR><LF> Return: REBOOT prm<CR><LF>	
	Example: Reboot entire matrix. REBOOT all<CR><LF> Returns: REBOOT all <CR><LF>	Prm = {all mainboard, ledboard, card1~card16}
Restore Factory Defaults	Command: RESET<CR><LF> Return: RESET<CR><LF>	
	Example: Restore factory defaults. RESET<CR><LF> Returns: RESET<CR><LF>	None

8. Contacting Technical Support

Should further clarification of the content of this manual or assistance on troubleshooting be required, please contact WyreStorm technical support.

Phone: UK: +44 (0) 1793 230 343 | ROW: 844.280.WYRE (9973)

Email: Support@WyreStorm.com

On Line Chat (Accessible through website): <http://WyreStorm.com/Contact-Tech-Support>

9. Revision History

Section	Update
V2.0 - 180620 – June 2018	
Controlling Remote Devices over HDBaseT	Added section to cover routing commands over HDBaseT to remote receivers.
v1.4 - 180425 – April 2018	
Rebooting and Restoring Defaults	Added section with commands.
Cover	Added H2XC to cover as supported products
v1.3 - 180129 – January 2018	
Display power Control	Corrected example for Power Display On/off (CEC Power)
v1.1 - 171020 - October 2017	
Zone Source Lockout	Added
v1 - 170606 - June 2017	
All	Original Release

Publication Disclaimer

The material contained in this document consists of information that is the sole property of WyreStorm. This document is intended to provide information to allow interfacing to the relevant WyreStorm equipment by third party products.

WYRESTORM IS NOT RESPONSIBLE FOR MALFUNCTIONS AND/OR THE IN-OPERABILITY WHICH MAY BE CAUSED BY THE APPLICATION OF THIS INFORMATION, WHETHER EXPECTED OR NOT.

WyreStorm reserves the right to change software, control codes and specifications without notice.

WyreStorm will not be liable for any use of this information or any changes it may make to those products. The use of this information constitutes an agreement by the user to these limitations and exclusions.



WyreStorm Technical Support

UK:- +44 (0) 1793 230 343

US/ROW: +1 844-280-WYRE (9973)

Email: support@wyrestorm.com

WyreStorm Offices

North America: 23 Wood Road, Round Lake, NY 12151

Tel: +1 518-289-1293

EMEA: Unit 22, Ergo Business Park, Swindon, Wiltshire, SN3 3JW, UK

Tel: +44 (0) 1793 230 343

WyreStorm Technologies reserves the right to change the physical appearance or technical specification of this product at any time. Visit wyrestorm.com for the latest product information.