



Scan for full manual

VS-21T Quick Start Guide


This guide helps you install and use your **VS-21T** for the first time.

Go to www.kramerav.com/downloads/VS-21T to download the latest user manual and check if firmware upgrades are available.

Step 1: Check what's in the box

- ✓ VS-21T Switcher 2:1
- ✓ 4 Rubber feet
- ✓ 1 Bracket set
- ✓ 1 Power adapter and cord
- ✓ 1 Quick start guide
- ✓ 1 3-pin terminal block with wires

Step 2: Get to know your VS-21T

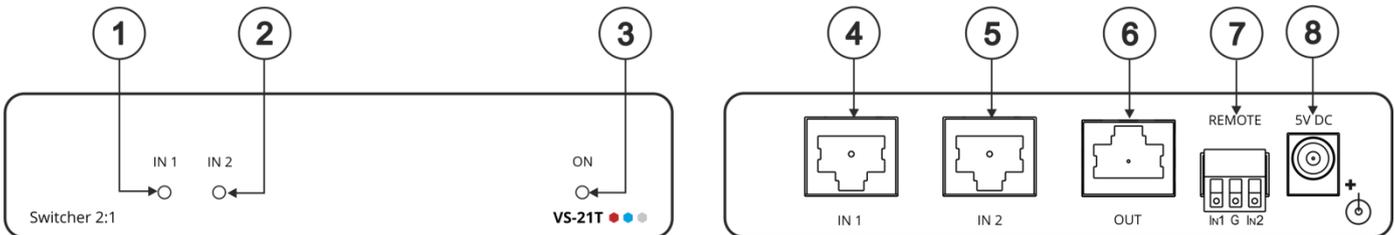


#	Feature	Function
1	IN 1 LED	Lights green when IN 1 is selected. Upon power up, IN 1 is automatically switched to the output.
2	IN 2 LED	Lights green when IN 2 is selected.
3	ON LED	Lights green when the device receives power.
4	IN 1 RJ-45 Connector	Connect to an Ethernet source/HDBT transmitter.
5	IN 2 RJ-45 Connector	Connect to an Ethernet source/HDBT transmitter.
6	OUT RJ-45 Connector	Connect to an Ethernet sink/HDBT receiver.
7	REMOTE 3-pin Terminal Block Connector	Connect to the terminal block and then connect the wires to remote, contact-closure switches for remote control.
8	5V DC Power Connector	5V DC connector for powering the unit.

Step 3: Install VS-21T


Install **VS-21T** using one of the following methods:

- Attach the rubber feet and place the unit on a flat surface.
- Fasten a bracket (included) on each side of the unit and attach it to a flat surface. For more information go to www.kramerav.com/downloads/VS-21T.
- Mount the unit in a rack using an optional **RK-3T** rack adapter.

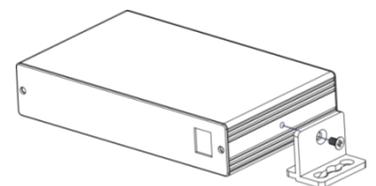

Step 4: Connect the inputs and outputs

Always switch OFF the power on each device before connecting it to your **VS-21T**. For best results, we recommend that you always use Kramer high-performance cables to connect AV equipment to **VS-21T**.

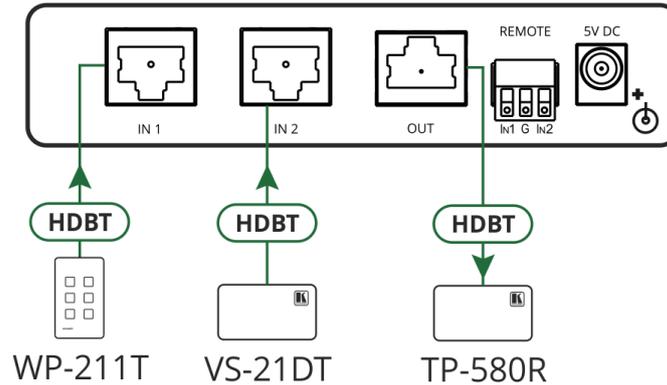

Step 5: Connect the power

Connect the 5V DC power adapter to **VS-21T** and plug it into the mains electricity.

Upon power up, IN 1 is automatically switched to the output.

Safety Instructions




- Caution:** There are no operator serviceable parts inside the unit.
 - Warning:** Use only the Kramer Electronics power adapter that is provided with the unit.
 - Warning:** Disconnect the power and unplug the unit from the wall before installing.
- See www.KramerAV.com for updated safety information.

Step 6: Operate VS-21T

Select an input (IN 1 or IN 2) via the contact closure remote control (also known as push-to-make momentary contact). To do so, momentarily connect the required IN pin on the REMOTE terminal block connector to the G (Ground) pin.

For example, to select IN 1 momentarily connect the IN 1 pin (red wire) to the G pin (black wire). To select IN 2 momentarily connect the IN 2 pin (yellow wire) to the G pin (black wire).

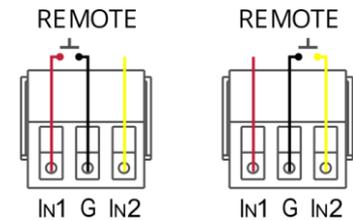

Technical Specifications

Input	2 HDBaseT Signal / Ethernet	On RJ-45 connectors
Output	1 HDBaseT Signal / Ethernet	On an RJ-45 connector
Range	N/A. (This device does not affect the range. The range depends on the sources and the receiver.)	
Controls	Front Panel	IN 1, IN 2 and ON LED indicators
	Rear Panel	IN 1 and IN 2 remote contact closure buttons
Video	Max. Data Rate	8.91Gbps (2.97Gbps per graphic channel) pass-through
	Max. Resolution	4K@60Hz (4:2:0) pass-through
Power	Standards Compliance	HDCP 2.2
	Consumption	5V DC, 30mA
	Source	5.2V DC, 4A
Environmental Conditions	Operating Temperature	0° to +40°C (32° to 104°F)
	Storage Temperature	-40° to +70°C (-40° to 158°F)
	Humidity	10% to 90%, RHL non-condensing
Regulatory Compliance	Safety	CE, UL
	Environmental	RoHs, WEEE
Enclosure	Size	Tool
	Type	Aluminum
	Cooling	Convection ventilation
General	Net Dimensions (W, D, H), each	12cm x 7.2cm x 2.4cm (4.7" x 2.8" x 0.94")
	Shipping Dimensions (W, D, H)	15.7cm x 12cm x 8.7cm (6.2" x 4.7" x 3.4")
	Net Weight, each	0.2kg (0.44lbs) approx.
	Shipping Weight	0.7 kg (1.5lbs) approx.
Accessories	Included	1 Power adapter, 1 power cord, 1 3-pin terminal block with wires

Specifications are subject to change without notice at www.kramerav.com