

## **TASCAM RC-20 20-Button Flash Start for CD-500/CD-500B**

- Direct Play Remote
- 20 direct play buttons
- Stop/Load button
- Space for legend strip
- Connection LED
- Dimensions: 8.25" W x 0.78" H x 3.7" D
- Weight: 13.4 oz
- Cable Length: 12.8 feet