

## Page 1 - 8 Channel Matrix Switcher MSS-8



## Page 4 - 16 Channel Matrix Switcher and Multi Viewer MVS-16



## Initial Setup

### Power Connections:

MSS-8 is supplied with two 12V Wall Power Supplies. One Power Supply is sufficient to power the MSS-8, however for redundancy we recommend both Power Supplies to be used simultaneously.

### LAN Connection:

MSS-8 has been designed to work seamless with any DHCP Server. If no DHCP server is found on the Network the unit will default to IP Address 192.168.1.215.

### Setup:

- Download and Install the Osprey control panel software
- Connect Unit to your network using the LAN Port
- Connect your video sources and video sinks to the SDI Inputs/Outputs
- Connect Power and turn unit ON



## Settings

### Using the Buttons on MSS-8 Front Panel

- LOCK:** Lockout of the Keypad to prevent unwanted I/O changes
- ALL:** Connect one Input to all Outputs simultaneous  
Example Sequence: IN – 4 – ALL (Input 4 connected to all 8 Outputs)
- IN/OUT:** Make individual Matrix Connections  
Example Sequence: IN – 2 – OUT – 4 – 6 – 7 (Input 2 connected to Outputs 4, 6 and 7 )




- Display:** The Display shows the current I/O.  
The first line represents Outputs 1-4, the second line Outputs 5-8.  
Above display status shows the following connections.
- Input 1 to Outputs 1 and 4
  - Input 2 to Outputs 2 and 5
  - Input 3 to Outputs 3 and 7
  - Input 6 to Outputs 6 and 8

The display brightness can be adjusted using the PC based Osprey Control Software. There is also a “sleep” option.

## Settings

### Using Osprey Control Panel Software

- SCANNING:** Scans the Network for all connected Osprey switchers
- SETTING:** Switch between LAN or Serial Connection
- LOCK:** Lockout of the Unit Keypad to prevent unwanted I/O changes
- INPUT:** Selection of Input Channel
- OUTPUT:** Selection of Output Channel
- APPLY:** Applies the I/O Selections
- STATUS:** I/O Connections. Left to right shows Outputs 1 through 8
- REFRESH:** Updates the I/O status in the Software Interface to capture Changes made on the keypad while the Software was running
- ONE to ALL:** Simultaneous connect one Input to all Outputs
- ONE to ONE:** Simultaneous connect Input 1 to Output 1, Input 2 to Output 2, etc
- BACKLIGHT:** Change brightness and behavior of the Units Display

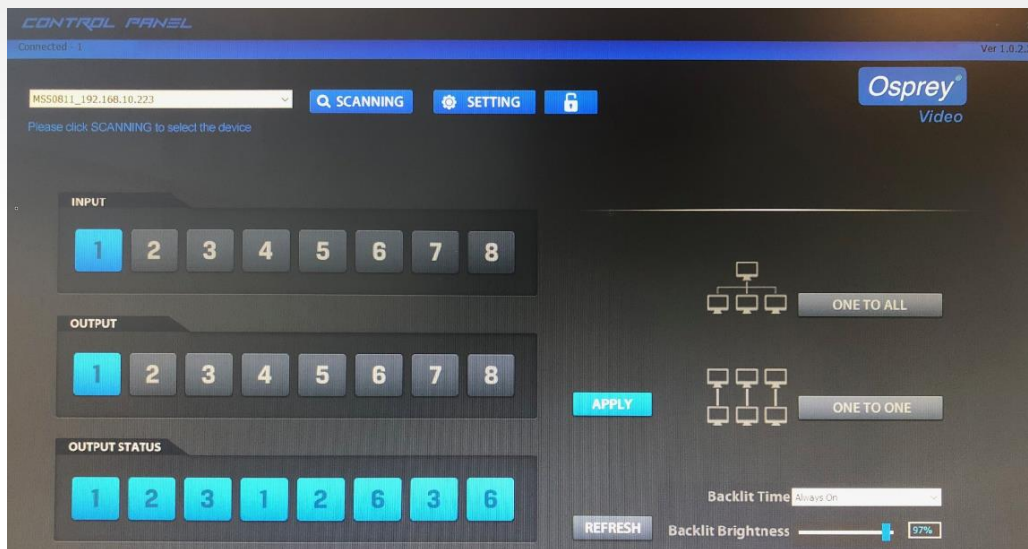

Note: The units IP default is DHCP. A static IP assigned under “Settings” it will revert back to DHCP after each power cycle



# RACKMOUNT 16x16 MATRIX SWITCHER 16 CHANNEL MULTI VIEWER MVS-16

Soon to come

[www.ospreyvideo.com](http://www.ospreyvideo.com)