

CopperLink[™] Model 1214 **High Speed Ethernet Extender**

User Manual



This is a Class A device and is not intended for use in a residential environment.

Sales Office: +1 (301) 975-1000
Technical Support: +1 (301) 975-1007
E-mail: support@patton.com
WWW: www.patton.com

Part Number: 07MCL1214-UM, Rev. C
Revised: October 9, 2014

Patton Electronics Company, Inc.

7622 Rickenbacker Drive
Gaithersburg, MD 20879 USA
Tel: +1 (301) 975-1000
Fax: +1 (301) 869-9293
Support: +1 (301) 975-1007
Web: www.patton.com
E-mail: support@patton.com

Trademark Statement

The term *CopperLink* is a trademark of Patton Electronics Company. All other trademarks presented in this document are the property of their respective owners.

Copyright © 2013–2014, Patton Electronics Company. All rights reserved.

The information in this document is subject to change without notice. Patton Electronics assumes no liability for errors that may appear in this document.

Warranty Information

Patton Electronics warrants all CopperLink components to be free from defects, and will—at our option—repair or replace the product should it fail within one year from the first date of the shipment.

This warranty is limited to defects in workmanship or materials, and does not cover customer damage, abuse or unauthorized modification. If the product fails to perform as warranted, your sole recourse shall be repair or replacement as described above. Under no condition shall Patton Electronics be liable for any damages incurred by the use of this product. These damages include, but are not limited to, the following: lost profits, lost savings and incidental or consequential damages arising from the use of or inability to use this product. Patton Electronics specifically disclaims all other warranties, expressed or implied, and the installation or use of this product shall be deemed an acceptance of these terms by the user.

Summary Table of Contents

- 1 General information 12
- 2 Installation 14
- 3 Configuration 19
- 4 Operation 22
- 5 Contacting Patton for assistance 24
- A Compliance information 27
- B Specifications 30
- C Factory Replacement Parts and Accessories 32
- D Interface Pin Assignment 34
- E Line Rate & Reach Chart 36

Table of Contents

Summary Table of Contents	3
Table of Contents	4
List of Figures	6
List of Tables	7
About This Guide	8
Safety When Working With Electricity	10
1 General information	12
Overview	13
Features	13
Description	13
2 Installation	14
Planning the Installation.....	15
Connecting the Line Interface	16
Connecting the 10/100Base-T Ethernet Interface	17
Connecting the POTS/ISDN Line (CL1214/S)	17
Connecting Power	18
3 Configuration.....	19
Introduction.....	20
Configuring the Hardware DIP switches	20
Configuring DIP Switch S1	20
4 Operation.....	22
Introduction.....	23
Front Panel LED Status Monitors	23
5 Contacting Patton for assistance.....	24
Introduction	25
Contact information.....	25
Warranty Service and Returned Merchandise Authorizations (RMAs).....	25
Warranty coverage	25
RMA numbers	26
A Compliance information	27
Regulatory Information	28
EMC Directive:	28
Low-Voltage Directive (Safety):	28
PSTN:	28
Radio and TV Interference (FCC Part 15)	28
CE Declaration of Conformity	28
Authorized European Representative	28
Service	29

B	Specifications	30
	LAN Connection.....	31
	Transmission Line.....	31
	LED Status Indicators	31
	Power Supply	31
	External AC and Internal DC options:	31
	Physical	31
	Operating Temperature Range	31
	Humidity	31
	Dimensions	31
C	Factory Replacement Parts and Accessories	32
	CL1214 Series Factory Replacement Parts and Accessories	33
D	Interface Pin Assignment	34
	10/100Base-T Interface	35
	CopperLink Interface	35
	POTS/ISDN Interface (CL1214/S).....	35
E	Line Rate & Reach Chart	36
	Line Rate & Reach Chart Based on 24 AWG (0.5 mm)	37

List of Figures

1	Typical application	13
2	CL1214 rear panel options	15
3	CL1214 (RJ-45) twisted pair line interface.	16
4	CL1214 (Terminal Block) twisted pair line interface	17
5	CL1214 10/100Base-T RJ-45 Connector Pin-out.	17
6	CL1214/S (RJ-45) POTS/ISDN interface.	18
7	DIP switch orientation	20
8	CL1214 front panel	23
9	Terminal Block	35

List of Tables

1	S1 Summary	20
2	Local/Remote Unit Configuration	21
3	Symmetric/Asymmetric Selection Chart	21
4	Signal to Noise Ratio	21
5	Front panel LED description	23
6	Line Rate & Reach Chart Using Twisted-Pair (Long Range)	37
7	Line Rate & Reach Chart Using Twisted-Pair (High Speed)	38

About This Guide

This guide describes the CopperLink Model 1214 hardware, installation, and basic configuration.

Audience

This guide is intended for the following users:

- Operators
- Installers
- Maintenance technicians

Structure

This guide contains the following chapters and appendices:

- [Chapter 1](#) on page 12 provides information about CL1214 features and capabilities
- [Chapter 2](#) on page 14 provides information about installing the CL1214 CopperLink interfaces
- [Chapter 3](#) on page 19 provides information about the CL1214 configuration
- [Chapter 4](#) on page 22 provides information about the CL1214's operation
- [Appendix A](#) on page 27 provides compliance information for the CL1214
- [Appendix B](#) on page 30 provides specifications for the CL1214s
- [Appendix C](#) on page 32 provides a table of replacements for parts and accessories
- [Appendix D](#) on page 34 provides diagrams of detailed pin assignments
- [Appendix E](#) on page 36 provides a line range and reach chart for the CL1214

For best results, read the contents of this guide *before* you install the CopperLink 1214.

Precautions

Notes and cautions, which have the following meanings, are used throughout this guide to help you become aware of potential Router modem problems. *Warnings* relate to personal injury issues, and *Cautions* refer to potential property damage.

A note presents additional information or interesting sidelights.



The alert symbol and IMPORTANT heading calls attention to important information.



The alert symbol and CAUTION heading indicate a potential hazard. Strictly follow the instructions to avoid property damage.



The shock hazard symbol and CAUTION heading indicate a potential electric shock hazard. Strictly follow the instructions to avoid property damage caused by electric shock.



The alert symbol and WARNING heading indicate a potential safety hazard. Strictly follow the warning instructions to avoid personal injury.



The shock hazard symbol and WARNING heading indicate a potential electric shock hazard. Strictly follow the warning instructions to avoid injury caused by electric shock.

Safety When Working With Electricity



- This device contains no user serviceable parts. This device can only be repaired by qualified service personnel.
- Do not open the device when the power cord is connected. For systems without a power switch and without an external power adapter, line voltages are present within the device when the power cord is connected.
- For devices with an external power adapter, the power adapter shall be a listed Limited Power Source. The mains outlet that is utilized to power the device shall be within 10 feet (3 meters) of the device, shall be easily accessible, and protected by a circuit breaker in compliance with local regulatory requirements.
- For AC powered devices, ensure that the power cable used meets all applicable standards for the country in which it is to be installed.
- For AC powered devices which have 3 conductor power plugs (L1, L2 & GND or Hot, Neutral & Safety/Protective Ground), the wall outlet (or socket) must have an earth ground.
- For DC powered devices, ensure that the interconnecting cables are rated for proper voltage, current, anticipated temperature, flammability, and mechanical serviceability.
- WAN, LAN & PSTN ports (connections) may have hazardous voltages present regardless of whether the device is powered ON or OFF. PSTN relates to interfaces such as telephone lines, FXS, FXO, DSL, xDSL, T1, E1, ISDN, Voice, etc. These are known as “hazardous network voltages” and to avoid electric shock use caution when working near these ports. When disconnecting cables for these ports, detach the far end connection first.
- Do not work on the device or connect or disconnect cables during periods of lightning activity.



In accordance with the requirements of council directive 2002/96/EC on Waste of Electrical and Electronic Equipment (WEEE), ensure that at end-of-life you separate this product from other waste and scrap and deliver to the WEEE collection system in your country for recycling.



This device contains no user serviceable parts. This device can only be repaired by qualified service personnel.



This device is NOT intended nor approved for connection to the PSTN. It is intended only for connection to customer premise equipment.



Electrostatic Discharge (ESD) can damage equipment and impair electrical circuitry. It occurs when electronic printed circuit cards are improperly handled and can result in complete or intermittent failures. Do the following to prevent ESD:

- Always follow ESD prevention procedures when removing and replacing cards.
- Wear an ESD-preventive wrist strap, ensuring that it makes good skin contact. Connect the clip to an unpainted surface of the chassis frame to safely channel unwanted ESD voltages to ground.
- To properly guard against ESD damage and shocks, the wrist strap and cord must operate effectively. If no wrist strap is available, ground yourself by touching the metal part of the chassis.

Chapter 1 **General information**

Chapter contents

Overview	13
Features	13
Description	13

Overview

Thank you for your purchase of this Patton Electronics product. This product has been thoroughly inspected and tested and is warranted for one year for parts and labor. If any questions or problems arise during installation or use of this product, contact Patton Electronics Technical Support at +1 (301) 975-1007.

Features

- Variable rate CopperLink extender - Easy to configure
- Auto-MDIX Ethernet
- Configurable 10/100, Full/Half, and Auto-Negotiating Ethernet
- Extends up to 4x 10/100Base-TX Ethernet beyond 328-foot (100-meter) limitation over a single twisted-pair, Cat 5e/6/7, or coaxial cable
- Symmetric or asymmetric settings via DIP switch
- Transparent operation
- LED indicators for Power, CopperLink, Ethernet Link/Activity, Remote and Local

Description

The Patton Electronics CL1214 CopperLink modems provide high-speed LAN connections between peered Ethernet LANs, remote PCs, or any other network-enabled 10/100Base-T device.

Operating in pairs, one CL1214 is configured as the (L) Local unit located at one end of the LAN extension and the other CL1214 is configured as the (R) Remote unit at the other end. The CL1214 is configured as a L or R via the switch on the bottom of the unit. These units can automatically forward LAN broadcasts, multicasts, and frames across a 2-wire voice-grade twisted-pair or BNC link. The data is passed transparently (unmodified) through the CL1214s. The CL1214s automatically add and delete MAC addresses, only passing packets across the CopperLink link that are meant for the remote peered LAN.

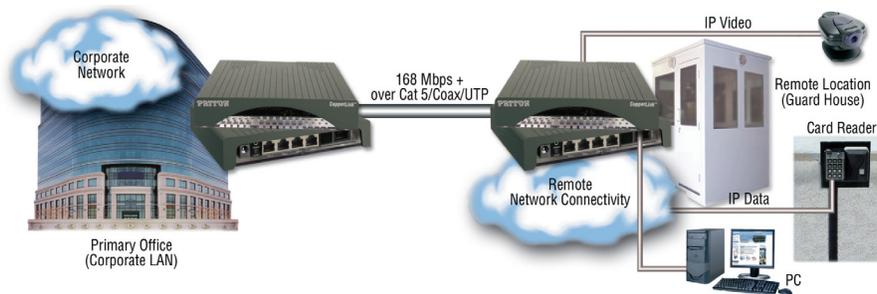


Figure 1. Typical application

The pair of CL1214 models work together to create a transparent extension between two peered Ethernet LANs using twisted pair (2-wire), Cat5+, or 75-ohm BNC. Figure 1 shows a typical point-to-point application.

Chapter 2 **Installation**

Chapter contents

Planning the Installation.....	15
Connecting the Line Interface	16
Connecting the Line Interface for CL1214/EUI or CL1214/TB	16
Connecting the Line Interface for CL1214/BNC	17
Connecting the 10/100Base-T Ethernet Interface	17
Connecting the POTS/ISDN Line (CL1214/S)	17
Connecting Power	18

Planning the Installation



The Interconnecting cables shall be acceptable for external use and shall be rated for the proper application with respect to voltage, current, anticipated temperature, flammability, and mechanical serviceability.

To install the CL1214 Ethernet Extender, do the following:

1. Connect the line interface between the units (refer to “[Connecting the Line Interface](#)” on page 16)

Note See [figure 2](#) for the CL1214’s rear panel arrangements.

2. Connect the Ethernet interface (refer to “[Connecting the 10/100Base-T Ethernet Interface](#)” on page 17).
3. Connect the power plug (refer to “[Connecting Power](#)” on page 18).

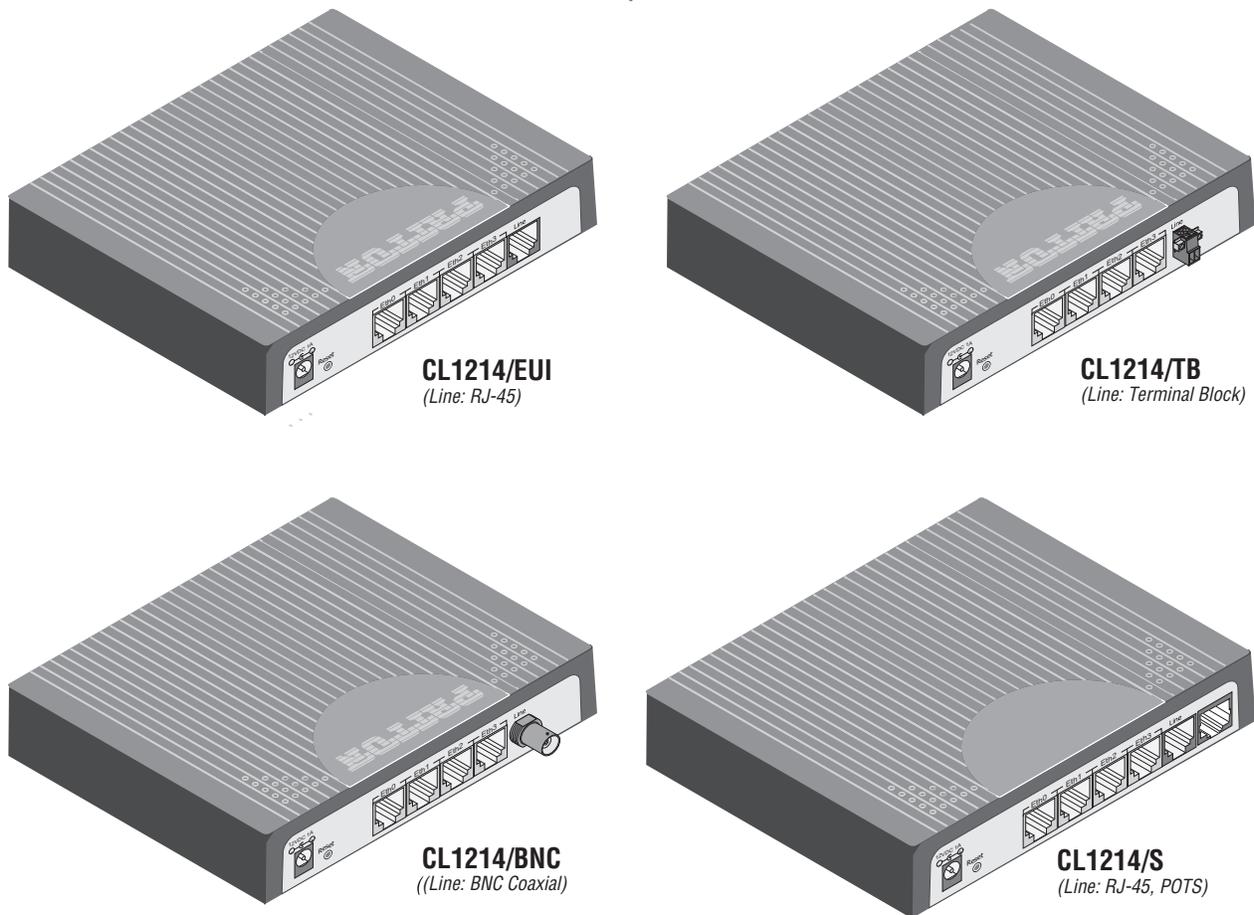


Figure 2. CL1214 rear panel options

Connecting the Line Interface



The interconnecting cables shall be acceptable for external use and shall be rated for the proper application with respect to voltage, current, anticipated temperature, flammability, and mechanical serviceability.

The CL1214 supports communication between two peer Ethernet LAN sites over a distance of up to 10,000 ft (3 km) over 24 AWG (0.5 mm) twisted-pair wire, Cat5+, or 75-ohm BNC.

Note Actual distance and link performance may vary depending on the environment and type/gauge of wire used.

Follow the steps below to connect the CL1214 CopperLink Interfaces.

Note The CL1214 units work in pairs. One of the units must be configured as a (L) Local unit, and the other unit must be configured as a (R) Remote unit.

Connecting the Line Interface for CL1214/EUI or CL1214/TB

1. To function properly, the two CL1214s must be connected together using twisted-pair, unconditioned, dry, metal wire, between 19 (0.9mm) and 26 AWG (0.4mm). Leased circuits that run through signal equalization equipment are not acceptable.
2. The CL1214 is equipped with an RJ-45 interface jack ([figure 3](#)) or terminal block ([figure 4](#) on page 17) that can be used on the CopperLink interface. The CopperLink interface is a two-wire interface. Observe the signal/pin relationships on the CL1214's CopperLink interface jack.

The RJ-45 connector on the CL1214's twisted pair interface is polarity insensitive and is wired for a two-wire interface. The signal/pin relationship is shown in [figure 3](#).

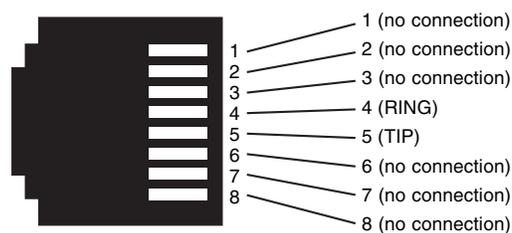


Figure 3. CL1214 (RJ-45) twisted pair line interface.

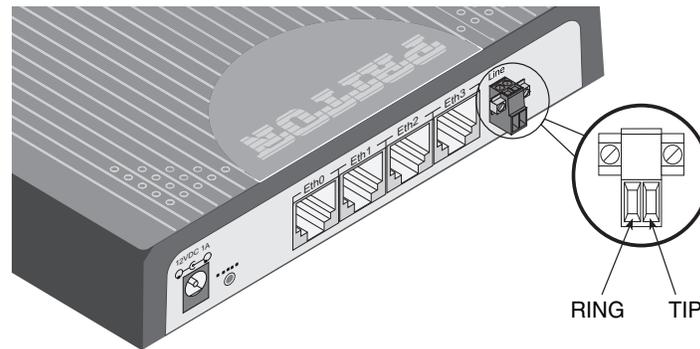


Figure 4. CL1214 (Terminal Block) twisted pair line interface

Connecting the Line Interface for CL1214/BNC

To connect the line interface of the CL1214/BNC, simply use a coaxial cable with a BNC connector at each end to connect the pair of CL1214s.

Connecting the 10/100Base-T Ethernet Interface



The interconnecting cables shall be acceptable for external use and shall be rated for the proper application with respect to voltage, current, anticipated temperature, flammability, and mechanical serviceability.

The RJ-45 ports labeled *Ethernet* are the Auto-MDIX10/100Base-T interface. These ports are designed to connect directly to a 10/100Base-T device or network. [figure 5](#) shows the signal/pin relationships on this interface. You may connect this port to a hub or PC using a straight through or crossover cable that is up to 328 ft long.

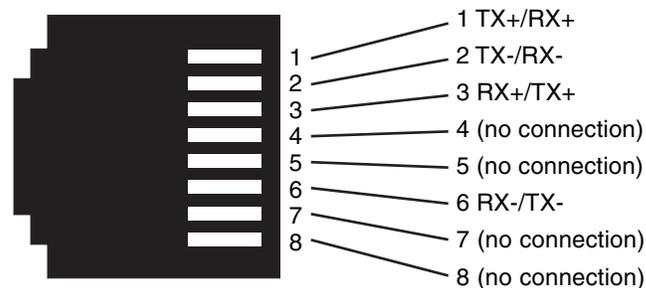


Figure 5. CL1214 10/100Base-T RJ-45 Connector Pin-out.

Connecting the POTS/ISDN Line (CL1214/S)

On the CL1214/S model, the RJ-45 port labeled  is the POTS/ISDN interface. A telephone may be connected to this port and carried over the CopperLink line. The units do not need power for the POTS interface to work. The RJ-45 connector in the POTS/ISDN interface is wired as shown in [figure 6](#).

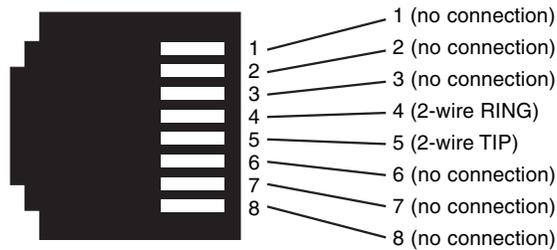


Figure 6. CL1214/S (RJ-45) POTS/ISDN interface.

Connecting Power



The interconnecting cables shall be acceptable for external use and shall be rated for the proper application with respect to voltage, current, anticipated temperature, flammability, and mechanical serviceability.

The CL1214 does not have a power switch, so it powers up as soon as it is plugged in.

An external AC or DC power supply is available separately. This connection is made via the barrel jack on the rear panel of the CL1214. No configuration is necessary for the power supply (See Appendix B for domestic and international power supply and cord options).

DC power (supplied via the power supply jack to the CL1214) must meet the following requirements; DC power supplied must be regulated 12VDC \pm 5%, 1.0A minimum. Center pin is +12V. The barrel type plug has a 2.5/5.5/10mm I.D./O.D./Shaft Length dimensions.

Chapter 3 **Configuration**

Chapter contents

Introduction	20
Configuring the Hardware DIP switches	20
Configuring DIP Switch S1	20
Switch S1-1: Local/Remote Configuration	21
Switches S1-2 and S1-3: Symmetric/Asymmetric Operation	21
Switch S1-5: General Protection (Signal to Noise Ratio)	21

Introduction

The CL1214 has eight DIP switches (S1) for configuring the unit for a wide variety of applications. This section describes switch locations and explains the different configurations.

Configuring the Hardware DIP switches

The DIP switches are externally accessible from the underside of the CL1214. [Figure 7](#) shows the orientation of the DIP switches in the On and Off positions.

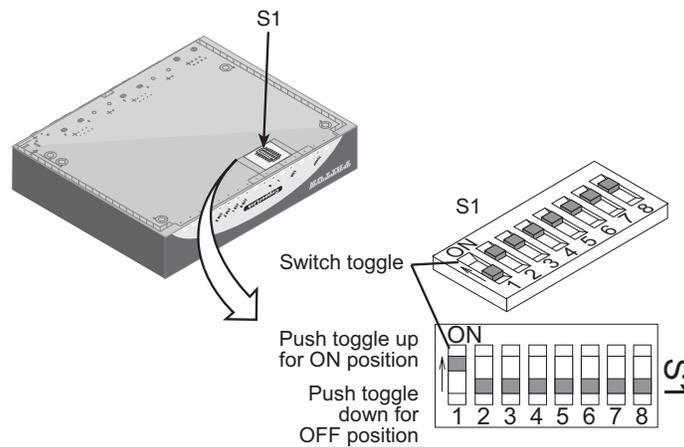


Figure 7. DIP switch orientation

Configuring DIP Switch S1

DIP switch S1 is where you configure the CopperLink line. The following tables describe the configuration for the CL1214.

Table 1. S1 Summary

Position	Description
S1-1	Local/Remote Configuration
S1-2	Line Rate/Symmetry
S1-3	Line Rate/Symmetry
S1-4	Reserved
S1-5	SNR Margin
S1-6	Reserved
S1-7	Reserved
S1-8	Reserved

Switch S1-1: Local/Remote Configuration

Use switch S1-1 to configure the unit as Remote or Local in the CL1214 pair.

Table 2. Local/Remote Unit Configuration

S1-1	Setting
ON	CPE/Remote
OFF	CO/Local

Switches S1-2 and S1-3: Symmetric/Asymmetric Operation

Use switches S1-2 and S1-3 to configure the CopperLink line rate type and operation.

Table 3. Symmetric/Asymmetric Selection Chart

S1-2	S1-3	Setting
OFF	OFF	High-Speed "Symmetric"
OFF	ON	High-Speed "Asymmetric"
ON	OFF	FastPath High-Speed "Asymmetric"
ON	ON	Long-Range "Asymmetric"

Note See "Line Rate & Reach Chart Based on 24 AWG (0.5 mm)" on page 37 for line rate distances.

Switch S1-5: General Protection (Signal to Noise Ratio)

Use switch S1-5 to configure line noise protection.

Table 4. Signal to Noise Ratio

S1-5	Setting
ON	6dB
OFF	9dB

- **6dB:** Original line noise protection with 6dB SNR
- **9dB:** Better line noise protection with SNR up to 9dB

Chapter 4 **Operation**

Chapter contents

Introduction.....	23
Front Panel LED Status Monitors	23

Introduction

Once the CL1214s are properly installed, they should operate transparently. No user settings required. This section describes reading the LED status monitors.

Before applying power to the CL1214, please review “Connecting Power” on page 18 to verify that the unit is connected to the appropriate power source.

Front Panel LED Status Monitors

The CL1214 features six front panel LEDs that monitor power, the Ethernet signals, the CopperLink connection, and the remote/local setting. [figure 8](#) shows the front panel location of each LED. [Table 5](#) on page 23 describes the LED functions.

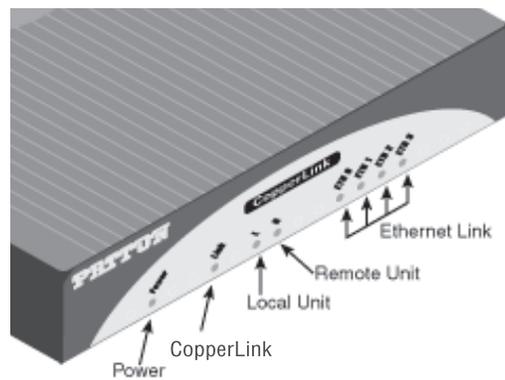


Figure 8. CL1214 front panel

Table 5. Front panel LED description

LED	Status	Description
Power	Green	The device is powered on.
	Off	The device is powered off.
CopperLink	Green	The port is connected.
	Blinking Green	Data transceiving.
	Off	No valid link on this port.
Ethernet	Green	The port is connected.
	^a Blinking Green	Data transceiving.
Local	Green	The device acts in Local mode.
	Off	Local mode is off.
Remote	Green	The device acts in Remote mode.
	Off	Remote mode is off.

- a. Once the unit connects to a power source, the Link LED will blink as the CL1214 automatically looks for the other unit in the pair.

Chapter 5 **Contacting Patton for assistance**

Chapter contents

- Introduction25
- Contact information25
- Warranty Service and Returned Merchandise Authorizations (RMAs)25
 - Warranty coverage25
 - Out-of-warranty service25
 - Returns for credit25
 - Return for credit policy26
- RMA numbers26
 - Shipping instructions26

Introduction

This chapter contains the following information:

- “[Contact information](#)”—describes how to contact Patton technical support for assistance.
- “[Warranty Service and Returned Merchandise Authorizations \(RMAs\)](#)”—contains information about the RAS warranty and obtaining a return merchandise authorization (RMA).

Contact information

Patton Electronics offers a wide array of free technical services. If you have questions about any of our other products we recommend you begin your search for answers by using our technical knowledge base. Here, we have gathered together many of the more commonly asked questions and compiled them into a searchable database to help you quickly solve your problems:

- Online support—available at www.patton.com
- E-mail support—e-mail sent to support@patton.com will be answered within 1 business day
- Telephone support—standard telephone support is available five days a week—from 8:00 am to 5:00 pm EST (1300 to 2200 UTC)—by calling +1 (301) 975-1007

Warranty Service and Returned Merchandise Authorizations (RMAs)

Patton Electronics is an ISO-9001 certified manufacturer and our products are carefully tested before shipment. All of our products are backed by a comprehensive warranty program.

Note If you purchased your equipment from a Patton Electronics reseller, ask your reseller how you should proceed with warranty service. It is often more convenient for you to work with your local reseller to obtain a replacement. Patton services our products no matter how you acquired them.

Warranty coverage

Our products are under warranty to be free from defects, and we will, at our option, repair or replace the product should it fail within one year from the first date of shipment. Our warranty is limited to defects in workmanship or materials, and does not cover customer damage, lightning or power surge damage, abuse, or unauthorized modification.

Out-of-warranty service

Patton services what we sell, no matter how you acquired it, including malfunctioning products that are no longer under warranty. Our products have a flat fee for repairs. Units damaged by lightning or other catastrophes may require replacement.

Returns for credit

Customer satisfaction is important to us, therefore any product may be returned with authorization within 30 days from the shipment date for a full credit of the purchase price. If you have ordered the wrong equipment or you are dissatisfied in any way, please contact us to request an RMA number to accept your return. Patton is not responsible for equipment returned without a Return Authorization.

Return for credit policy

- Less than 30 days: No Charge. Your credit will be issued upon receipt and inspection of the equipment.
- 30 to 60 days: We will add a 20% restocking charge (crediting your account with 80% of the purchase price).
- Over 60 days: Products will be accepted for repairs only.

RMA numbers

RMA numbers are required for all product returns. You can obtain an RMA by doing one of the following:

- Completing a request on the RMA Request page in the *Support* section at www.patton.com
- By calling +1 (301) 975-1007 and speaking to a Technical Support Engineer
- By sending an e-mail to returns@patton.com

All returned units must have the RMA number clearly visible on the outside of the shipping container. Please use the original packing material that the device came in or pack the unit securely to avoid damage during shipping.

Shipping instructions

The RMA number should be clearly visible on the address label. Our shipping address is as follows:

Patton Electronics Company

RMA#: xxxx

7622 Rickenbacker Dr.

Gaithersburg, MD 20879-4773 USA

Patton will ship the equipment back to you in the same manner you ship it to us. Patton will pay the return shipping costs.

Appendix A **Compliance information**

Chapter contents

- Regulatory Information28
 - EMC Directive:28
 - Low-Voltage Directive (Safety):28
 - PSTN:28
- Radio and TV Interference (FCC Part 15)28
- CE Declaration of Conformity28
- Authorized European Representative28
- Service29

Regulatory Information

EMC Directive:

- FCC Part 15, Class A
- EN55022, Class A
- EN55024
- EN50581

Low-Voltage Directive (Safety):

- IEC/EN60950-1, 2nd Edition
- UL60950-1/CSA C22.2 No. 60950-1

PSTN:

- This device is not intended nor approved for connection to the PSTN

Radio and TV Interference (FCC Part 15)

This device generates and uses radio frequency energy, and if not installed and used properly—that is, in strict accordance with the manufacturer’s instructions—may cause interference to radio and television reception. The device has been tested and found to comply with the limits for a Class A computing device in accordance with specifications in Subpart B of Part 15 of FCC rules, which are designed to provide reasonable protection from such interference in a commercial installation. However, there is no guarantee that interference will not occur in a particular installation. If the device does cause interference to radio or television reception, which can be determined by disconnecting the unit, the user is encouraged to try to correct the interference by one or more of the following measures: moving the computing equipment away from the receiver, re-orienting the receiving antenna and/or plugging the receiving equipment into a different AC outlet (such that the computing equipment and receiver are on different branches).

CE Declaration of Conformity

Patton Electronics, Inc declares that this device is in compliance with the essential requirements and other relevant provisions of Directive 2004/108/EC relating to electromagnetic compatibility and Directive 2006/95/EC relating to electrical equipment designed for use within certain voltage limits. The Declaration of Conformity may be obtained from Patton Electronics, Inc at www.patton.com/certifications.

The safety advice in the documentation accompanying this device shall be obeyed. The conformity to the above directive is indicated by CE mark on the device.

Authorized European Representative

D R M Green
European Compliance Services Ltd
Greyfriars Court
Paradise Square
Oxford, OX1 1BE, UK

Service

All warranty and non-warranty repairs must be returned freight prepaid and insured to Patton Electronics. All returns must have a Return Materials Authorization number on the outside of the shipping container. This number may be obtained from Patton Electronics Technical Services at:

- Tel: +1 (301) 975-1007
- Email: support@patton.com
- URL: <http://www.patton.com>

Packages received without an RMA number will not be accepted.

Appendix B Specifications

Chapter contents

- LAN Connection.....31
- Transmission Line31
- LED Status Indicators31
- Power Supply31
 - External AC and Internal DC options:31
- Physical31
 - Operating Temperature Range31
 - Humidity31
 - Dimensions31

LAN Connection

- Four RJ-45, 10/100Base-T, IEEE 802.3 Ethernet
- CopperLink Connection: RJ-45

Transmission Line

Two-wire unconditioned twisted pair or 75-ohm BNC

LED Status Indicators

- Power (Green)
- CopperLink: Link (Green)
- Local (Green)
- Remote (Green)
- Ethernet: Link (Green) & Activity (Flashing Green)

Power Supply

External AC and Internal DC options:

- AC: 120 VAC, 220 VAC, and UI (120–240 VAC)
- DC: 12 VDC, 24 VDC and 48 VDC
- Power consumption: 400mA at 12VDC

Physical

Operating Temperature Range

0–50°C

Humidity

Up to 90% non-condensing.

Dimensions

6.22 W x 1.25 H x 4.75 D in. (157 W x 318 H x 120 D mm)

Appendix C **Factory Replacement Parts and Accessories**

Chapter contents

CL1214 Series Factory Replacement Parts and Accessories33

CL1214 Series Factory Replacement Parts and Accessories

Patton Model #	Description
Base Models	
CL1214/EUI-2PK	High Speed CopperLink Ethernet Extender Kit (Local and Remote); RJ45 Line, 100-240VAC
CL1214/TB/EUI-2PK	High Speed CopperLink Ethernet Extender Kit (Local and Remote); Terminal Block Line, 100-240VAC
CL1214/BNC/EUI-2PK	High Speed CopperLink Ethernet Extender Kit (Local and Remote); BNC Line, 100-240VAC
CL1214/S/EUI-2PK	High Speed CopperLink Ethernet Extender Kit (Local and Remote); RJ45 Line, POTS/ISDN, 100-240VAC
07MCL1214-UM	User Manual
Power Supplies	
PS-03671H1-002	100-240VAC (12V, DC/2A) Wall mount power adapter
Power Adapters	
12-130	European replacement plug
12-129	American replacement plug
12-131	United Kingdom plug
12-132	Australian/Chinese plug

Appendix D **Interface Pin Assignment**

Chapter contents

10/100Base-T Interface	35
CopperLink Interface	35
POTS/ISDN Interface (CL1214/S).....	35

10/100Base-T Interface

RJ-45

- Pin 1: TX+
- Pin 2: TX-
- Pin 3: RX+
- Pin 6: RX-
- Pins 4, 5, 7, 8: no connection

CopperLink Interface

RJ-45

- Pin 4: RING
- Pin 5: TIP
- Pins 1, 2, 3, 6, 7, 8: no connection

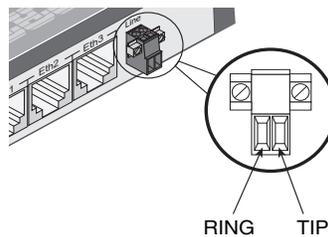


Figure 9. Terminal Block

POTS/ISDN Interface (CL1214/S)

RJ-45

- Pin 4: 2-wire RING
- Pin 5: 2-wire TIP
- Pins 1, 2, 3, 6, 7, 8: no connection

Appendix E **Line Rate & Reach Chart**

Chapter contents

Line Rate & Reach Chart Based on 24 AWG (0.5 mm)37

Line Rate & Reach Chart Based on 24 AWG (0.5 mm)

Table 6. Line Rate & Reach Chart Using Twisted-Pair (Long Range)

Mode (Long Range)	Distance in Feet		Mbps	
	ft	m/km	DS	US
Asymmetric S1-2 ON S1-3 ON	250 ft	76 m	67	16
	1000 ft	305 m	59	16
	2,000 ft	610 m	45	11
	3,000 ft	914 m	31	5
	5,000 ft	1.5 km	17	682 kbps
	10,000 ft	3 km	4	263 kbps

Note The actual distance and link performance may vary depending on the environment and type/gauge of wire used.

Note DS = downstream, US = upstream

Note This chart applies to CL1214s with a twisted-pair line interface: CL1214/EUI and CL1214/TB. Contact Patton for CL1214/BNC rates.

Table 7. Line Rate & Reach Chart Using Twisted-Pair (High Speed)

Mode (High Speed)	Distance in Feet		Mbps		
	ft	m/km	DS	US	
Symmetric S1-2 OFF S1-3 OFF	250 ft	76 m	121	144	
	1000 ft	305 m	73	103	
	2,000 ft	610 m	45	37	
	3,000 ft	914 m	46	10	
	3,500 ft	1 km	30	4	
Asymmetric S1-2 OFF S1-3 ON	Standard	250 ft	76 m	168	95
	Standard	1000 ft	305 m	126	54
S1-2 ON S1-3 OFF	FastPath	2,000 ft	610 m	60	21
	FastPath	3,000 ft	914 m	42	6
		3,500 ft	1 km	35	1

Note The actual distance and link performance may vary depending on the environment and type/gauge of wire used.

Note DS = downstream, US = upstream

Note This chart applies to CL1214s with a twisted-pair line interface: CL1214/EUI and CL1214/TB. Contact Patton for CL1214/BNC rates.

