

## TASCAM RC-20 20-Button Flash Start for CD-500/CD-500B

The **RC-20 Direct Play Remote** brings instant playback through flash start to TASCAM recorders and CD players. It's compatible with the SS-R250N, SS-CDR250N, CD-500, and CD-500B.

A set of 20 pushbuttons on the remote play the first 20 tracks on a CD or SD card. The simple-to-use remote includes space to label each track to help locate the target material. A Stop/Load button is also available for preloading tracks and stopping playback.

All of this is housed in a remote under 9" wide and available at a price never before possible. For theater, broadcast, PA or other installations where price and space are at a premium, the RC-20 and TASCAM player are an unbeatable combination.