

4

WALL-SMART

RUBBER PADS

POE TO USB

USE DEPTH CALIBRATION SCREW TO ADJUST iPad POSITION

"WS RETROFIT FOR iPad PRO 10.5" BLACK/WHITE" - Product description:

The "WS RETROFIT FOR iPad PRO 10.5" BLACK/WHITE" is an adapter for in-wall nearly flush retrofit installation of iPad PRO 10.5". The "WS RETROFIT FOR iPad PRO 10.5" BLACK/WHITE" firmly mounts the iPad PRO 10.5" while allowing easy insertion, removal and operation.


Key features and benefits:


- Nearly flush with the wall (4mm [0.16"] thick on-wall bezel).
- Wall mount may be mounted in any orientation.
- Wall mount contains depth calibration screws.
- Designed for the use with iPad PRO 10.5" (by Apple) (iPad is not included).
- Adapter kit contains:
 - 1. (X1) Wall adapter;
 - 2. (X2) Wall-Smart rubber pads;
 - 3. (X1) Wall-Smart Pad Positioning Template;
 - 4. (X1) Bezel;
- The bezel is supplied painted black (-BL) or white (-WH). The bezel may be custom ordered without paint (-WO)
- The bezel is supplied, by default, with speaker and mic grills. The bezel may be custom ordered without audio grills (add suffix -NG to the part number)

Key properties:

- Dimensions: (W/H/D): 327.1mm (12.88")/ 229.3mm (9.03")/ 79.1mm (3.12")
- Power Supply: Wall mount includes POE to USB converter. The installer should connect the wall mount to an IEEE 802.3at POE+ power source via CAT6 cable and RJ45 connector. (Please verify the power source can supply up to 25.5W)
- Weight: 2.8Kg, 6.16lbs.
- Material: Moisture resistant MDF


 $i\mathsf{Pad}^{\circledast}$ is a trademark of Apple Inc., registered in the U.S. and other countries.

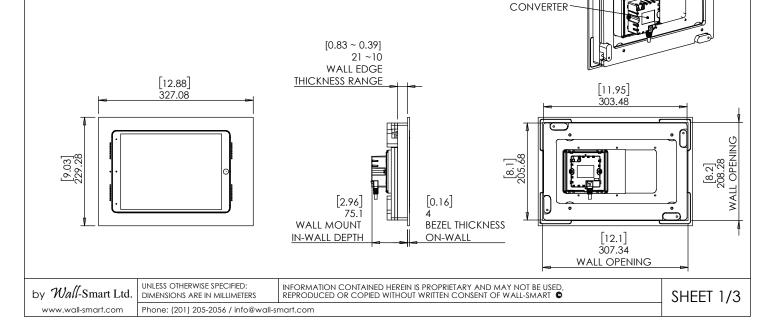




Wall-Smart rubber pads installation:


- 1. Clean iPads back surface.
- 2. Position template.

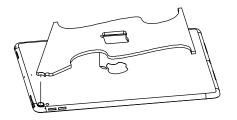


- 3. Align template cutouts with Apple logo and cam lens housing.
- 4. Remove protective tape of a rubber pad back adhesive.
- 5. Align rubber pad to template while maintaining the position of the template .
- 6. Adhere the rubber pad to the iPad gradually from template to the iPad edge.



- 7. Press down from the center of the rubber pad and towards the pad edges to remove air bubbles.
- 8. Push down the edges of the rubber pad to close all gaps.
- 9. Repeat steps 4-8 for the second rubber pad.
- 10. Remove the template and wait 6mins before mounting.

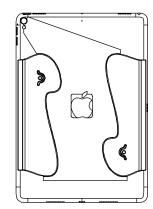



by Wall-Smart Ltd.	UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN MILLIMET
www.wall-smart.com	Phone: (201) 205-2056 / info

