
datavideo

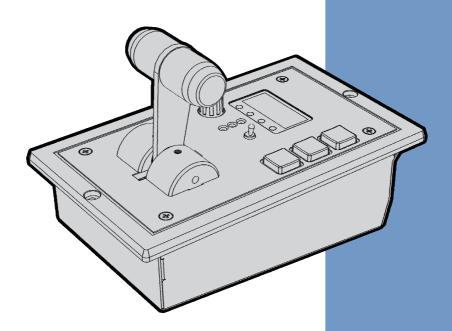

IRIS/SHUTTER
CONTROL BOX
RMC-230
Instruction Manual

Table of Contents

FCC COMPLIANCE STATEMENT	
WARNINGS AND PRECAUTIONS	3
WARRANTY	4
Standard Warranty Three Year Warranty	
DISPOSAL	5
PRODUCT OVERVIEW	6
FEATURES	6
SYSTEM DIAGRAM	7
CONTROL PANEL	9
REAR PANEL	11
FIRMWARE UPGRADE	12
DIMENSIONS	13
FREQUENTLY-ASKED QUESTIONS	14
SPECIFICATIONS	15
SERVICE & SUPPORT	16

Disclaimer of Product & Services

The information offered in this instruction manual is intended as a guide only. At all times, Datavideo Technologies will try to give correct, complete and suitable information. However, Datavideo Technologies cannot exclude that some information in this manual, from time to time, may not be correct or may be incomplete. This manual may contain typing errors, omissions or incorrect information. Datavideo Technologies always recommend that you double check the information in this document for accuracy before making any purchase decision or using the product. Datavideo Technologies is not responsible for any omissions or errors, or for any subsequent loss or damage caused by using the information contained within this manual. Further advice on the content of this manual or on the product can be obtained by contacting your local Datavideo Office or dealer.

FCC Compliance Statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1). This device may not cause harmful interference, and
- (2). This device must accept any interference received, including interference that may cause undesired operation.

Warnings and Precautions

- 1. Read all of these warnings and save them for later reference.
- 2. Follow all warnings and instructions marked on this unit.
- 3. Unplug this unit from the wall outlet before cleaning. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning.



- Do not place this unit on an unstable cart, stand, or table. The unit may fall, causing serious damage.
- 6. Slots and openings on the cabinet top, back, and bottom are provided for ventilation. To ensure safe and reliable operation of this unit, and to protect it from overheating, do not block or cover these openings. Do not place this unit on a bed, sofa, rug, or similar surface, as the ventilation openings on the bottom of the cabinet will be blocked. This unit should never be placed near or over a heat register or radiator. This unit should not be placed in a built-in installation unless proper ventilation is provided.
- 7. This product should only be operated from the type of power source indicated on the marking label of the AC adapter. If you are not sure of the type of power available, consult your Datavideo dealer or your local power company.
- 8. Do not allow anything to rest on the power cord. Do not locate this unit where the power cord will be walked on, rolled over, or otherwise stressed.
- 9. If an extension cord must be used with this unit, make sure that the total of the ampere ratings on the products plugged into the extension cord do not exceed the extension cord rating.
- Make sure that the total amperes of all the units that are plugged into a single wall outlet do not exceed 15 amperes.
- 11. Never push objects of any kind into this unit through the cabinet ventilation slots, as they may touch dangerous voltage points or short out parts that could result in risk of fire or electric shock. Never spill liquid of any kind onto or into this unit.
- 12. Except as specifically explained elsewhere in this manual, do not attempt to service this product yourself. Opening or removing covers that are marked "Do Not Remove" may expose you to dangerous voltage points or other risks, and will void your warranty. Refer all service issues to qualified service personnel.
- 13. Unplug this product from the wall outlet and refer to qualified service personnel under the following conditions:

- a. When the power cord is damaged or frayed;
- b. When liquid has spilled into the unit;
- c. When the product has been exposed to rain or water;
- d. When the product does not operate normally under normal operating conditions. Adjust only those controls that are covered by the operating instructions in this manual; improper adjustment of other controls may result in damage to the unit and may often require extensive work by a qualified technician to restore the unit to normal operation;
- e. When the product has been dropped or the cabinet has been damaged:
- f. When the product exhibits a distinct change in performance, indicating a need for service.

Warranty

Standard Warranty

- Datavideo equipment are guaranteed against any manufacturing defects for one year from the date of purchase.
- The original purchase invoice or other documentary evidence should be supplied at the time of any request for repair under warranty.
- The product warranty period beings on the purchase date. If the purchase date is unknown, the product warranty period begins on the thirtieth day after shipment from a Datavideo office.
- Damage caused by accident, misuse, unauthorized repairs, sand, grit or water is not covered under warranty.
- Viruses and malware infections on the computer systems are not covered under warranty.
- Any errors that are caused by unauthorized third-party software installations, which are not required by our computer systems, are not covered under warranty.
- All mail or transportation costs including insurance are at the expense of the owner.
- All other claims of any nature are not covered.
- Cables and batteries are not covered under warranty.
- Warranty only valid in the country or region of purchase.
- Your statutory rights are not affected.

Three Year Warranty

 All Datavideo products purchased after July 1st, 2017 are qualified for a free two years extension to the standard warranty, providing the product is registered with Datavideo within 30 days of purchase.



- Certain parts with limited lifetime expectancy such as LCD panels, DVD drives, Hard Drive, Solid State Drive, SD Card, USB Thumb Drive, Lighting, Camera module, PCIe Card are covered for 1 year.
- The three-year warranty must be registered on Datavideo's official website or with your local Datavideo office or one of its authorized distributors within 30 days of purchase.

Disposal



For EU Customers only - WEEE Marking

This symbol on the product or on its packaging indicates that this product must not be disposed of with your other household waste. Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the

time of disposal will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste equipment for recycling, please contact your local city office, your household waste disposal service or the shop where you purchased the product.




CE Marking is the symbol as shown on the left of this page. The letters "**CE**" are the abbreviation of French phrase "Conformité Européene" which literally means "European Conformity". The term initially used was "EC Mark" and it was officially replaced by "CE Marking" in the Directive 93/68/EEC in 1993. "CE Marking" is

now used in all EU official documents.

Product Overview

The main design purpose of the RMC-230 is to replace camera iris and shutter control on MCU-100S/P/J and MCU-200S/P/J. It acts as an interface connected between an MCU unit and the cameras. One end of the RMC-230 is connected to the camera via AD-1S/P/J and another end of the RMC-230 is connected to the MCU units, which are cost effective remote controllers designed specifically for remote control of SONY and Panasonic video cameras and camcorders. However, the RMC-230 can also be used as a standalone device for just controlling the camera iris and shutter as shown in the diagram below.


That's Datavideo, sharing the value!

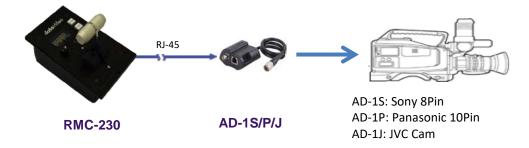

Features

- Two RJ-45 ports allow connections of one end of RMC-230 to AD-1 and another end of RMC-230 to MCU-100 Unit.
- Two PWR ports with one providing power connection and another one allowing cascade of multiple RMC-230 units.
- Control of Shutter adjustment.
- Control of Iris adjustment.
- Iris and Shutter level display

System Diagram

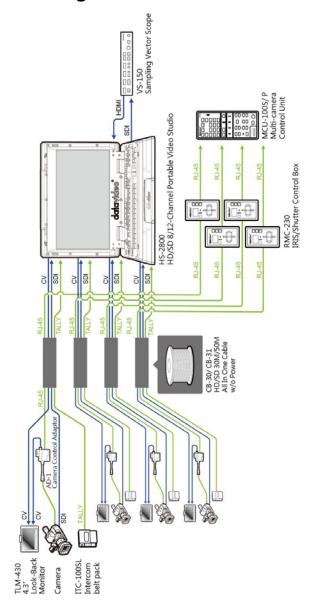


Power cascade of multiple RMC-230 Units Connection to MCU-100/200


- Use Cat. 5e cable to connect one RJ-45 connector of MCU-100/200 to the RJ-45 connector of the RMC-230
- 2. Connect the RJ-45 connectors of the RMC-230 and AD-1 via Cat. 5e cable.
- 3. The DC power adaptor must be connected to the first RMC-230 unit. If the user has to connect the second or the third unit, the user can use the DC power cable to cascade the units using another power connector. The user is also allowed to connect each RMC-230 unit to the DC power independently.

Connection to MCU-100S/P/J / 200S/P/J

- Do not need to connect power adaptor to the RMC-230 as the RMC-230 is powered by Cat. 5e cable.
- Use Cat. 5e cable to connect the RJ-45 connector of MCU-100S/P/J or MCU-200S/P/J to RJ-45 connector of the RMC-230
- 3. Connect RJ-45 connectors of the RMC-230 and AD-1 via Cat. 5e cable.

Control Panel

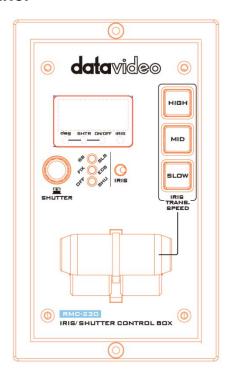

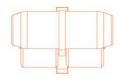

T-Bar Adjustment of iris value



High iris transition speed button High iris transition speed



Medium iris transition speed button Medium iris transition speed



Slow iris transition speed button

Slow iris transition speed



7-Segment Display Screen

Displays Iris and Shutter values

LEDs

IRIS ON: Manual mode IRIS OFF: Auto mode

ON: SONY camera shutter ON OFF: SONY camera shutter OFF

SHTR ON: Shutter speed display SHTR OFF: IRIS value display

Deg ON: Shutter angle is displayed Deg OFF: Shutter speed is displayed



Shutter knob

Adjustment of shutter speed for Panasonic and SONY cameras Press the knob to turn off the SONY camera shutter mode



Toggle Switch

Toggle Right: Switches between auto and manual IRIS modes


Toggle Left: Switches between different shutter modes (Panasonic camera: SS/FIX/OFF; SONY camera: SLS/ECS/SHU)



LED Indicators for shutter modes

Panasonic camera: SS/FIX/OFF SONY camera: SLS/ECS/SHU

Rear Panel

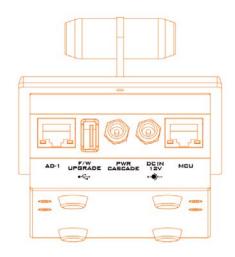



RJ-45 Port (AD1)

Connection to AD1



USB Port

Connection to the PC for F/W Upgrade



PWR Cascade

Powers another RMC-230 to cascade multiple RMC-230s



DC-IN 12V

Power supply



RJ-45 Port (MCU)

Connection to MCU

Firmware Upgrade

Datavideo usually releases new firmware containing new features or reported bug fixes from time to time. Customers can either download the firmware from our official website or contact their local dealer or reseller for assistance.


This section outlines the firmware upgrade process.

- 1. Turn off the RMC-230.
- Connect the RMC-230 to the PC via USB cable.



- 3. Press and Hold the shutter button SHUTTER.
- 4. Turn on the RMC-230.
- 5. 7-segment display of the RMC-230 will display "L-0.5", and the PC will detect the RMC-230 and recognize it as a USB device.
- 6. Open the "RMC-230 U1" disk drive on the PC.
- 7. Remove the binary file (fw_0v500.bin) from the "RMC-230_U1" folder.
- 8. Copy new binary file to the "RMC-230 U1" disk drive.
- 9. Reboot RMC-230 to complete the firmware update.

Dimensions

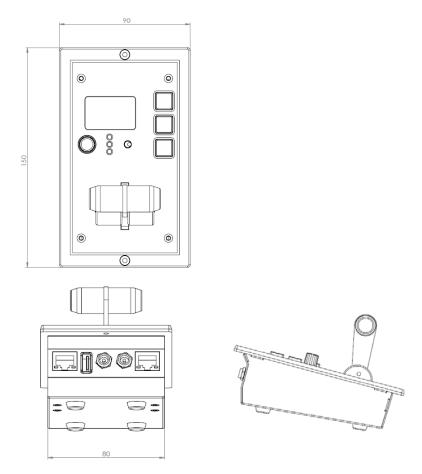

All measurements in millimetres (mm)

Frequently-Asked Questions

This section describes problems that you may encounter while using RMC-230. If you have questions, please refer to related sections and follow all the suggested solutions. If problem still exists, please contact your distributor or the service center.

No.	Problems	Solutions
1.	What is the maximum	The maximum recommended length
	recommended length of Cat. 5e	of Cat. 5e is 50 meters.
	cable for the connection	
	between RMC-230 and MCU-100	
	Unit?	

Specifications

Input/Output Connection	RJ-45 x 2
Power Jack	DC IN x 1
1 OWEI JUCK	Power Cascade x 1
F/W Upgrade	USB x 1
Display	7-segment Display and LED
Power	DC 12V
Environmental	Operating temperature. ∶ 0~50°C
Conditions	Storage temperature: -10 \sim 60°C
Dimension	150 x 90 x 97.6mm
Weight	0.6kg

Service & Support

It is our goal to make your products ownership a satisfying experience. Our supporting staff is available to assist you in setting up and operating your system. Please refer to our web site www.datavideo.com for answers to common questions, support requests or contact your local office below.

batavideo Technologies China Co 601, Building 10, No. 1228, Rd. Jiangchang, Jingan District, Shanghai Tel: +86 21-5603 6599 Fax:+86 21-5603 6770 E-mail:service@datavideo.cn

Datavideo Technologies China Co No. 812, Building B, Wankai Center, No.316, Wan Feng Road, Fengtai District, Beijing, China Tel:+86 10-8586 9034 Fax+86 10-8586 9074

Datavideo Technologies China Co B-223, Meinlan square, No. 1388, Middle of Tianfu Avenue, Gaoxin District, Chengdu, Sichuan Tel: +86 22-8613 7786 Fax:+86 22-8513 6486 E-mail: service@datavideo.cn

E-mail:service@datavideo.cn

Datavideo Technologies China Co A1-2318-19 Room,No.8, Aojiang Road, Taijiang District,Fuzhou,Fujian,China

Tel: 0591-83211756 , 0591-83210187 Fax:0591-83211262 E-mail:service@datavideo.cn

Datavideo Technologies China Co 902, No. 1 business building, Xiangtai Square, No. 129, Yingxiongshan Road, Shizhong District, Jinan City, Shandong Province, China Tei: +86 531-8607 8813 E-mail:service@datavideo.cn Datavideo Hong Kong Ltd G/F.,26 Cross Lane Wanchai, Hong Kong

Tel: +852-2833-1981 Fax:+852-2833-9916 E-mail:info@datavideo.com.hk

Datavideo India Noida A-132, Sec-63, Noida-201307,

Tel: +91-0120-2427337 Fax:+91-0120-2427338 E-mail: sales@datavideo.in

Datavideo India Kochi 2nd Floor- North Wing, Govardhan Building, Opp. NCC Group Headquaters, Chittoor Road, Cochin-682035 Tel: +91 4844-025336

Fax:+91 4844-047696
E-mail: sales@datavideo.in

Z Datavideo Technologies Europe BV

Floridadreef 106 3565 AM Utrecht, The Netherlands Tel: +31-30-261-96-56 Fax:+31-30-261-96-57 E-mail:info@datavideo.nl

Datavideo Visual Technology(S) Pte Ltd No. 178 Paya Lebar Road #06-07 Singapore 409030

Tel: +65-6749 6866 Fax:+65-6749 3266 E-mail:info@datavideovirtualset.com Datavideo Technologies (S) PTE Ltd No. 178 Paya Lebar Road #06-03 Singapore 409030

Tel: +65-6749 6866 Fax:+65-6749 3266 F-mail:sales@datavideo.sg

Datavideo Technologies Co. Ltd 10F. No. 176, Jian 1st Rd., Chung Ho District, New Taipei City 235, Taiwan

Tel: +886-2-8227-2888 Fax:+886-2-8227-2777 E-mail:service@datavideo.com.tw

Datavideo Corporation 7048 Elmer Avenue. Whittier, CA 90602, U.S.A. Tel: +1-562-696 2324 Fax:+1-562-698 6930 E-mail:sales@datavideo.com

Datavideo UK Limited Brookfield House, Brookfield Industrial Estate, Peakdale Road, Glossop, Derbyshire, SK13 6LQ Tel: +44-1457 851 000 Fax:+44-1457 850 964 E-mail:sales@datavideo.co.uk

Datavideo France s.a.r.l.
Cité Descartes 1, rue Albert Einstein
Champs sur Marne 774477 –
Marne la Vallée cedex 2
Tel: +33-1-60370246
Fax:+33-1-60376732
E-mail:info@datavideo.fr



Please visit our website for latest manual update. www.datavideo.com/product/RMC-230



All the trademarks are the properties of their respective owners. Datavideo Technologies Co., Ltd. All rights reserved 2018