


datavideo

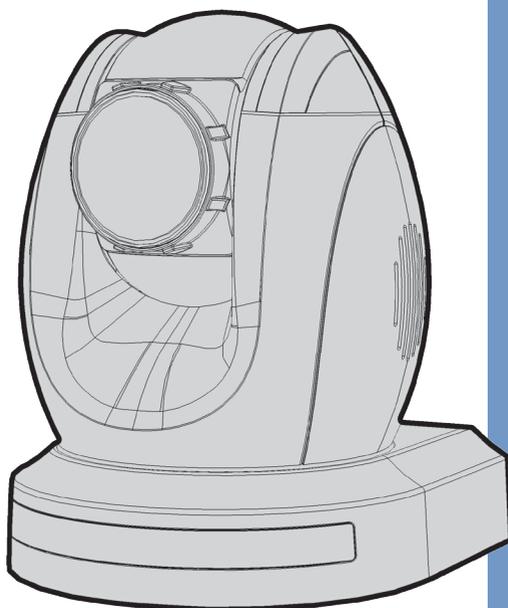

4K PTZ CAMERA

PTC-200

Instruction Manual

www.datavideo.com

Table of Contents

FCC Compliance Statement	4
Warnings and Precautions	4
Warranty	5
<i>Standard Warranty</i>	5
<i>Three Year Warranty</i>	6
Disposal	6
1. Product Overview	7
2. Features	7
3. Camera Functions	8
4. DIP Switch Settings	10
4.1 <i>DIP Switch SW1</i>	10
4.2 <i>DIP Switch SW2 (IRID)</i>	11
5. IR Remote Control	12
5.1 <i>Remote Control Functions</i>	12
5.2 <i>On-Screen Menu</i>	15
6. Instruction for Installation	23
<i>Step 1 – DIP Switch Setting</i>	23
<i>Step 2 – One End of Retaining Wire</i>	23
<i>Step 3 – Ceiling Bracket (B)</i>	24
<i>Step 4 – Ceiling Bracket (A) and Camera</i>	25
<i>Step 5 – Mount Camera to Ceiling</i>	26
<i>Step 6 – Screw to Fix Camera</i>	27

<i>Step 7 – Cable Connection</i>	27
7. Network Configuration	28
8. RMC-180 PTZ Camera Control Unit	33
<i>Direct Connection to Camera</i>	33
9. Firmware Update	34
10. Dimensions	35
11. Specifications	36
12. Service & Support	38

Disclaimer of Product and Services

The information offered in this instruction manual is intended as a guide only. At all times, Datavideo Technologies will try to give correct, complete and suitable information. However, Datavideo Technologies cannot exclude that some information in this manual, from time to time, may not be correct or may be incomplete. This manual may contain typing errors, omissions or incorrect information. Datavideo Technologies always recommend that you double check the information in this document for accuracy before making any purchase decision or using the product. Datavideo Technologies is not responsible for any omissions or errors, or for any subsequent loss or damage caused by using the information contained within this manual. Further advice on the content of this manual or on the product can be obtained by contacting your local Datavideo Office or dealer.

FCC Compliance Statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

Warnings and Precautions

1. Read all of these warnings and save them for later reference.
2. Follow all warnings and instructions marked on this unit.
3. Unplug this unit from the wall outlet before cleaning. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning.
4. Do not use this unit in or near water.
5. Do not place this unit on an unstable cart, stand, or table. The unit may fall, causing serious damage.
6. Slots and openings on the cabinet top, back, and bottom are provided for ventilation. To ensure safe and reliable operation of this unit, and to protect it from overheating, do not block or cover these openings. Do not place this unit on a bed, sofa, rug, or similar surface, as the ventilation openings on the bottom of the cabinet will be blocked. This unit should never be placed near or over a heat register or radiator. This unit should not be placed in a built-in installation unless proper ventilation is provided.
7. This product should only be operated from the type of power source indicated on the marking label of the AC adapter. If you are not sure of the type of power available, consult your Datavideo dealer or your local power company.
8. Do not allow anything to rest on the power cord. Do not locate this unit where the power cord will be walked on, rolled over, or otherwise stressed.
9. If an extension cord must be used with this unit, make sure that the total of the ampere ratings on the products plugged into the extension cord do not exceed the extension cord's rating.
10. Make sure that the total amperes of all the units that are plugged into a single wall outlet do not exceed 15 amperes.
11. Never push objects of any kind into this unit through the cabinet ventilation slots, as they may touch dangerous voltage points or short out parts that could result in risk of fire or electric shock. Never spill liquid of any kind onto or into this unit.
12. Except as specifically explained elsewhere in this manual, do not attempt to service this product yourself. Opening or removing covers that are

marked "Do Not Remove" may expose you to dangerous voltage points or other risks, and will void your warranty. Refer all service issues to qualified service personnel.

13. Unplug this product from the wall outlet and refer to qualified service personnel under the following conditions:
 - a. When the power cord is damaged or frayed;
 - b. When liquid has spilled into the unit;
 - c. When the product has been exposed to rain or water;
 - d. When the product does not operate normally under normal operating conditions. Adjust only those controls that are covered by the operating instructions in this manual; improper adjustment of other controls may result in damage to the unit and may often require extensive work by a qualified technician to restore the unit to normal operation;
 - e. When the product has been dropped or the cabinet has been damaged;
 - f. When the product exhibits a distinct change in performance, indicating a need for service.

Warranty

Standard Warranty

- Datavideo equipment are guaranteed against any manufacturing defects for one year from the date of purchase.
- The original purchase invoice or other documentary evidence should be supplied at the time of any request for repair under warranty.
- The product warranty period begins on the purchase date. If the purchase date is unknown, the product warranty period begins on the thirtieth day after shipment from a Datavideo office.
- All non-Datavideo manufactured products (product without Datavideo logo) have only one year warranty from the date of purchase.
- Damage caused by accident, misuse, unauthorized repairs, sand, grit or water is not covered under warranty.
- Viruses and malware infections on the computer systems are not covered under warranty.
- Any errors that are caused by unauthorized third-party software installations, which are not required by our computer systems, are not covered under warranty.
- All mail or transportation costs including insurance are at the expense of the owner.
- All other claims of any nature are not covered.


- All accessories including headphones, cables, and batteries are not covered under warranty.
- Warranty only valid in the country or region of purchase.
- Your statutory rights are not affected.

Three Year Warranty

- All Datavideo products purchased after July 1st, 2017 are qualified for a free two years extension to the standard warranty, providing the product is registered with Datavideo within 30 days of purchase.
- Certain parts with limited lifetime expectancy such as LCD panels, DVD drives, Hard Drive, Solid State Drive, SD Card, USB Thumb Drive, Lighting, Camera module, PCIe Card are covered for 1 year.
- The three-year warranty must be registered on Datavideo's official website or with your local Datavideo office or one of its authorized distributors within 30 days of purchase.



Disposal

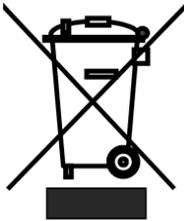

For EU Customers only - WEEE Marking

This symbol on the product or on its packaging indicates that this product must not be disposed of with your other household waste. Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the

time of disposal will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste equipment for recycling, please contact your local city office, your household waste disposal service or the shop where you purchased the product.



CE Marking is the symbol as shown on the left of this page. The letters "CE" are the abbreviation of French phrase "Conformité Européene" which literally means "European Conformity". The term initially used was "EC Mark" and it was officially replaced by "CE Marking" in the Directive 93/68/EEC in 1993. "CE Marking" is now used in all EU official documents.

1. Product Overview

The PTC-200 Video Camera is a 4K UHD PTZ camera that can be mounted on a wall, ceiling, floor, or a tabletop. The camera captures up to 4K (3,840 x 2,160, UHD) video at 2160p29.97/25 resolution, and features a wide dynamic range with backlight compensation. The camera features a motorized 12x optical zoom capability, and its image mirror and image rotation functions allow you to electronically adjust the image and deliver a correctly oriented image.



50 programmable presets including pan, tilt, and zoom positions, allow the camera to quickly move between predetermined camera positions using the remote, or an available PTZ controller.

For multi-camera shoots, the built-in tally light can identify active camera. The camera features a built-in IR cut filter in the image path for low light shooting, and then returns for daytime shooting. Moreover, PTC-200 supports real time position report on a per frame basis; this will be helpful to virtual studio application. The camera supports Sony VISCA protocol for PTZ control using RS-422 interface over the unit's RJ-45 port.

2. Features


- HD Resolution: 1/2.3" High Definition 8.93 M Pixels progressive CMOS sensor
- 12x optical zoom (f = 3.9 mm to 46.8 mm)
- High definition formats supported:
 - 4K (3,840 x 2,160, UHD): 2160p/29.97, 2160p/25
 - HD: 1080/59.94p, 1080/50p, 1080/59.94i, 1080/50i, 720/59.94p, 720/50p
- Digital Noise Reduction Function (DNR) to reduce the noise and enable clearer image under low light conditions.
- Position coordinates report in real time per frame
- Video Output: 3G-SDI + HDMI synchronously
- Tally LED Design (IR Controller / RS-422 / DVIP Operation)
- Supports VISCA Protocol Keyboard
- Supports DVIP Control Protocol

3. Camera Functions

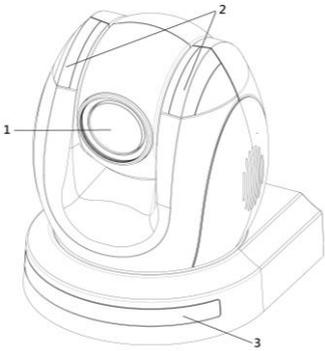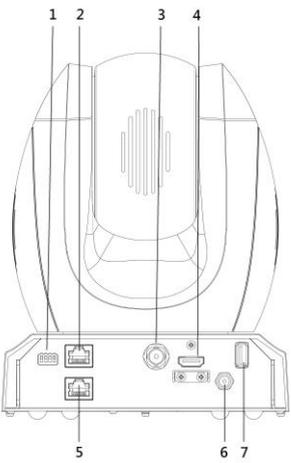Front of Camera	
	<p>1</p> <p>Lens Built-in 1/2.3" 8.93M Pixel CMOS HD color camera with white balance control, backlight compensation settings, automatic gain settings and etc.</p>
	<p>2</p> <p>Tally LED Tally lamp lights up when tally signal has been transmitted to the tally signal box.</p>
	<p>3</p> <p>Sensor for Remote Control Remote controller receiver</p>
Rear of Camera	
	<p>1</p> <p>DIP Switch SW2 DIP switch for IRID setting. <i>See the DIP Switch Settings section for details.</i></p>
	<p>2</p> <p>RS422 Communication Port Connection to the RMC-180 PTZ Camera Control Unit for remote control of the camera via any RJ-45 cable. <i>See Section 8 for physical connection to the RMC-180. For details on how to use the RMC-180, please read the RMC-180 instruction manual.</i></p>
	<p>3</p> <p>3G-SDI OUT Video signal output</p>
	<p>4</p> <p>HDMI OUT Video signal output</p>

	5	<p>DVIP Communication Port This port is used to connect the camera directly to the PC or to a network router via any RJ-45 cables.</p> <p><i>See Section 7 for configuring the camera's network settings using the DVIP Network Configuration Tool.</i></p>
	6	<p>Power Input DC in socket connects the supplied 12V PSU. The connection can be secured by screwing the outer fastening ring of the DC In plug to the socket.</p>
	7	<p>USB Port The USB port is used for F/W Upgrade Only. Insert a USB stick containing the latest firmware files into this port.</p> <p><i>See Section 9 for Firmware Update Procedure.</i></p>


Bottom of Camera

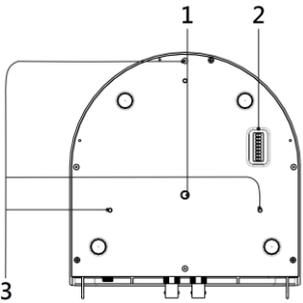 <p>The diagram shows the bottom view of the camera. It features a semi-circular top edge and a flat base. Three callout lines are present: line 1 points to a small circular hole at the top center; line 2 points to a rectangular DIP switch located on the right side; line 3 points to a larger circular hole on the left side. There are also several other smaller circular holes and a central screw hole on the base.</p>	1	<p>Tripod Screw Hole allows the user to mount the camera on the tripod.</p>
	2	<p>DIP Switch SW1 Camera settings include VISCA ID, Remote Control Protocol, Resolution and Video Mode Selection Method.</p> <p><i>See the DIP Switch Settings section for details.</i></p>
	3	<p>Screw Hole Screw holes for ceiling bracket mounting.</p> <p><i>See Section 6 for installation instructions.</i></p>

4. DIP Switch Settings

4.1 DIP Switch SW1


The DIP Switch SW1 can be found at the bottom of the camera, where the user is allowed to set the camera's VISCA ID, enable remote control, select the video resolution, and configure how the video mode can be selected.

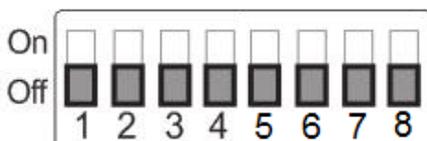

DIP SW 1/2/3	VISCA ID
ON/OFF/OFF	VISCA-ID 1
OFF/OFF/OFF	VISCA-ID 2
ON/ON/OFF	VISCA-ID 3
OFF/OFF/ON	VISCA-ID 4
ON/OFF/ON	VISCA-ID 5
OFF/ON/ON	VISCA-ID 6
ON/ON/ON	VISCA-ID 7
DIP SW 4	Remote Control Protocol
ON	DVIP
OFF	RS422
DIP SW 5/6/7/8	Resolution
OFF/OFF/OFF/ON	1920 x 1080i59.94
OFF/ON/OFF/ON	1280 x 720p59.94
OFF/OFF/ON/ON	1920 x 1080p59.94
OFF/ON/ON/ON	3840 x 2160p29.97
ON/OFF/OFF/ON	1920 x 1080i50
ON/ON/OFF/ON	1280 x 720p50
ON/OFF/ON/ON	1920 x 1080p50
ON/ON/ON/ON	3840 x 2160p25
DIP SW 8	Video Mode Selection Method
ON	Video mode selectable by DIP switch only
OFF	Video mode selectable by menu

4.2 DIP Switch SW2 (IRID)


The IRID DIP Switch can be found on the rear panel of the PTC-200 camera. This DIP switch allows the user to assign an ID number to the camera so that the user can navigate between the cameras by pressing the **CAMERA SELECT** buttons.

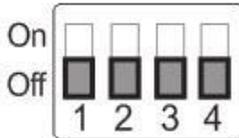

DIP SW 1/2	Camera Select Function (IR Remote Control) – Camera ID Assignment
OFF/OFF	CAM1
ON/OFF	CAM2
OFF/ON	CAM3
ON/ON	CAM4
* DIP SW 3/4 should be always OFF.	

5. IR Remote Control


5.1 Remote Control Functions

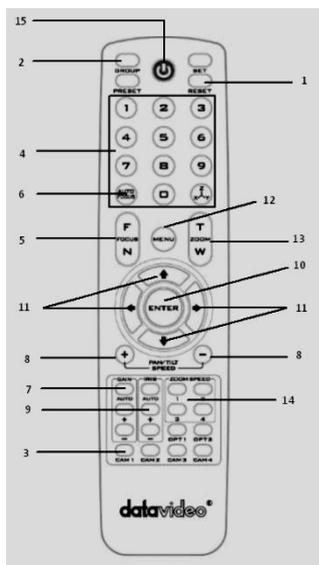

No	Item	Description
1	 Reset	Press RESET button to return the camera lens to the front.
2	 Group	Use the No. button & the group button to select the group scan. Press any of the No. buttons 1~8 and then press GROUP button.
3	 Camera Select	Select CAM1-CAM4 in a multi-camera environment Assign an ID number to the camera intended for operation by adjusting the IRID (SW2) switch located at the camera rear. Press CAMERA SELECT (CAM 1~CAM4) buttons set previously to navigate between four cameras.

No.	Item	Description
4	 Position Setting	<p>Various combinations of settings (position, zoom, focus, gain control and iris control) can be saved to presets.</p> <p>Adjust Preset Point Adjust position, zoom, focus, gain control and iris of the camera.</p> <p>Set up Preset Point Press any of the POSITION buttons 1~50 and then press SET button.</p> <p>Recall saved settings Press any of the POSITION buttons 1~50 and then press PRESET button.</p> <p>Set up Group Scan mode Press any of the POSITION buttons 1~8 and then press GROUP button.</p> <p>Return Camera Lens back to Front Press number 0 and then press PRESET button.</p>

5	<p style="text-align: center;">Focus Setup</p> 	<p>Manually focus camera lens on a subject Press either (F) FAR button or (N) NEAR button to manually focus the camera lens onto the subject.</p>
6	<p style="text-align: center;">Auto Focus Control</p> 	<p>Automatically focus camera lens on a subject Press A/ FOCUS button. Camera lens will be automatically focused on the subject such that it is positioned at the center of the screen.</p> <p>Exit Sub-Menu Option Press A/ FOCUS button to exit sub-menu option.</p>
7	<p style="text-align: center;">Gain Control</p> 	<p>Adjust Brightness Press GAIN+ button to increase the brightness or GAIN- button to decrease the brightness of the environment.</p> <p>To cancel the function or return to default setup, press A/ GAIN button.</p>
8	<p style="text-align: center;">P/T Speed</p> 	<p>Adjust Pan/ Tilt Speed Press SPEED + / - button to switch to different speeds (up/down).</p>
9	<p style="text-align: center;">Auto Iris Control</p> 	<p>Make the subject appear brighter Adjust the iris opening (aperture), to control the amount of light coming through the lens (i.e. the "exposure"). Press IRIS+ button to enlarge the iris opening to allow more light to come in so that the subject appears brighter and press IRIS- button to shrink the iris opening to allow less light to come in so that the subject appears less bright.</p> <p>To cancel the function or return to default setup, press A/IRIS button.</p>
10	<p style="text-align: center;">ENTER</p> 	<p>ENTER Menu ENTER key.</p>

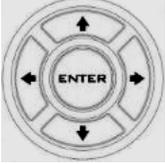11	<p>Direction Arrows</p> 	<p>Change camera direction Press arrow buttons to change the direction of the camera head.</p> <p>Stop Preset Point Auto Scan mode Press any of the DIRECTION buttons.</p> <p>Select Menu Option Press UP or DOWN button to select the menu option.</p> <p>Adjust P/T Speed Press UP or DOWN button to adjust the PAN/TILT Speed.</p> <p>Enter Sub-Menu Option Press ENTER button to enter sub- menu option.</p> <p>Adjust Setup Value Press LEFT or RIGHT button to adjust the value.</p>
12	<p>MENU Button</p> 	<p>Enter or Exit Camera Menu</p>
13	<p>Zoom In/Out Buttons</p> 	<p>Zoom Press either (T) TELE button to zoom in on the subject such that it appears to be close to the camera or (W) WIDE button to zoom out from the subject such that it appears to be far away from the camera.</p>
14	<p>Zoom Speed Button (4 speed selection)</p> 	<p>Adjust Zoom In/Out Speed Press this button to switch to different speeds (The Highest~ The Lowest).</p>
15	<p>Power Button</p> 	<p>Switch Remote Controller ON/OFF</p>

5.2 On-Screen Menu

On-Screen Menu allows the user to change various camera settings such as shooting conditions and the system setup. Press **[Menu]** on the **remote control** to enter the on-screen menu as shown below.

On-Screen MENU
1: Camera Set (Normal)
2: Memory
3: Video Output
4: Remote Control
5: System
6: Camera Set (Advance)
7: Reset P/T/Z
8: Escape

The following table lists all the options and the respective sub-options.

Main Options								
Camera Set (Normal)	Memory	Video Output	Remote Control	System	Camera Set (Advance)	Reset P/T/Z	Escape	
Sub-Options	1. Camera Name	1. Preset Position	1. Selection Way	1. PAN/TILT Reverse	1. Display	1. Camera Name	7. Reset P/T/Z	
	2. Mirror	2. Group-1	2. Video Mode	2. Remote Source	2. Set Motor	2. Mirror		
	3. White Balance	3. Group-2	3. Pattern	3. Set RS-422	3. Tally Light	3. White Balance		
	4. Focus	4. Group-3	4. Escape	4. Set DVIP	4. Reset All	4. Focus		
	5. Iris	5. Group-4		5. Set IR	5. Update Software	5. Iris		
	6. AGC	6. Group-5		6. PTZ Info. Output	6. Escape	6. AGC		
	7. Escape	7. Group-6		7. Escape		7. Fog Correction		
		8. Group-7				8. Aperture		
		9. Group-8				9. Color Gain		
		10. Escape				10. Exposure Comp.		
						11. Backlight Correction		
						12. Day/Night Mode		
						13. Shutter Speed		
						14. Gamma Mode		
						15. HR Mode		
						16. WD Mode		
						17. Digital Zoom		
						18. Low Delay		
						19. Escape		

Details of all OSD options are described in the table below.

First Level Main Options	Second Level Sub-Options	Third Level Parameters	Fourth Level Parameters	Sub-Option Descriptions	
1. Camera Set (Normal)	1. Camera Name	NAME			
		DISPLAY SW	ON/OFF		
		POSITION	LOWER LEFT		
			UPPER LEFT		
			LOWER RIGHT		
			UPPER RIGHT		
	ESCAPE				
	2. Mirror	H+V			
		V			
		H			
		OFF			
	3. White Balance	MODE	ATW/AWB(AUTO)		
			AWC (ONE PUSH)		
			MWB (MANUAL)		
			3200K (INDOOR)		
			5600K (OUTDOOR)		
			4200K (FLUO)		
		SMART ATW	SMART1		(Enabled in AWB (AUTO) mode)
			SMART2		
	SMART3				
	MWB RED COMPONENT	0~128~255		(Enabled when MODE is set to MWB (MANUAL))	
	MWB BLUE COMPONENT	0~128~255		(Enabled when MODE is set to MWB (MANUAL))	
	ESCAPE				
	4. Focus	FOCUS MODE	AUTO		
			MANUAL		
		AF SENSITIVITY	LOW		
			NORMAL		
	FOCUS SPEED	1~8			
	ESCAPE				
	5. Iris	IRIS MODE	AUTO IRIS		
			MANUAL		
		MANUAL IRIS LEVEL	F1.8		
			F2.0		
F2.4					
F2.8					
F3.4					
F4					
F4.8					
F5.6					
F6.8					
F8					
F9.6					
F11					

			F14	
			CLOSE	
	6. AGC	DAY (COLOR) AGC	ESCAPE	
			AGC MODE	OFF ON
			MANUAL GAIN (Enabled when AGC Mode is OFF)	0 dB ~ GAIN LIMIT
			GAIN LIMIT	9 dB
				12 dB
				15 dB
				18 dB
				21 dB
				24 dB
				27 dB
		30 dB		
		33 dB		
		ESCAPE		
		DNR	DNR (AT AGC ON)	ON OFF
			DNR LEVEL	0
				1
				2
				3
				4
			5	
3D NR LEVEL (Adjusted in DNR LEVEL)	0			
	1			
	2			
	3			
	4			
5				
ESCAPE				
ESCAPE				
7. Escape				
2. Memory	1. Preset Position	1-50 Preset Positions	1. P/T Speed	
			2. Focus	tuvw
			3. Iris	tuvw
			4. Gain	pqrstuvw
			5. Shutter	1/1 1/2 1/3 1/6 1/12 1/25 1/50 1/75 1/100 1/120 1/150 1/215

			1/300		
			1/425		
			1/600		
			1/1000		
			1/1250		
	6. WB Mode		AWB		
			MWB		
	7. WB R-Gain		0-127		
	8. WB B-Gain		0-127		
	9. Escape				
51. Escape					
Group-1-8	----/OF_SPD--_W- --_NEXT		1. Preset No.		
			2. Item ON/OFF		
			3. Speed Limit		
			4. Waiting Time		
			5. Next Position		
			6. Escape		
10. Escape					
3. Video Output	1. Selection Way	BY MENU			
		BY SWITCH			
	2. Video Mode	1080i60			
		1080i50			
		720p60			
		720p50			
		1080p60			
		1080p50			
		2160p30			
	2160p25				
3. Pattern	OFF				
	COLOR BAR				
4. Escape					
4. Remote Control	1. PAN/TILT Reverse	Off			
		P			
		T			
		P+T			
	2. Remote Source	RS-422, SW	(Configurable using DIP switch bit 4 ONLY)		
		DVIP, SW			
	3. Set RS-422	CAMERA ID MODE	BY MENU		
			BY SWITCH		
		CAMERA ID	1~7		
		RS-422 BAUD RATE	9600		
			19200		
			38400		
		115200			
	ESCAPE				
	4. Set DVIP	DVIP BAUD RATE	9600		
			19200		
38400					
57600					
115200					

		ESCAPE		
	5. Set IR	IR GROUP ID	CAM1~4	(Configurable using DIP switch bit 9/10 ONLY)
		ESCAPE		
	6. PTZ INFO. Output	ON/OFF		
7. Escape				
5. System	1. Display	PTZ OSD	PAN OSD	ON/OFF
			TILT OSD	ON/OFF
			ZOOM OSD	ON/OFF
			ESCAPE	
		DEBUG OSD	DEBUG IR OSD	ON/OFF
			DEBUG CAM. OSD	ON/OFF
			DEBUG RS-422 OSD	ON/OFF
			DEBUG DVIP OSD	ON/OFF
			DEBUG M_CTL OSD	ON/OFF
			DEBUG REG OSD	ON/OFF
	DEBUG FRAME NO		ON/OFF	
	PWR ON CAM TEST		ON/OFF	
	ESCAPE			
	Camera Status OSD	ON/OFF		
	Escape			
	2. Set Motor	P/T Acceleration	FAST	
			MIDDLE	
			SLOW	
		P/T Speed	Normal	
			X2, Surveillance	
		PAN Torque ADJ.	+5	
			+4	
			+3	
			+2	
			+1	
			Low	
		TILT Torque ADJ.	+5	
			+4	
			+3	
			+2	
+1				
Low				
PAN Offset ADJ.		+5.4		
		+4.5		
	+3.6			
	+2.7			
	+1.8			
	+0.9			
	+0.0			

			-0.9		
			-1.8		
			-2.7		
			-3.6		
			-4.5		
		-5.4			
		Tilt Offset ADJ.	+6.3		
			+5.4		
			+4.5		
			+3.6		
			+2.7		
			+1.8		
			+0.9		
			+0.0		
			-0.9		
			-1.8		
			-2.7		
			-3.6		
			-4.5		
	-5.4				
	-6.3				
	Escape				
	3. Tally Light	RED/GREEN			
GREEN					
RED					
OFF					
4. Reset All	YES/NO				
5. Update Software	SW VERSION	ESCAPE			
	MB CPU	V00.28a			
	MCTL CPU	V01.00			
	UPDATE ALL	YES/NO			
ESCAPE					
6. Escape					
6. Camera Set (ADVANCE)	1. Camera Name	NAME			
		DISPLAY SW	ON/OFF		
		POSITION	UPPER LEFT		
			LOWER RIGHT		
			UPPER RIGHT		
	LOWER LEFT				
	ESCAPE				
	2. Mirror	H+V			
		V			
		H			
		OFF			
	3. White Balance	MODE	ATW/AWB(AUTO)		
			AWC (ONE PUSH)		
			MWB (MANUAL)		
			3200K (INDOOR)		
5600K (OUTDOOR)					
4200K (FLUO)					

		SMART ATW	SMART1	(Enabled in AWB (AUTO) mode)	
			SMART2		
			SMART3		
		MWB RED COMPONENT	0~128~255	(Enabled when MODE is set to MWB (MANUAL))	
	MWB BLUE COMPONENT	0~128~255	(Enabled when MODE is set to MWB (MANUAL))		
	ESCAPE				
	4. Focus	FOCUS MODE	AUTO		
			MANUAL		
		AF SENSITIVITY	LOW		
			NORMAL		
	FOCUS SPEED	1~8			
	ESCAPE				
	5. Iris	IRIS MODE	AUTO		
			MANUAL		
		Manual IRIS LEVEL	F1.8		
			F2.0		
			F2.4		
			F2.8		
			F3.4		
			F4		
			F4.8		
F5.6					
F6.8					
F8					
F9.6					
F11					
F14					
CLOSE					
ESCAPE					
6. AGC	DAY (COLOR) AGC	AGC MODE	ON		
			OFF		
		MANUAL GAIN (Enabled when AGC Mode is OFF)	0dB~GAIN LIMIT		
			GAIN LIMIT	9 dB	
		12 dB			
		15 dB			
		18 dB			
		21 dB			
		24 dB			
		27 dB			
	30 dB				
33 dB					
ESCAPE					
DNR	DNR(AT AGC ON)	ON			
		OFF			
	DNR LEVEL	0			

				1
				2
				3
				4
				5
			3D NR LEVEL (Adjusted in DNR LEVEL)	0
				1
				2
				3
				4
				5
		ESCAPE		
	7. Fog Correction	FOG CORRECTION	OFF/ON	
		ESCAPE		
	8. Aperture	0~15		
	9. Color Gain	0~14		
	10. Exposure Comp.	0~14		
	11. Backlight Correction	OFF/ON	(This option is enabled after AGC is turned on)	
	12. Day/Night Mode	B/W		
		COLOR		
	13. Shutter	SHUTTER SPEED	1/30	
			1/60	
			1/90	
			1/100	
			1/125	
			1/180	
			1/250	
			1/350	
			1/500	
			1/725	
			1/1000	
	1/1500			
		ESCAPE		
	14. Gamma Mode	STANDARD		
		MODE1 (WD OFF)		
		MODE2 (WD OFF)		
	15. HR Mode	ON/OFF		
	16. WD Mode	VE/OFF		
	17. Digital Zoom	ON/OFF		
	18. Low Delay	ON/SET		
	19. Escape			
	7. Reset P/T/Z	YES/NO		
	8. Escape			


6. Instruction for Installation

Step 1 – DIP Switch Setting

Set the Mirror option to H+V mode.


Step 2 – One End of Retaining Wire

Attach the retaining wire to the junction box mounted on the ceiling by screwing one end of the retaining wire into a screw hole in the junction box with a screw (not supplied) as shown in the diagram below.

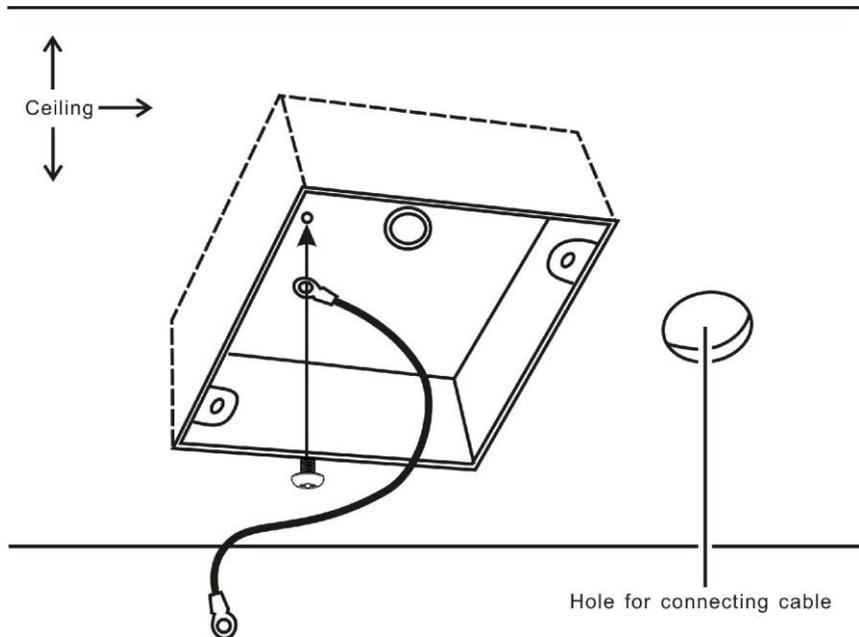

Step 3 – Ceiling Bracket (B)


- Again, as illustrated in the diagram below, screw a ceiling bracket (B) into the junction box mounted on the ceiling.
- Make sure the screw holes of the ceiling bracket (B) are aligned with the holes on the junction box.

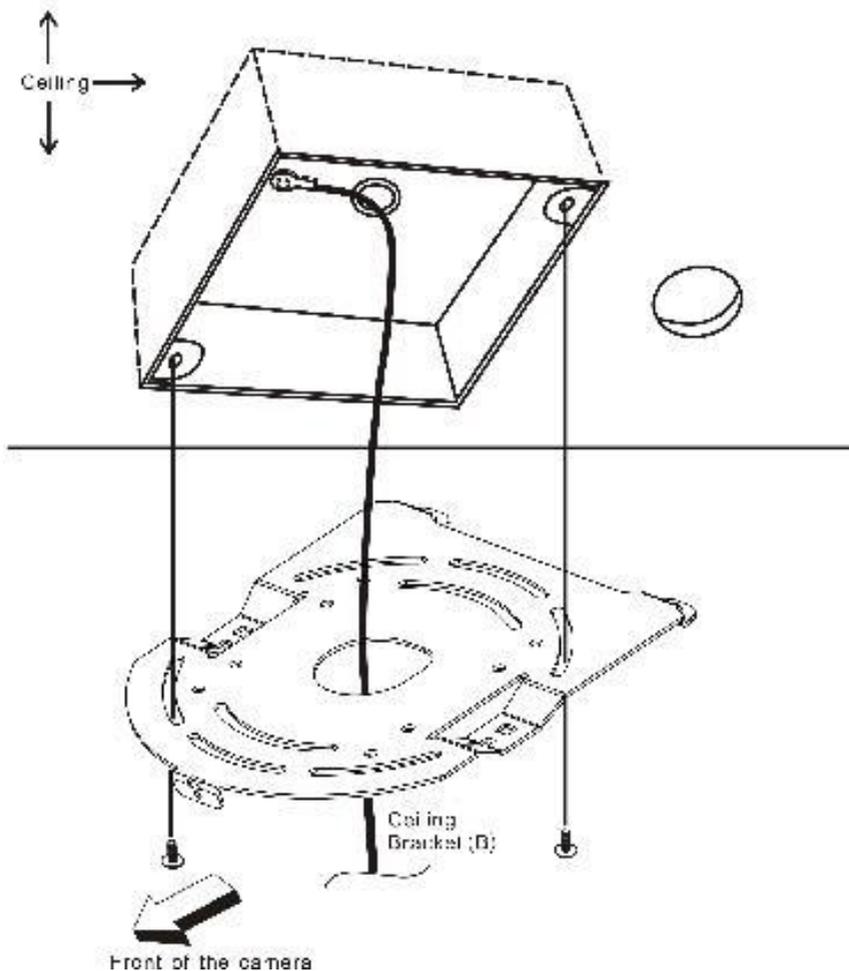


Step 4 – Ceiling Bracket (A) and Camera

Follow the steps below to screw ceiling bracket (A) into the bottom of the camera using three screws.

- Position the screws as shown in the diagram below.
- Align the screw holes on the bottom of the camera with those in the ceiling bracket.
- Insert the screws into the corresponding screw holes in the numbered order.
- The other end of the retaining wire is screwed into the screw hole #3.
- Securely tighten all three screws.

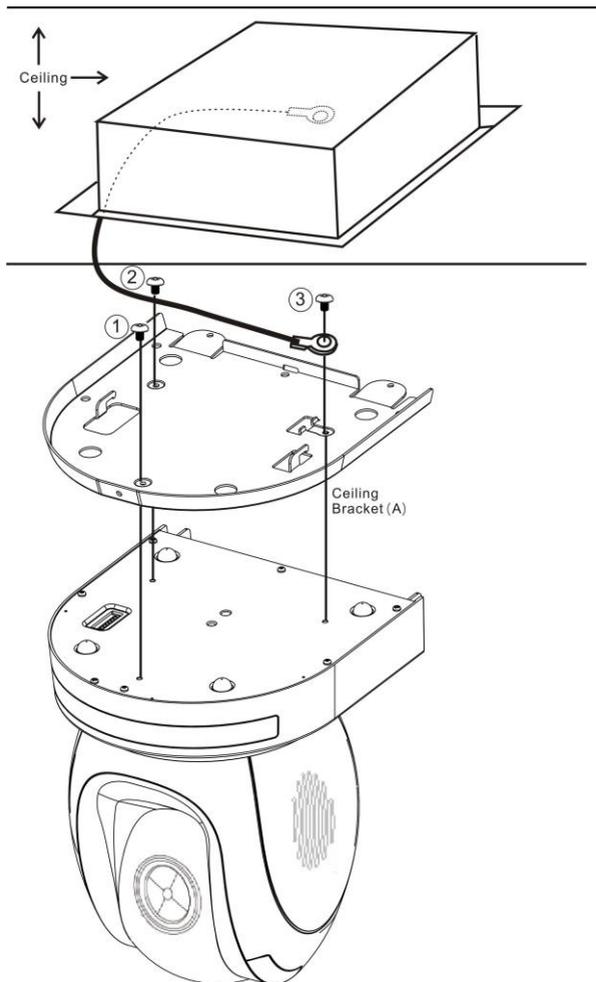


Step 5 – Mount Camera to Ceiling

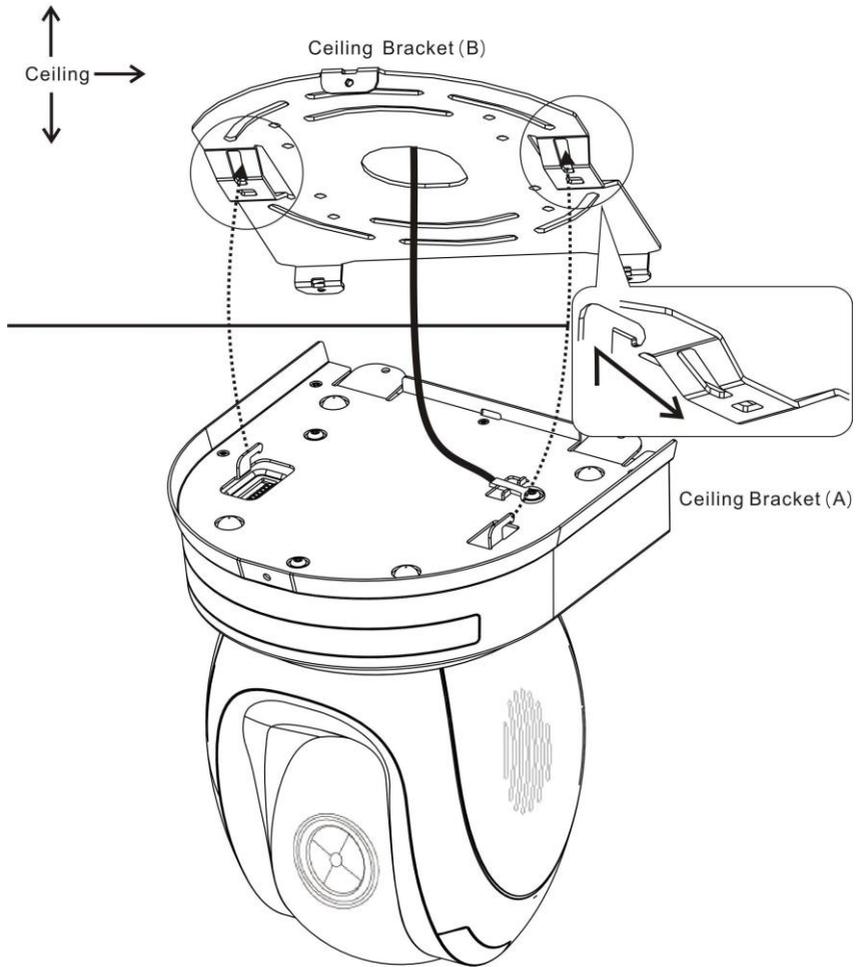


Step 6 – Screw to Fix Camera

Fix the camera in place by screwing three screws into the respective screw holes as shown in the diagram below.

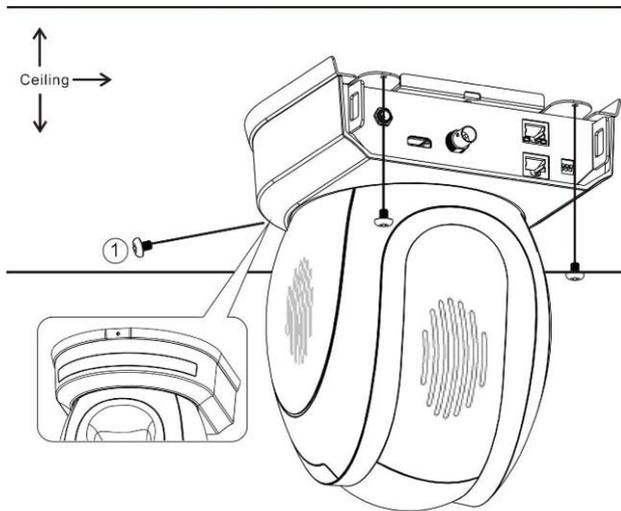

Step 7 – Cable Connection

Connect the cables to the respective connectors on the rear of the camera.

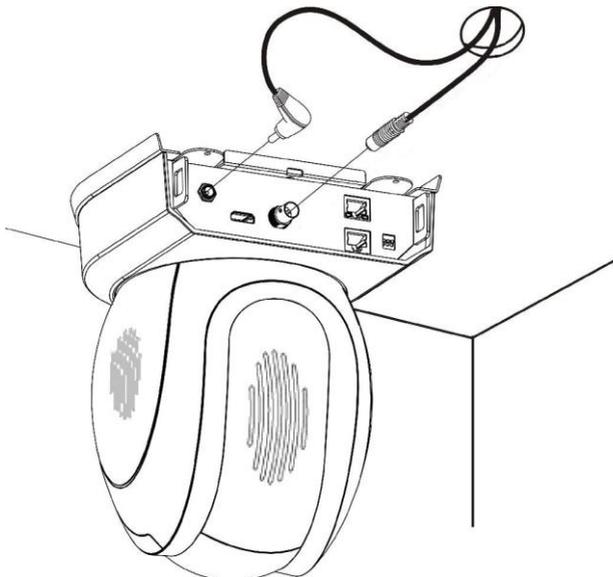

7. Network Configuration

The DVIP Configuration Tool allows the user to configure network settings of the PTC series cameras on the PC. **The DVIP Configuration Tool can be downloaded from the product page.**


The PTC series cameras usually have a static IP address of 192.168.100.XXX. The unit can be directly connected to a Windows-based computer using an RJ-45 Ethernet cable. The following setup procedure outlined below should allow you to initially configure the unit before moving it to an existing DHCP / LAN network.

Note: All devices should be connected to the same network domain.

1. First connect the **DVIP port** of the **PTC-200 PTZ camera** to a Windows computer using an RJ-45 Ethernet cable.

Note: You do not need to manually assign an IP address to the PC but make sure the right interface card is selected at Step 11.

2. Install the DVIP Configuration Tool by double clicking the executable file already downloaded to your computer.
3. Locate the DIP switch at the bottom of the PTC series camera.

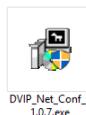

4. Set DIP Switch positions 1 and 4 to ON.



5. Plug in the power cord into the PTC series camera and connect it to a monitor via the HDMI interface.
6. Open the main menu by pressing the menu button on the IR remote control and select option 4 **“Remote Control.”**

[MAIN MENU]

- 1: CAMERA SET (NORMAL)
- 2: MEMORY
- 3: VIDEO OUTPUT
- 4: REMOTE CONTROL

```
5: SYSTEM
6: CAMERA SET (ADVANCE)
7: RESET P/T/Z
8: ESCAPE
```

7. Select **"SET DVIP."**

```
[REMOTE CONTROL]
1: PAN/TILT REVERSE: P+T
2: REMOTE SOURCE: DVIP, SW
3: SET RS422
4: SET DVIP
5: SET IR
6: PTZ INFO. OUTPUT: OFF
7: ESCAPE
```

8. Set **DVIP baud rate** to 115200.

```
[SET DVIP]
1: DVIP BAUDRATE: 115200
2: ESCAPE
```


9. Connect your PC directly to the DVIP port on the PTC series camera or if in a multiple DVIP device environment, connect all devices to an Ethernet router. Please note that the router and the connected devices should be in the same IP range.
10. On the PC, open the DVIP Configuration Tool by double clicking **"DVIP_Net_Conf.exe."** **The DVIP Configuration Tool can be obtained from Datavideo local distributors or downloaded from the product page.**
11. After the DVIP Configuration Tool is opened, select your network interface card and click the **"OK"** button.




Note: Make sure you select the card that is on the same network as the camera or else the DVIP Configuration Tool will not be able to find the connected DVIP devices.



- On the DVIP Device List, you will then be able to see the Device Name, MAC address and IP address of the connected device.

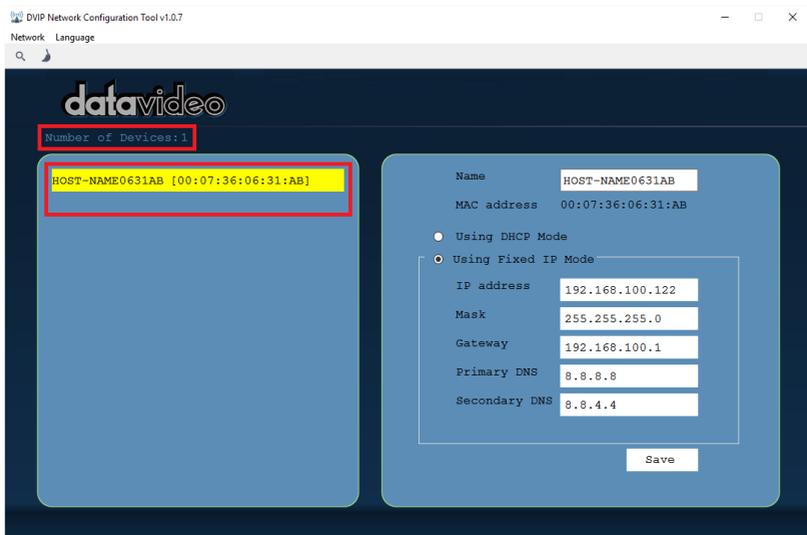

- After the network setting (Static or DHCP) and the host name are properly configured, click the “Save” button to write the new information into the device.
- Right after the “Save” button is clicked, you will be able to see a prompt message at the top right corner to request for a device reboot for the new settings to become effective.

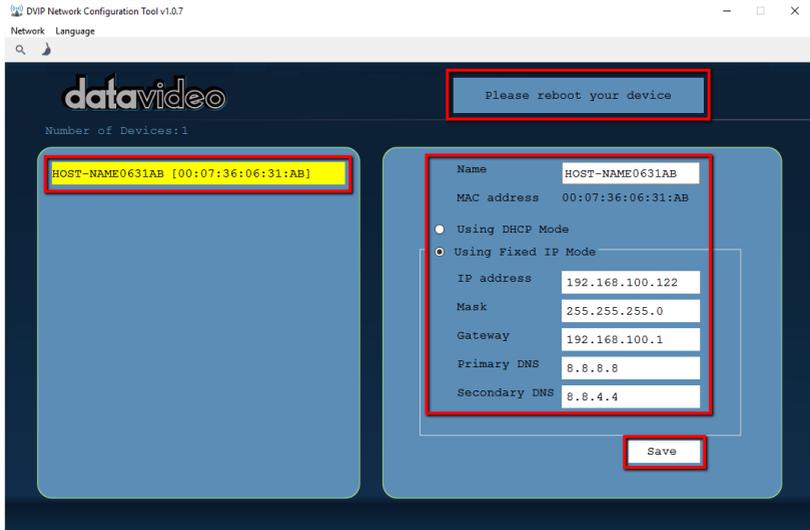

15. Reboot the device to apply the new settings.

In addition to configuring network settings of the connected DVIP devices, the DVIP configuration tool also allows you to **search for DVIP devices, clear the device list, switch to other interface cards and change the interface language.** Each individual function is described below.


- **Device Search**

On the tool bar, the user can click the search icon to search for all DVIP devices.



- **Clearing Device List**

On the tool bar, the user is allowed to clear the device list by clicking the “Device List Clear” button.

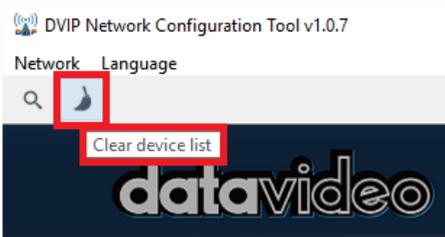

- **Switch to Other Network Interfaces**

To select other network interface cards, click Network → Network Card



- **Language Selection**

On the tool bar, select a language: **Traditional Chinese, Simplified Chinese** or **English**



8. RMC-180 PTZ Camera Control Unit


The RMC-180 PTZ Camera Controller is designed to control up to 4 Datavideo Pan Tilt Zoom (PTZ) cameras such as the PTC-200.

The four RJ-45 ports provided on the RMC-180 rear serve to connect PTZ cameras, thus allowing the user to use any RJ-45 cable to connect the RMC-180 to the RS-422 port located on the PTZ camera's rear panel. The communication protocol is VISCA.

Note: Before connecting the camera to these channel ports, please set bit 4 of the camera DIP switch located at the bottom to OFF.

Direct Connection to Camera






To use the RMC-180 PTZ Camera Control Unit to directly control the PTC-200 camera, connect the RS-422 port on the camera's rear panel to the RJ-45 port of the RMC-180 using any RJ-45 cable. The RS-422 wiring scheme is shown below.

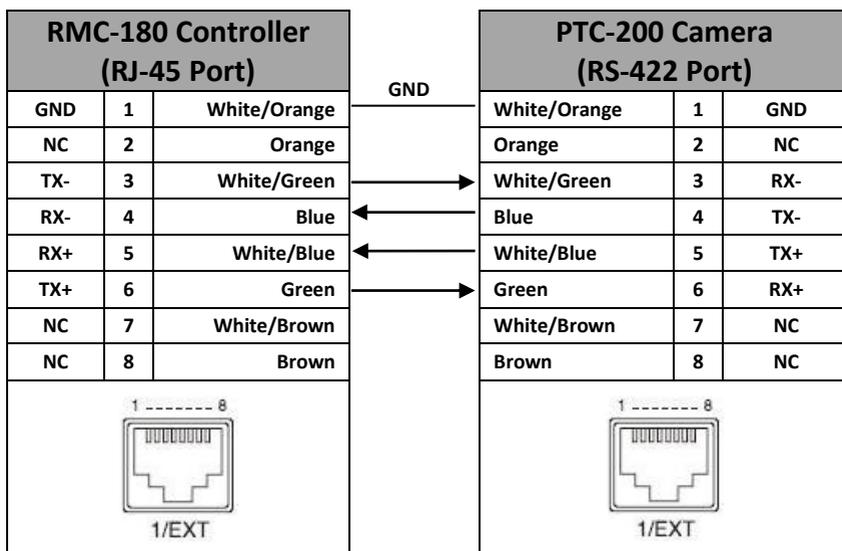

9. Firmware Update

- 1) Copy two image files, p200mcpu.bin and p200mctl.bin, into the root directory of a USB hard drive (<16 GB) and insert it into the USB port of the PTC-200 (You may also use USB extension cord).
- 2) Open the operation menu using the IR remote controller (select from CAM 1-4; default is CAM1)
- 3) Main Menu
=> 5: SYSYEM
 => 5: UPDATE SOFTWARE
 => 4: UPDATE ALL
 =>YES
 => ENTER
- 4) Wait for another five minutes until the following lines appear on the screen
 - Updated Mot-BD => OK.
 - Updated MCPU => OK.The OSD will flash "Write OK/Power ON Again" alternately; it takes approximately 5-7 minutes to complete the update.
- 5) Turn off the device by unplugging the power cord and plug the power cord back into the socket to turn on the device again.
- 6) FW Update is complete as soon as the device is booted up.

10. Dimensions

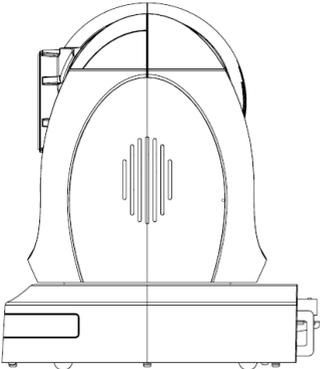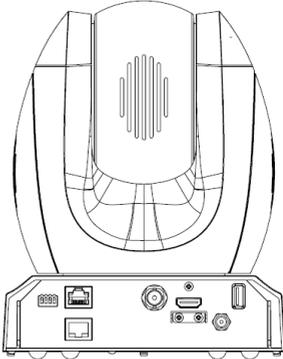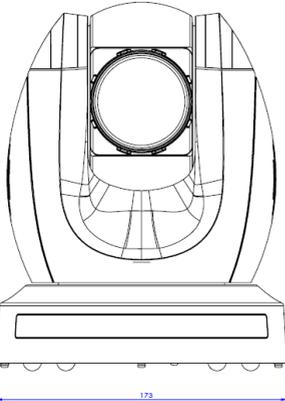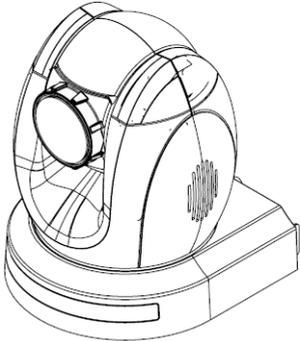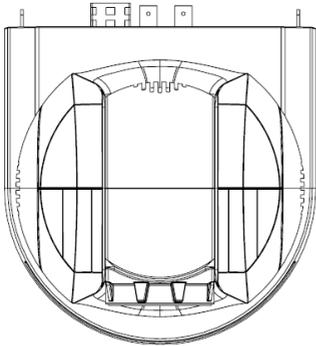

Unit: mm

11. Specifications

Video	
Image Pickup Element	1/2.3" type Exmor R CMOS
Effective Picture Elements	Approx. 8.93 Mega pixels
Resolution	HD / FHD / UHD
Signal System	4K (3,840 x 2,160, UHD): 2160p/29.97, 2160p/25 HD: 1080p/59.94, 1080p/50, 1080i/59.94, 1080i/50, 720p/59.94, 720p/50
Min. Illumination	50%, High Sensitivity Mode: Color: 0.75 lx (F1.8, AGC on, 1/30s) 50%, Normal Mode: Color: 3 lx (F1.8, AGC on, 1/30s)
Electric Shutter	1/25 (1/30), 1/50 (1/60), 1/120 (1/100), 1/250, 1/500, 1/1000 sec
Iris Control	Auto / Manual
Digital Noise Reductions	0 – 5
On-Screen Display (OSD)	English
White Balance	Auto, ATW, Indoor, Outdoor, Outdoor Auto, Sodium Vapor Lamp (Fix/Auto/Outdoor Auto), One-Push, Manual
AGC / Gain Control	Auto / Manual (0 dB to 33 dB) Max. Gain Limit (9 dB to 33 dB)
Zoom Ratio	12x Optical Zoom, f = 3.9 mm (wide) to 46.8 mm (tele) F1.8 to F2.0
Mirror	OFF / Horizontal / Vertical / H+V
Camera Title (OSD)	ON / OFF
Color Bar	On / Off (Full Bar)
Focus Mode	Auto / Manual
Day & Night (IR)	Auto / Color / BW

Pan / Tilt / Zoom	
Pan/Tilt Range	Pan: 270° , Tilt: +90° to -12°
Pan/Tilt Speed	Manual: 1~150°/Sec Swing: 1~150°/Sec
Initialization Time	30 sec
Coordinate Report	P, T, Z (While Panning , Tilting and Zooming) by frame
Lens	
Lens Type	12x Optical Zoom
Focal Length	F = 3.9 mm (WIDE) to 46.8 mm (TELE) F1.8 to F2.0
Angle of View (Horizontal)	Approx. 70.7 degrees (WIDE END) / 6.4 degrees (TELE END)
Video Output	
Video Output	HDMI (V1.4) x 1 3G-SDI x 1
Control	
Protocol	VISCA / DVIP
Remote Control	RS-422 & DVIP by RJ-45 interface
F/W Update	USB
IR Control	One IR controller
Others	
Moving Noise while Tilt	<=25dB
Moving Noise while Pan	<=25dB
Operating Temperature	0°C ~ 50°C
Storage Temperature	- 10°C ~ 60°C
Operating Humidity:	10 % to 80 % (no condensation)
Certifications	CE / FCC Class A

Service & Support

It is our goal to make owning and using Datavideo products a satisfying experience. Our support staff is available to assist you to set up and operate your system. Contact your local office for specific support requests. Plus, please visit www.datavideo.com to access our FAQ section.

China Shanghai
Datavideo Technologies China Co
601 Building 10, No. 1228,
Rd. Jiangchang,
Jingan District, Shanghai
Tel: +86 21-5603 6599
Fax: +86 21-5603 6770
E-mail: service@datavideo.cn

China Beijing
Datavideo Technologies China Co
No. 812, Building B, Wankai Center,
No. 316, Wan Feng Road, Fengtai District,
Beijing, China
Tel: +86 10-8586 9034
Fax: +86 10-8586 9074
E-mail: service@datavideo.cn

China Chengdu
Datavideo Technologies China Co
B-823, Meinian square, No. 1388,
Middle of Tianfu Avenue, Gaixin District,
Chengdu, Sichuan
Tel: +86 28-8613 7788
Fax: +86 28-8513 6486
E-mail: service@datavideo.cn

China Fuzhou
Datavideo Technologies China Co
A1-2318-19 Room, No. 8, Aojiang Road,
Tajiang District, Fuzhou, Fujian, China
Tel: 0591-83211756 · 0591-83210187
Fax: 0591-83211262
E-mail: service@datavideo.cn

China Jinan
Datavideo Technologies China Co
902, No. 1 business building,
Xiangtai Square, No. 129,
Yingxionshan Road, Shizhong District,
Jinan City, Shandong Province, China
Tel: +86 531-8607 8813
E-mail: service@datavideo.cn

Hong Kong
Datavideo Hong Kong Ltd
G/F, 26 Cross Lane
Wanchai, Hong Kong
Tel: +852-2833-1981
Fax: +852-2833-9916
E-mail: info@datavideo.com.hk

India Noida
Datavideo India Noida
A-132, Sec-63, Noida-201307,
India
Tel: +91-0120-2427337
Fax: +91-0120-2427338
E-mail: sales@datavideo.in

India Kochi
Datavideo India Kochi
2nd Floor- North Wing, Govardhan Building,
Opp. NCC Group Headquarters, Chittoor Road,
Cochin- 682035
Tel: +91 4844-025336
Fax: +91 4844-047696
E-mail: sales@datavideo.in

Netherlands
Datavideo Technologies Europe BV
Floridadreef 106
3565 AM Utrecht,
The Netherlands
Tel: +31-30-261-96-56
Fax: +31-30-261-96-57
E-mail: info@datavideo.nl

Singapore
Datavideo Visual Technology(S) Pte Ltd
No. 178 Paya Lebar Road #06-07
Singapore 409030
Tel: +65-6749 6866
Fax: +65-6749 3266
E-mail: info@datavideovirtualset.com

Singapore
Datavideo Technologies (S) PTE Ltd
No. 178 Paya Lebar Road #06-03
Singapore 409030
Tel: +65-6749 6866
Fax: +65-6749 3266
E-mail: sales@datavideo.sg

Taiwan
Datavideo Technologies Co. Ltd
10F, No. 176, Jian 1st Rd., Chung Ho
District, New Taipei City 235, Taiwan
Tel: +886-2-8227-2888
Fax: +886-2-8227-2777
E-mail: service@datavideo.com.tw

United States
Datavideo Corporation
7048 Elmer Avenue,
Whittier, CA 90602,
U.S.A.
Tel: +1-562-696 2324
Fax: +1-562-698 6930
E-mail: sales@datavideo.com

United Kingdom
Datavideo UK Limited
Brookfield House, Brookfield Industrial
Estate, Peakdale Road, Glossop,
Derbyshire, SK13 6LQ
Tel: +44-1457 851 000
Fax: +44-1457 850 964
E-mail: sales@datavideo.co.uk

France
Datavideo France s.a.r.l.
Cité Descartes 1, rue Albert Einstein
Champs sur Marne 774477 –
Marne la Vallée cedex 2
Tel: +33-1-60370246
Fax: +33-1-60376732
E-mail: info@datavideo.fr



Please visit our website for latest manual update.
www.datavideo.com/product/PTC-200

datavideo

www.datavideo.com

All the trademarks are the properties of their respective owners. Datavideo Technologies Co., Ltd. All rights reserved 2018

Jan-30-2018
Version : E4