Chip-Array LED Camera Light S-2070

Ver:V1.0.0V01

SWIT

USER MANUAL

SWIT Electronics Co., Ltd.


Tel:+86-25-85805753 Fax:+86-25-85805296 http://www.swit.cc E-mail: contact@swit.cc

Congratulations on your purchase of this product. Please read this user manual carefully.

Features

- New generation chip-array LED technology, outputs bright but soft & glareless light;
- ♦ 60° wide beam angle, equally spread light, no visible lighting edge and single shadow;
- ◆ 13W lower power consumption, 800Lux @ 1meter, equivalent to 70W halogen bulb, 10%-100% dimmer
- 5000K output, 5600K/3200K filter;
- ◆ 6V-17V wide voltage input, support D-tap power, standard DV battery and special slim battery;
- High intensity and toughness glass fiber housing, cool-touch, and both screw and cold shoe install.

Product view

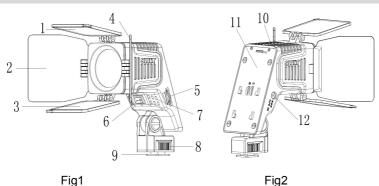

- 5600K filter
- Barn door
- 3 3200K filter
 - Barn door
- 7 Cooling vent
- 8 Fasten knob
- 9 Cold shoe
- 10 Cooling vent
- Dimmer knob 11
- 6 Switch on/off
- 11 DV plate install12 DC-IN socket

Caution

1. Never attempt to open the device. Refer all servicing to qualified personnel.

2. Never insert anything into the cooling vent to avoid damage or short circuit.

- 3. Keep the light away from rain or moisture.
- 4. Please do not stare at the turned on LED light.
- 5. Keep the filters clean.
- 6. When powering through DC-IN socket by D-tap cable, please make sure the power supply's voltage and power meet the light input requirements.
- 7. Working temperature: -10 $^\circ\!\mathrm{C}$ ~40 $^\circ\!\mathrm{C}$
- 8. Keep the cooling vent clear to avoid damage.

Clean

Use a soft, dry cloth to clean the LED light. If you clean the light with soft cloth slightly moistened with neutral detergent, please dry the surface of the light with a soft, dry cloth. Do not use a damp cloth or alcohol, gasoline and other solvents of any kind.

Specification

1

2

4

5

Model	S-2070
Input	DC 6V-17V
Power	Approx. 13W
Beam angle	Approx. 60°
Illuminance	800 lux @ 1 meter
Color temperature	5000K itself, with 5600K&3200K filter
Working temp.	-10°C~+40°C
Storage temp.	-20°C ~+55°C
Dimension	108×80×133mm
Mass	Approx. 274g

Package

0	
S-2070 light	x1
S-7004 snap-on DV battery plate (Optional types for different batteries)	x1
DC cable (D-tap or Pole-tap optional)	x1
User manual	x1
Warranty card	x1
Portable bag	x1

Usage

1 Power the light

S-2070 is 6-17V voltage input and offers various power supply methods.

- By special slim battery S-8040 (Optional purchase)
 - Make sure there's no power lead connected into DC-IN socket and the light is switched off (turn the switch to "O").
 - ② Ālign a fully charged S-8040 battery to the DV mount slot to same side, and press tightly in. Slide the battery downward to snap together. See Fig 3

By various standard DV camera batteries

- Align the S-7004 series battery plate to the DV mount slot to same side, and press tightly in. Then slide the S-7004 downward to snap together. See Fig 4
- 2 Fix the ĎV mount with two screws.
- Make sure the light is switched off (turn the switch to "O"). Mount a fully charged battery to the S-7004 mount. Fig 4

Remark: Select a compatible S-7004 battery plate to match your DV battery:

Model	Compatible battery	Recommended SWIT
S-7004F	SONY NP-F770/970	S-8972, S-8970, S-8770
S-7004D	Panasonic D54/VW-VBD58	S-8D62, S-8D58
S-7004J	JVC BN-V428U	S-8428
S-7004C	Canon BP-930/945	S-8945, S-8845
S-7004U	SONY BP-U60/30	S-8U62
S-7004E	Canon DSLR LP-E6	S-8PE6
S-7004B	Panasonic VW-VBG6	S-8BG6
S-7004V	JVC BN-VF823	S-8823
S-70041	JVC SSL-JVC50	S-8150

By DC cable

1 Make sure the light is switched off (turn the switch to " \bigcirc "). Plug the pole end of package supplied DC cable into the DC-IN socket.

⁽²⁾ Plug the other end* of DC cable to camera auxiliary power tap or the battery DC output socket.

*Remark: S-2070 supplied 2 kinds of DC cables, optional for different power sources:

Cable Model	Connector description	Length
S-7104	Battery D-tap output→Pole-tap input to S-2070	0.6m
S-7108	Battery Pole-tap output→Pole-tap input to S-2070	1m

③ For third-party DC cables, please make sure the DC connector is 5.5/2.1mm pole and input voltage should be 6-17V; and inner: positive, Outer: negative. See Fig 5.

2 Fix the LED light to the camera

• By Cold shoe

- ① Anticlockwise revolve the fasten knob, till the screw bolt is back into the cold shoe slice.
- ② Align the cold shoe slice with the cold shoe mount on the camera handle.
- ③ Clockwise revolve the fasten knob to install the light onto the camera.

• By 1/4" screw mount

- ① Clockwise revolve the fasten knob, till the screw bolt is out of the cold shoe slice.
- 2 Align the screw bolt with the 1/4" screw thread on the camera handle.
- ③ Continuously clockwise revolve the fasten knob to install the light onto the camera.

3 Adjust the angle of the light:

Hold the light, and adjust the light upward or downward. See Fig 7.

4. Open barn doors and filters:

. Open the barn doors and filters to about 45°. See Fig 1

5. Switch on: Turn the switch to "I".

6. Adjust the illuminance:

Ádjust the illuminance from 10% to 100% by the dimmer.

7. Adjust color temperature:

Output 5600K light by using 5600K filter(See Fig1 -(1)); Output 3200K light by using 3200K filter(See Fig1 -(3))

