



BZB-EXHD

HDMI Extender over single
50m/164ft UTP Cable with IR Control

User Manual

Thank you for purchasing this product. For optimum performance and safety, please read these instructions carefully before connecting, operating or adjusting this product. Please keep this manual for future reference.

Table of Contents

1. Introduction	3
2. Package Contents	4
3. Features	4
4. Specifications	5
5. Panel descriptions	6
5.1 Transmitting unit.....	6
5.2 Receiver unit	7
5.3 RX Equalizer distance adjust	8
6. Connection diagram.....	9
7. Connect and Operate	9
8. Wideband IR (30KHz--60KHz) introduction.....	11
9. Mission Statement.....	12
10. Warranty Information.....	12

1. Introduction

The HDMI Extender over Single Cat5e/6 with IR extends high definition video and audio signals and IR, at a distance of up to 164ft/50m over a single Cat5e/6 cable. Features EDID management, which allows and encourages source and display “handshake” for seamless integration. With only one cost effective Cat5e/6 cable, high definition sources with HDMI outputs can be connected to high definition displays with HDMI inputs over long distances. Deep color video, DTS-HD or Dolby TrueHD audio is supported and compatible with the extender. In addition, the extender is also equipped with bi-directional IR pass-through which allows for source or display control.

The extender includes two units: transmitting unit and receiving unit. The transmitting unit is used to capture the HDMI input with IR signals and carries the signals via one cost effective Cat5e/6 cable. The receiving unit is responsible for equalizing the transmitted HDMI signal and reconstructing IR control signals. The extender offers the most convenient solution for HDMI extension over a single Cat5e/6 with long distance capability, and is the perfect solution for any application.

2. Package Contents

◆ HDMI Transmitter.....	1PCS
◆ HDMI Receiver.....	1PCS
◆ Windband IR Tx cable.....	1PCS
◆ Windband IR Rx cable.....	1PCS
◆ 5V1A DC Power Supply Adaptor.....	1PCS
◆ Product Manual.....	1PCS

3. Features

- Allows HDMI Audio/Video and IR signals to be transmitted over a single Cat5e/6 cable.
- Support copy EDID from receiver display or loop out display.
- Allows for cascading via additional HDMI loop out port.
- Support power over cat5e/6/7 function.
- Transmission Range: Extends 1080p resolution up to 164ft/50m over a single Cat5e or Cat6 cable.
- Works with HDMI and HDCP compliant devices.
- Supports up to 1080p High Definition resolution.
- Compact design for an easy and flexible installation.

4. Specifications

Video Bandwidth: Single-link 165Mhz [4.95Gbps]

Video Support: 480i/480p/720p/1080i/1080p @60

Audio Support: Surround Sound (up to 7.1 ch) or stereo digital audio

Transmission Range: HD [1080p 24-bit color] – up to 50m [164ft]

Input TMDS Signal: 3.3 volts

Input DDC Signal: 5.0 volts/P-P

ESD Protection: Human Body model: +/- 8 kV (air-gap discharge)

+/- 4 kV (contact discharge)

HDMI connector: Type A 19 pin female

RJ-45 connector: WE/SS 8P8C

3.5mm connector: (TX and RX) IR Receiver/IR Blaster

MECHANICAL SPECS

Housing: Metal enclosure

Power Supply: (1) 5V1A DC

Power consumption: 1.5 watts (TX); 1.0 watts (RX)


Operation temperature: 32~104 °F

Storage temperature: -4 ~140 °F

Relative humidity: 20~90 % RH (no condensation)


5. Panel descriptions

5.1 Transmitting unit

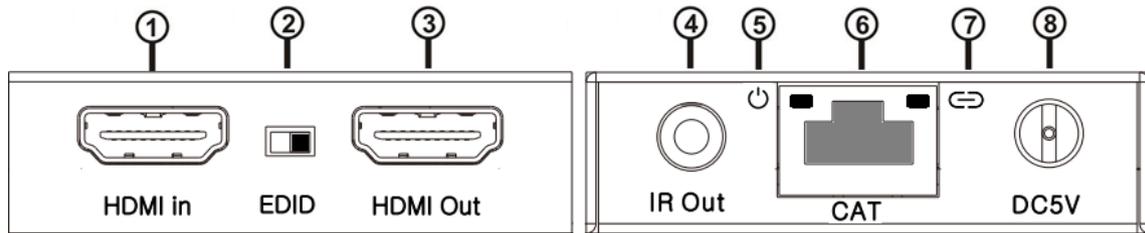

- ① **HDMI in:** This slot is where you connect the HDMI output port of your source equipment such as DVD/Blu-ray players or Set-Top-Box with an HDMI cable.
- ② **EDID:** The switcher can switch copy EDID function, switch to right position, the extender will copy HDMI loop out display EDID information to source. Switch to left position, the extender will copy Receiver display EDID to source.
- ③ **HDMI out:** This slot is to connect the HDMI input of your display such as an HDTV.
- ④ **IR out:** Connect the IR Blaster cable included in the package for IR signal transmission. Place the IR blaster in direct line-of-sight of the equipment to be controlled.
- ⑤ **Power LED:** This LED will illuminate when the device is connected with power supply.
- ⑥ **CAT:** Connect the CAT output of the transmitter with the CAT input of the receiver with CAT5E/6 cable.
- ⑦ **Link LED:** This LED will illuminate when the device is connected to HDMI source.
- ⑧ **DC 5V:** Connect from 5V DC power supply into the unit and connect the adaptor to an AC outlet.




5.2 Receiver unit

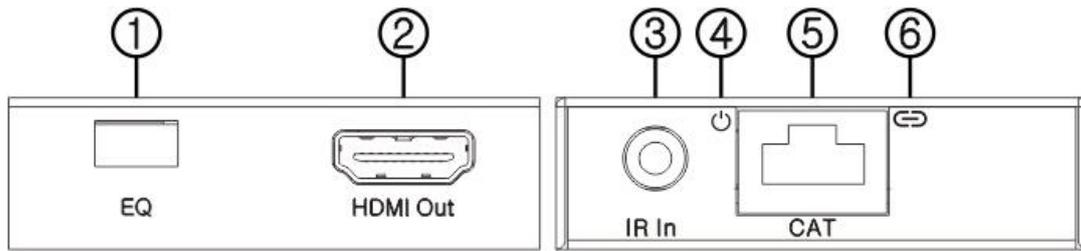


- ① **EQ switcher:** HDMI Receiver equalizer switcher.
- ② **HDMI out:** This slot is to connect the HDMI input port of your display such as an HDTV.
- ③ **IR in:** Connect to the IR Receiver for IR signal reception. Ensure that remote being used is within the direct line-of-sight of the IR receiver.
- ④ **Power LED:** This LED will illuminate when the device is connected with power supply.
- ⑤ **CAT:** Connect the CAT input of the receiver with the CAT output of the transmitter with CAT5E/6 cable.
- ⑥ **Lock LED:** This LED will illuminate when the HDMI signal from the transmitter is stable.

5.3 RX Equalizer distance adjust

If you see flickering or blinking image on the display, adjust the EQ switch to improve the cable skew. MAX stands for the strongest HDMI signal level for the longest possible transmission length while MIN stands for the weakest HDMI signal level for short transmission length. Adjust the signal level from MIN to MAX until desired video quality is displayed.

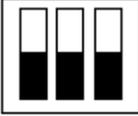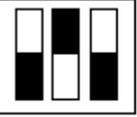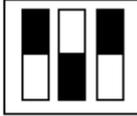Recommended EQ setting		
Position		Cable Length
 0  1		under 15m (49.5ft)
 2  3		15-30m (49.5 ft - 99ft)
 4  5		30-40m (99ft - 132ft)
 6  7		40-50m (132ft – 164ft)

6. Connection diagram

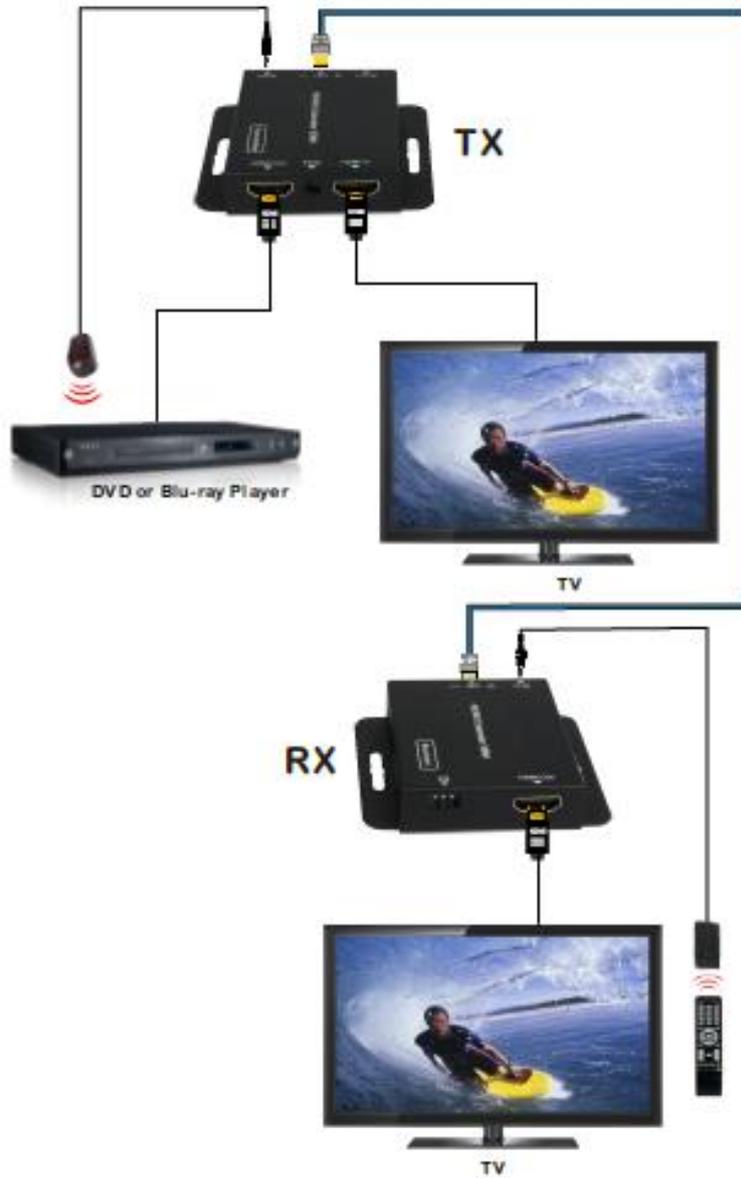

7. Connect and Operate

1. Connect a source such as a Blu-Ray Player, game console, A/V Receiver, Cable or Satellite Receiver, etc. to the HDMI input on the Transmitting unit.

2. Connect a display such as an HDTV or HD Projector to the HDMI output on the Receiving unit.

3. Connect a single Category 5e/6 up to 164ft/50m to the output of the Transmitting unit, and the other end to the input of the Receiving unit.

4. For power, plug both the Transmitting unit and Receiving unit with the included power supplies.

5. Power on each device in the same sequence (receiver and transmitter will already be powered when either unit is plugged in.)

At this point the display connected should display the source signal connected to the extender set. If no signal is being displayed, check the receiver EQ switcher. If a display is having difficulty receiving a signal, see EDID section and perform EDID learning or access the display's menu and adjust the resolution (lowest to highest until signal is displayed). A 24 Hz vertical refresh rate may work better than 60 Hz or higher. Use the source remote at the receiver emitter to test IR functionality. If the IR remote function is not responding, check the emitters to ensure they are placed correctly and are plugged into the correct IR jacks on the Extender set receiving and transmitting units.

8. Wideband IR (30KHz---60KHz) introduction



IR BLASTER (TX)


To control the source: Plug IR Blaster into IR TX port of transmitter unit; place blaster in front of the IR eye of the source.

To control the display: Plug IR Blaster into IR TX port of receiver unit; place blaster in front of the IR eye of the display.

IR RECEIVER (RX)

To control the source: Plug IR Receiver into IR RX port of receiver unit; place receiver at or near display.

To control the display: Plug IR Receiver into IR RX port of transmitter unit; place receiver in position where it is able to receive remote signals.

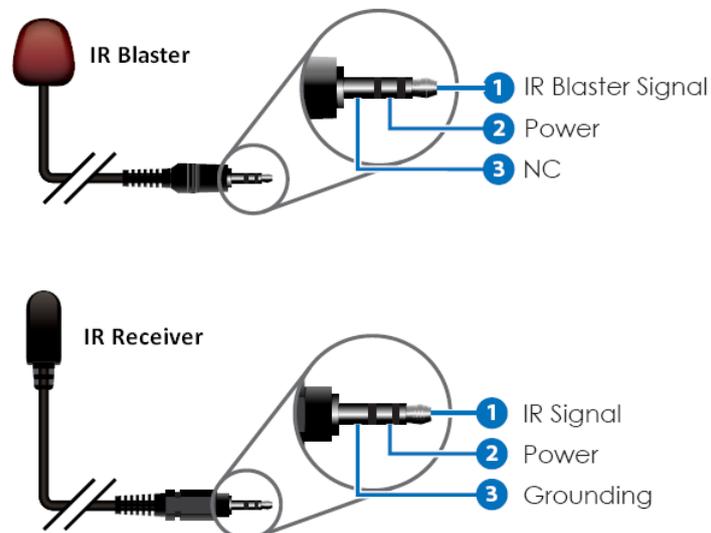

9. Mission Statement

BZB Gear manifests from the competitive nature of the audiovisual industry to innovate while keeping the customer in mind. AV solutions can cost a pretty penny, and new technology only adds to it. We believe everyone deserves to see, hear, and feel the advancements made in today's AV world without having to break the bank. BZB Gear is the solution for small to medium-sized applications requiring the latest professional products in AV.

We live in a DIY era where resources are abundant on the internet. With that in mind, our team offers system design consultation and expert tech support seven days a week for the products in our BZB Gear catalog. You'll notice comparably lower prices with BZB Gear solutions, but the quality of the products is on par with the top brands in the industry. The unparalleled support from our team is our way of showing we care for every one of our customers. Whether you're an integrator, home theater enthusiast, or a do-it-yourselfer, BZB Gear offers the solutions to allow you to focus on your project and not your budget.

10. Warranty Information

BZB Gear | Second Year Assurance

BZB Gear wants to assure you peace of mind. We're so confident in the quality of our products that along with the manufacturer's one-year limited warranty, we are offering free second-year warranty coverage upon registration*!

Taking advantage of this program is simple, just follow the steps below:

1. Register your product within 90 days of purchase by visiting BZBGear.com/warranty.
2. Complete the registration form. Provide all necessary proof of purchase details, including serial number and a copy of your sales receipt.

For questions, please call 1.888.660.2962 or email support@bzbgear.com.

For complete warranty information, please visit BZBGear.com/warranty or scan the QR code below.



*Terms and conditions apply. Registration is required.