

3G-SDI Fiber Optic Extender

EXT-3GSDI-FO-141 USER MANUAL



www.gefen.com

ASKING FOR ASSISTANCE

Technical Support:

Telephone (818) 772-9100

(800) 545-6900

Fax (818) 772-9120

Technical Support Hours:

8:00 AM to 5:00 PM PST Monday thru Friday.

Write To:

Gefen LLC c/o Customer Service 20600 Nordhoff St Chatsworth, CA 91311

www.gefen.com support@gefen.com

Notice

Gefen LLC reserves the right to make changes in the hardware, packaging and any accompanying documentation without prior written notice.

3G-SDI Fiber Optic Extender is a trademark of Gefen LLC

All trademarks are the property of their respective owners.

CONTENTS

1	Introduction
2	Operation Notes
3	Features
4	Connector Layout
5	Connector Descriptions
6	Connecting & Operating The 3G-SDI Fiber Optic Extender
7	Troubleshooting
8	Specifications
9	Warranty

INTRODUCTION

Congratulations on your purchase of the 3G-SDI Fiber Optic Extender. Your complete satisfaction is very important to us.

Gefen

Gefen delivers innovative, progressive computer and electronics add-on solutions that harness integration, extension, distribution and conversion technologies. Gefen's reliable, plug-and-play products supplement cross-platform computer systems, professional audio/video environments and HDTV systems of all sizes with hard-working solutions that are easy to implement and simple to operate.

The Gefen 3G-SDI Fiber Optic Extender

The Gefen 3G-SDI Fiber Optic Extender is a miniature digital video data transport system over fiber optic cable supporting 1080p for 3G-SDI and HD-SDI. It converts a one-channel SMPTE-424M 3G-SDI, SMPTE-292M HD, or SMPTE-259M serial digital video signal over extended distances up to 12 miles (20 km) over either single-mode or multi-mode fiber optic cable.

How It Works

The Sender receives the SDI input signal and converts the SMPTE-424M / 292M / 259M SDI signals to optical data. The Receiver unit collects the optical data from the fiber cable and converts it to an SDI signal.

OPERATION NOTES

READ THESE NOTES BEFORE INSTALLING OR OPERATING THE 3G-SDI FIBER OPTIC EXTENDER

- The Gefen 3G-SDI Fiber Optic Extender will connect two 3G-SDI devices using an ST-terminated fiber cable to a distance of up to 12 miles (20 km.) The input has automatic equalization and the output is automatically reclocked.
- The use of an intermediate cable or adapter is not recommended. Additional coupling devices may deteriorate the signal transmission.

FEATURES

Features


- Extends 3G-SDI up to 12 miles (20km)
- Transports Multi-rate HD-SDI Digital Video over 1 Fiber
- Supports SMPTE-424M (3G-SDI), SMPTE-292M (HD-SDI), or SMPTE-259M (SDI) specifications.
- Automatic Input Equalization
- Output Clock Recovery
- Latch-Locking Power Connector
- HD-SDI BNC input connector and ST terminated fiber optical connector
- Robust metal die-casting enclosure for harsh environments

Package Includes

- (1) EXT-3GSDI-FO-141S
- (1) EXT-3GSDI-FO-141R
- (1) Users manual
- (2) 5V Power Supplies

SMPTE Standards Table (Showing Bit Rates for SDI):

Standard	Name	Bit Rates	Example Video Formats
SMPTE 424M	3G-SDI	2.970 Gbit/s	1080p
SMPTE 292M	HD-SDI	1.485 Gbit/s	720p, 1080i
SMPTE 259M	SD-SDI	270 Mbit/s, 360 Mbit/s 143 Mbit/s and 177 Mbit/s	480i, 576i

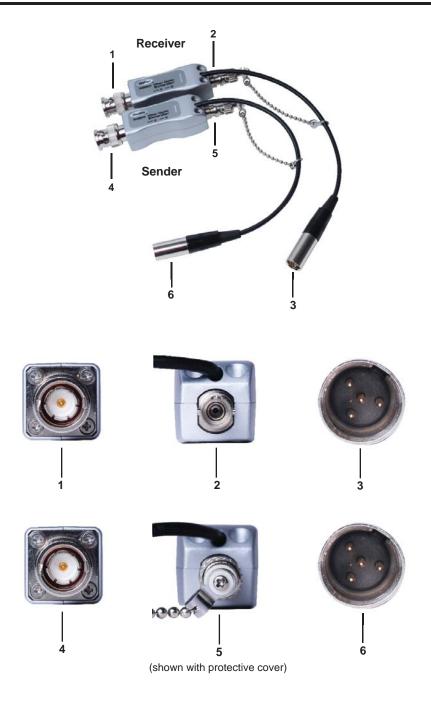

CONNECTOR DESCRIPTIONS

1 3G-SDI BNC Output

Connect the Receiver to the input of the SDI display.

2 ST Fiber Connector Input

Connect the ST-fiber cable to this connector.

3 5V DC Power Supply Connector (Receiver)

Connect this cable to the included 5V DC power supply.

4 3G-SDI BNC Input

Connect the Sender to the output of the SDI source.

5 ST Fiber Connector Output

Connect the ST-fiber cable to this connector.

6 5V DC Power Supply Connector (Sender)


Connect this cable to the included 5V DC power supply.

CONNECTING & OPERATING THE 3G-SDI FIBER OPTIC EXTENDER

How to Connect the 3G-SDI Fiber Optic Extender

- Connect the Sender of the Gefen 3G-SDI Fiber Optic Extender to the 3G-SDI source equipment via the BNC connector.
- Remove the locking protective cover from the fiber connector of the Sender and connect one end of the fiber cable to the ST connector of the Sender.
- Remove the locking protective cover from the fiber connector of the Receiver and connect the other end of the fiber cable to the ST connector of the Receiver.
- 4. Connect the BNC output connector to the SDI display device.
- Connect the included 5V DC power supplies to both the Sender and Receiver.

EXT-3GSDI-FO-141 Connection Diagram

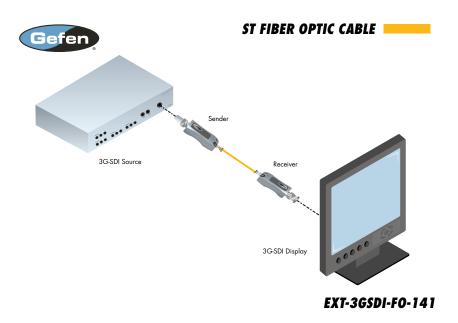

TROUBLESHOOTING

No picture / display shows a blank screen

- Ensure that all jacks that are used by the 5V DC power supplies are firmly connected.
- Ensure that the SDI connector is firmly plugged in to the SDI source and SDI display. Ensure that the Sender and Receiver module parts are connected to the SDI source and SDI display, respectively.
- Check if the SDI source and SDI display are powered on and properly booted.
- Reset the system by unplugging and reconecting the Sender SDI module or Receiver SDI module. Re-boot the system while connecting the 3G-SDI Fiber Optic Extender.
- Verify that the fiber cables are not damaged.

Picture is distorted or contains noise

Verify the quality of the SDI source and check the length of the fiber cable.
 The 3G-SDI Fiber Optic Extender will work up to a distance of 12 miles (20km) using single-mode fiber.

SPECIFICATIONS

Input Impedance75 Ohm				
Signal Format:				
SMPTE-424M (Bit rate: 2.970 Gbit/s)3G/HD-SDI				
SMPTE-292M (Bit rate: 1.485 Gbit/s)HD-SDI				
SMPTE-259M (Bit rate: 270 Mbit/s, 360 Mbit/s, 143 Mbit/s, 177 Mbit /s)SD				
Recommended Fiber Optic Cable:				
Single-mode fiber with 1310, 1550nm of bandwidth and ST-terminated connector				
Data RateUp to 3 Gbp/s on single link 3G-SD				
Signal Level800mVp-p +/- 50m				
Optical Fiber TypesST (Multi mode and Single mode)				
Number of Fibers1				
Output ConnectorBNC Female				
DistanceUp to 12 miles (20km) using single-mode fiber				
Power Supply5V DC @ 0.5 A				
Power Budget16dB				
Operating Temperature20 to + 80C				
Dimensions				
Shipping Weight4.5 lbs				

WARRANTY

Gefen warrants the equipment it manufactures to be free from defects in material and workmanship.

If equipment fails because of such defects and Gefen is notified within two (2) years from the date of shipment, Gefen will, at its option, repair or replace the equipment, provided that the equipment has not been subjected to mechanical, electrical, or other abuse or modifications. Equipment that fails under conditions other than those covered will be repaired at the current price of parts and labor in effect at the time of repair. Such repairs are warranted for ninety (90) days from the day of reshipment to the Buyer.

This warranty is in lieu of all other warranties expressed or implied, including without limitation, any implied warranty or merchantability or fitness for any particular purpose, all of which are expressly disclaimed.

- 1. Proof of sale may be required in order to claim warranty.
- Customers outside the US are responsible for shipping charges to and from Gefen.
- Copper cables are limited to a 30 day warranty and cables must be in their original condition.

The information in this manual has been carefully checked and is believed to be accurate. However, Gefen assumes no responsibility for any inaccuracies that may be contained in this manual. In no event will Gefen be liable for direct, indirect, special, incidental, or consequential damages resulting from any defect or omission in this manual, even if advised of the possibility of such damages. The technical information contained herein regarding the features and specifications is subject to change without notice.

For the latest warranty coverage information, please visit Gefen's Warranty web page at http://www.gefen.com/kvm/aboutus/warranty.jsp

PRODUCT REGISTRATION

Please register your product online by visiting Gefen's web site at http://www.gefen.com/kvm/Registry/Registration.jsp

20600 Nordhoff St., Chatsworth CA 91311 1-800-545-6900 818-772-9100 fax: 818-772-9120

www.gefen.com support@gefen.com











