



## INSTALLATION AND OPERATION MANUAL


# CNMC[2,4]SFP[POE][/M] Series 10/100/1000MBPS ETHERNET MEDIA CONVERTERS WITH 100FX AND 1000FX SUPPORT

# This manual serves the following ComNet Model Numbers:


CNMCSFP/M
CNMCSFPPOE/M
CNMCSFP
CNMC2SFP
CNMC4SFP

The ComNet CNMCSFP electrical-to-optical Ethernet media converters accept a 10/100 or 1000 Mbps electrical input and converts this to a 100 or 1000 Mbps optical output (selected by a dip switch) and the 100/1000 Mbps optical input back to the 10/100/1000 Mbps electrical output. "Auto-Negotiating" is supported on the copper interface side. These devices use either one or two optical fibers, depending upon the selection of sold-separately SFP† optical module. A PoE model, the CNMCSFPPOE/M meets the IEE802.3at standard and provides 30 watts of PoE+power. The series consists of a small-size single channel model, CNMCSFP/M; a ComFit standard size, single-channel model, CNMCSFP; a dual channel model, CNMC2SFP; and a quad channel model, the CNMC4SFP.


# FIGURE 1 - CNMCSFP/M SMALL SIZE UNIT

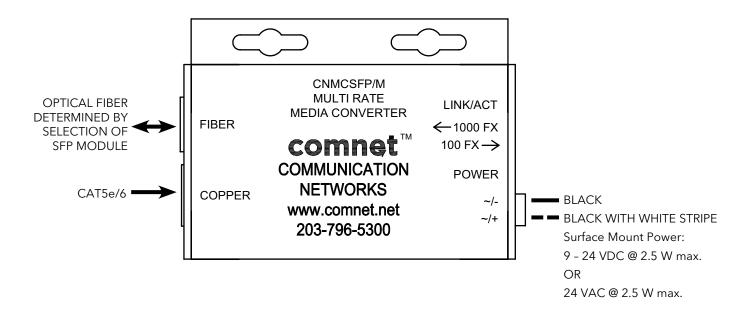

## FIGURE 2 - CNMCSFP/M SMALL SIZE UNIT

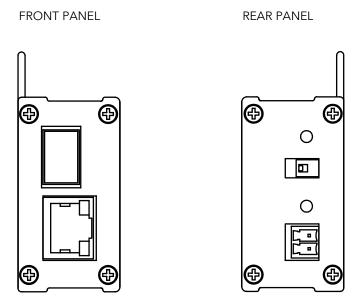

# FIGURE 3 - CNMCSFPPOE/M SMALL SIZE UNIT

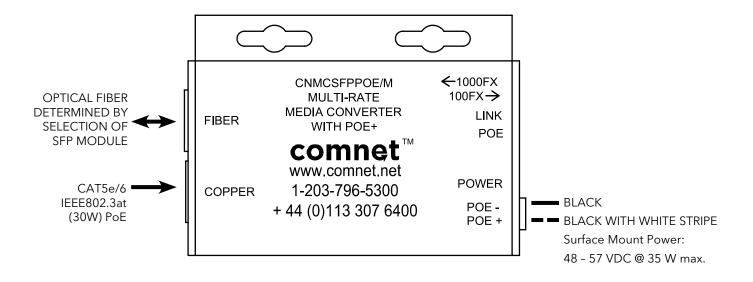

#### FIGURE 4 - CNMCSFPPOE/M SMALL SIZE UNIT



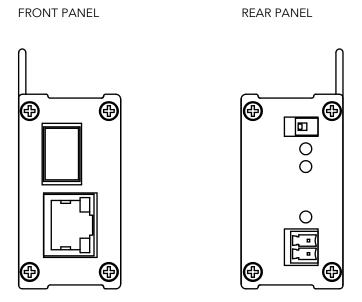



FIGURE 5 - CNMCSFP COMFIT UNIT

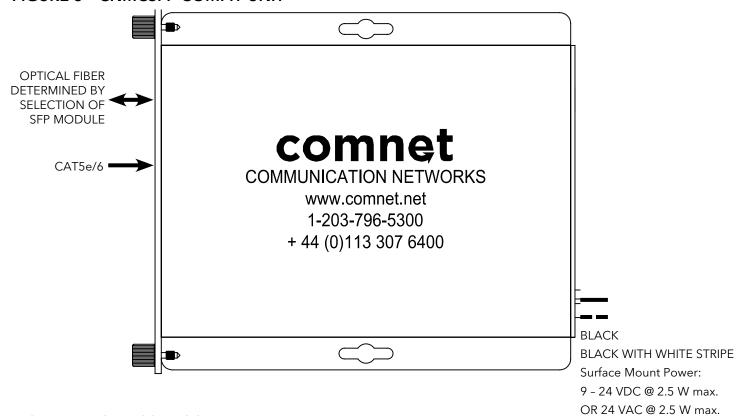

# FIGURE 6 - CNMCSFP COMFIT UNIT


FRONT PANEL REAR PANEL

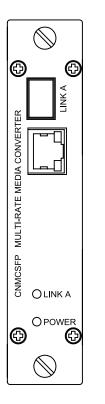

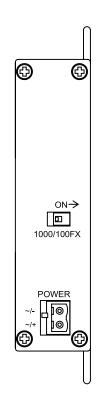


Rack power: Supplied by Rack


## FIGURE 7 - CNMC2SFP COMFIT UNIT

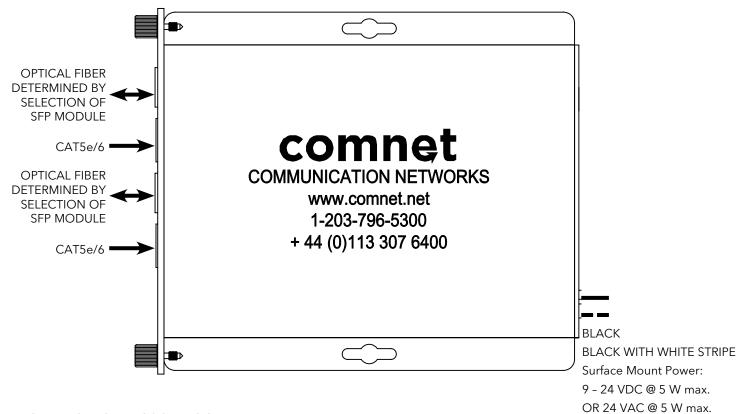

#### FIGURE 8 - CNMC2SFP COMFIT UNIT


FRONT PANEL REAR PANEL

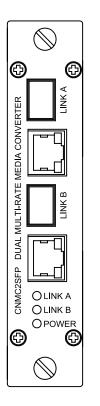

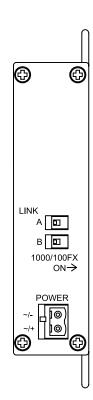


Rack power: Supplied by Rack

# FIGURE 9 - CNMC4SFP COMFIT UNIT

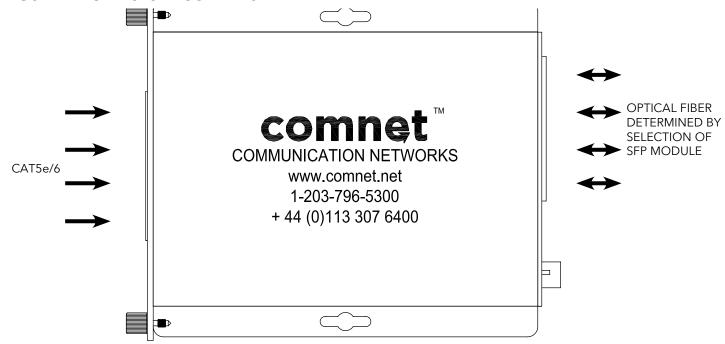

## FIGURE 10 - CNMC2SFP COMFIT UNIT

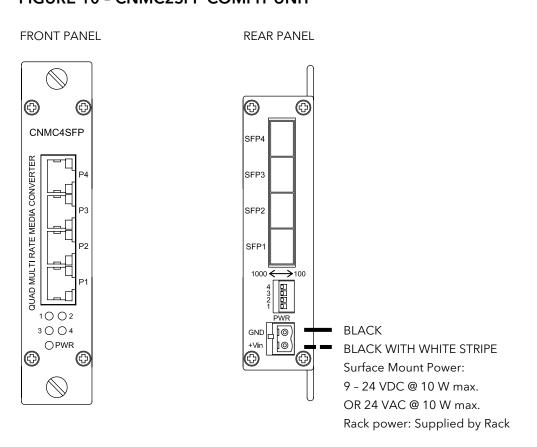

## FIGURE 11 - DIP SWITCH SETTINGS

| Position | Resulting Data Rate                         |  |  |
|----------|---|--|--|
| OFF      | 1000FX (requires use of Gigabit SFP module) |  |  |
| ON       | 100FX                                       |  |  |


NOTE: Select the Data Rate before powering on the unit. After a Data Rate change, re-cycle power to the unit.

## **FIGURE 12 - LED INDICATORS**

|        | LINK                                       | COPPER                                     | POWER             |
|--------|--|--|-------------------|
| GREEN  | Solid – No Activity<br>Blinking – Activity | Solid – No Activity<br>Blinking – Activity | Unit powered up   |
| YELLOW | -  | Highest Data Rate                          | -                 |
| OFF    | No Link                                    | No Link                                    | Unit powered down |

## FIGURE 13 - POSSIBLE ETHERNET CONFIGURATION

Ethernet IEEE 802.3 Network Element determined by user.

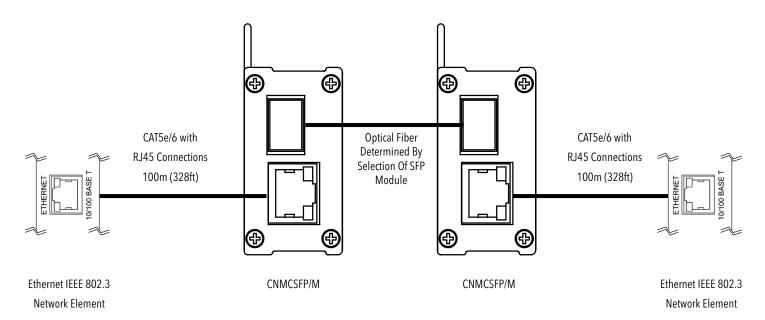

#### MECHANICAL INSTALLATION INSTRUCTIONS

#### INSTALLATION CONSIDERATIONS

This fiber-optic link is supplied as a Standalone/Rack module. Units should be installed in dry locations protected from extremes of temperature and humidity.

#### C1-US, C1-EU, C1-AU OR C1-CH CARD CAGE RACKS

**CAUTION:** Although the units are hot-swappable and may be installed without turning power off to the rack, ComNet recommends that the power supply be turned off and that the rack power supply is disconnected from any power source. Note: Remove electrical connector before installing in card cage rack.

1. Make sure that the card is oriented right side up, and slide it into the card guides in the rack until the edge connector at the back of the card seats in the corresponding slot in the rack's connector panel. Seating may require thumb pressure on the top and bottom of the card's front panel.

**CAUTION:** Take care not to press on any of the LEDs.

2. Tighten the two thumb screws on the card until the front panel of the card is seated against the front of the rack.

**WARNING:** Unit is to be used with a Listed Class 2 power supply.


#### **IMPORTANT SAFEGUARDS:**

- A) Elevated Operating Ambient If installed in a closed or multi-unit rack assembly, the operating ambient temperature of the rack environment may be greater than room ambient. Therefore, consideration should be given to installing the equipment in an environment compatible with the maximum ambient temperature (Tma) specified by the manufacturer.
- B) Reduced Air Flow Installation of the equipment in a rack should be such that the amount of air flow required for safe operation of the equipment is not compromised.




#### FIGURE A

Dimensions are for a ComNet™ small size module

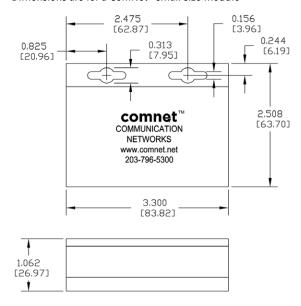

# **FIGURE B**Dimensions are for a standard ComNet™ one slot module

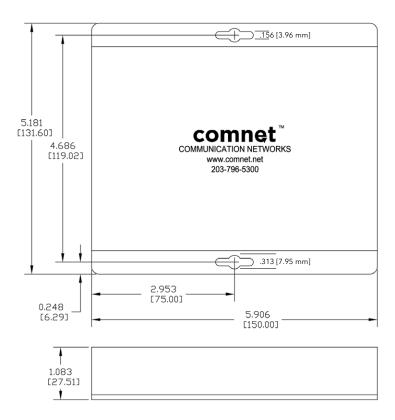



3 CORPORATE DRIVE | DANBURY, CT 06810 | USA

T: 203.796.5300 | F: 203.796.5303 | TECH SUPPORT: 1.888.678.9427 | INFO@COMNET.NET

8 TURNBERRY PARK ROAD | GILDERSOME | MORLEY | LEEDS, UK LS27 7LE T: +44 (0)113 307 6400 | F: +44 (0)113 253 7462 | INFO-EUROPE@COMNET.NET